



TOBI 657573 Robot Smartwatch User Guide

[Home](#) » [TOBI](#) » TOBI 657573 Robot Smartwatch User Guide 

Contents

- 1 TOBI 657573 Robot Smartwatch
- 2 Product Overview
- 3 CONTENTS
- 4 SPECIFICATIONS
- 5 MICRO-USB PORT
- 6 BATTERY CHARGING
- 7 SYSTEM REQUIREMENTS
- 8 STARTING UP TOBI™2 ROBOT SMARTWATCH
- 9 WAKING UP TOBI™2 ROBOT SMARTWATCH
- 10 TRANSFERRING FILES FROM TOBI™2
- 11 WEARING TOBI™2 ROBOT SMARTWATCH
- 12 HOME BUTTON
- 13 STATS
- 14 SETTINGS MENU
- 15 TROUBLESHOOTING
- 16 CARE AND MAINTENANCE
- 17 BATTERY DISPOSAL
- 18 FCC COMPLIANCE
- 19 LIMITED WARRANTY
- 20 Documents / Resources
 - 20.1 References
- 21 Related Posts

 
TOBI

TOBI 657573 Robot Smartwatch



Your robot smartwatch can do so much! TobitTM2 has moving arms and legs with over 100 expressions and tons of interactivity! Take photos and film P.O.V. videos with dual cameras, track steps with the built-in pedometer, select a cool watch face to display, and play a variety of fun games! TobitTM2 is the only robot smartwatch that Comes to Life Before Your EyesTM!

Product Overview

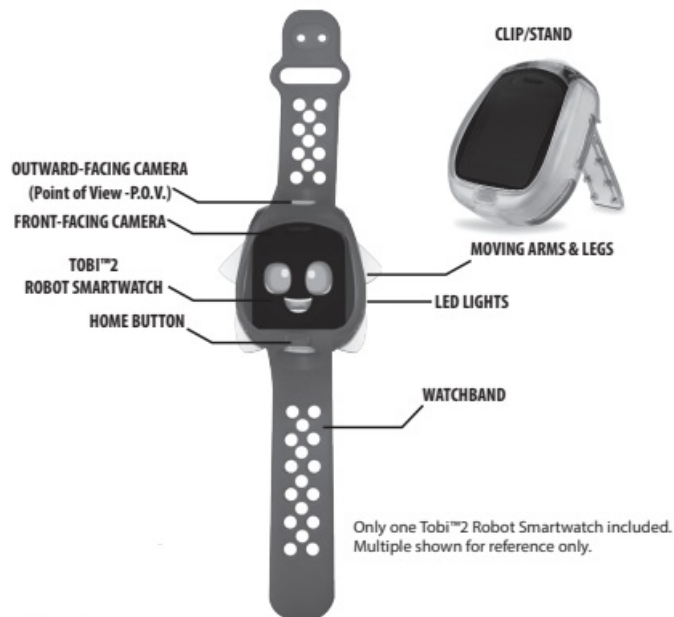

CONTENTS

1. TobitTM2 Robot Smartwatch
2. Watchband
3. Clip/Stand
4. Micro-USB Cable

To turn on the device, press and hold the home button for about 5 seconds until the screen turns on and a

sound plays. Prior to giving this product to a child, remove all packaging material including plastic covers, tape, ties, tags and packaging locks. The plastic cover over the smartwatch surface is packaging material included for protective purposes and should be removed prior to use.

SPECIFICATIONS

Display	Curved 1.54" 240 x 240
Supported Languages	English, Spanish, French, Dutch, German, Italian, Polish
Photo Resolution	VGA (640 x 480 pixels)
Video Resolution	QVGA 14fps (320 x 240 pixels)
Focus Range	3 ft. (1m)
Internal Memory	512MB Some used for program data. Memory available for storage is less.
Storage Capacity	Photos: 3000 <u>OR</u> Video: 30 min. Storage capacity is approximate.
File Format	Photo: JPEG Video: AVI
Connectivity	Wireless Connectivity: 3.0 & BLE + EDT Micro-USB Cable: 2.0 HS (Included for connecting to computer)
Battery	Lithium Polymer battery (non-replaceable)
Battery Life	Low Usage: 5 Days Typical Usage: 2 Days Heavy Usage: 8 Hours
Optimum Operating and Charging Temperature	14°F (-10°C) ~ 140°F (60°C)
Frequency Band(s)	2402MHz-2480MHz
Max. Radio Frequency Power Transmitted	-0.5dBm

MICRO-USB PORT

NOTE: An adult must charge the device and connect to a computer.

Use the included Micro-USB Cable to connect the device to your computer to transfer photos and videos, charge the device and update the firmware.

 
1. Open the cover over the Micro-USB port on TobitTM2.
2. Insert the Micro-USB side of the cable into the port.
3. Insert the large USB end into a USB port on your computer.

BATTERY CHARGING

Prior to use, it is recommended that you fully charge Tobi™2 for optimal performance.

NOTE: The device should be OFF prior to charging. To power OFF, hold the home button for about 5 seconds, until a sound plays and the device shuts off.

1. Remove the watchband or clip/stand from around Tobi™2.
2. Insert the larger end of the Micro-USB cable into a USB port on your computer.
3. Lift open the cover over the Micro-USB port on Tobi™2 and insert the Micro-USB cable into the port.
4. A battery symbol will turn green on the screen once the device is fully charged. Remove the device from the Micro-USB cable. Do not over charge the battery.
5. You can now turn on the device, add your favorite accessory and begin playing.

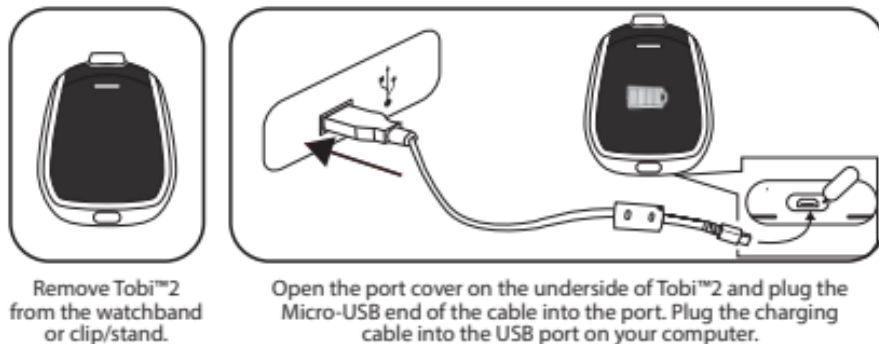

NOTE:

See page 24 for more BATTERY INFORMATION.

SYSTEM REQUIREMENTS

Compatible systems include Microsoft® Windows XP, Windows® 7, Windows® 8, and Windows® 10 Operating System or a Macintosh Computer with macOS X version 10.13 and 10.14. Other operating systems may be compatible or eligible for upgrade to a compatible system. USB port required.

STARTING UP TOBI™2 ROBOT SMARTWATCH

To turn on the device, press and hold the home button on the front of the device for about 5 seconds until the screen turns on and a sound plays. When you first start the smartwatch, ensure the firmware is up-to-date. Make sure the device is fully charged (see page 4). To begin, you'll be prompted to set the language, date format, time, and name of the device. For more information on how to set these features, see SETTINGS on pages 15-16.

FIRMWARE UPDATE

Before beginning, it is important to check for any available firmware updates so that Tobi™2 is operating optimally. To update the firmware on your device:

1. On your computer, visit WWW.LITTLETIKES.COM/TOBI2 and download the Firmware Installer.
2. Turn off Tobi™2. To turn off the device, press and hold the home button on the front of the device for about 5 seconds until a sound plays and the screen turns off.
3. Follow the steps on page 4 to connect the Micro-USB Cable to Tobi™2 and your computer.
4. A charging icon will show on the device's touchscreen. Quickly tap the screen 5 times to unlock it. Then, an unlock icon will appear on the device's touchscreen.
5. On the Firmware Installer, click on Firmware Update. A progress bar will appear on your computer's screen, or, if your watch is up-to-date, it will say "Firmware is up to date." If it is up-to-date, properly eject the device from your computer.

6. Once the progress bar on your computer shows it is complete, properly eject the device from your computer. Then, remove the Micro-USB Cable.
7. Turn on Tobi™2. To turn on the device, press and hold the home button for about 5 seconds. A firmware update screen will be displayed on the device. Press the check mark and wait for the progress bar to finish loading to complete the firmware update.
8. The Parental Control screen will be displayed after the firmware has been updated. Follow the steps on page 17 to create a passcode, control wireless connectivity and set a screentime limit.

NOTE: After Tobi™2 cycles back on, it is recommended you turn the device off and back on again to confirm the update was successful.

WAKING UP TOBI™2 ROBOT SMARTWATCH

After about 25 seconds of inactivity, the touchscreen will go dark.

if you're wearing Tobi™2 Robot Smartwatch on your wrist, raise your arm and turn the device toward you to wake it up and light up the touchscreen. If Tobi™2 is in the clip/stand, lift Tobi™2 to light up the touchscreen. You can also press the home button once to wake up the device.

 
WIRELESS CONNECTIVITY

Your Tobi™2 Robot Smartwatch can connect to other Tobi™2 Robot Smartwatches using wireless connectivity. To connect, open the Menu Mode and select the wireless connectivity icon in SETTINGS. Make sure wireless connectivity is toggled to the ON position (button turns blue). Now, you can share photos and message with other Tobi™2 users.

Users must be close by to connect over wireless connectivity. For example, about 50 ft. (15m) or less unobstructed. The device must also have sufficient battery power to connect wirelessly and share photos and messages. NOTE: Wireless connectivity is only compatible with other Tobi™2 smartwatches, and will not connect to other devices or other Tobi™ versions. Users receiving messages must accept the message from their device before they can view it.

USING THE DUAL CAMERAS

There are two cameras on the Tobi™2 Robot Smartwatch, a front-facing camera on the smartwatch's surface and an outward-facing (P.O.V.) camera on the top of the device. Open the Camera or Video applications to use the camera. View your images and videos in their respective galleries on your device. For more information, see pages 18-19.

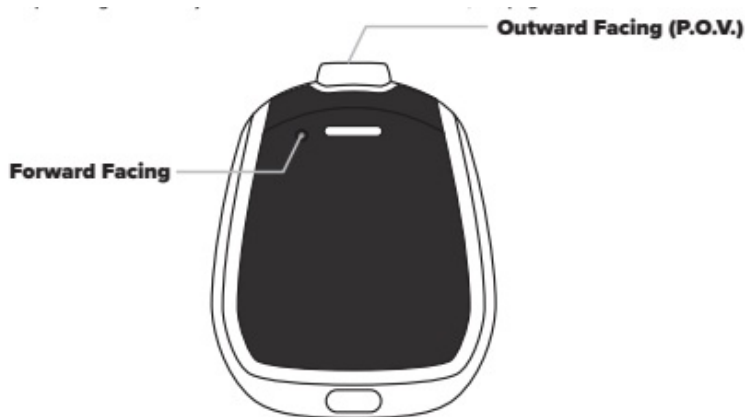

NOTE:

For your security, the camera and microphone on your device will be disabled when connecting to a computer with the Micro-USB Cable, as the device must be off. Properly eject the device from your computer, unplug the Micro-USB cable, and turn the device on before using these features.

TRANSFERRING FILES FROM TOBI™2

The device should be OFF prior to transferring files. To power OFF, hold the home button for about 5 seconds until a sound plays and the screen turns off. Plug the device into your computer using the included Micro-USB cable, and follow the instructions on page 4. On your computer, you will see a removable drive called TOBI2. Click on this drive to transfer files from the device to your computer using the folders called PHOTOS and VIDEOS. Copy and paste the files in these folders to the desired location on your computer. TIP: Photo and video files will not be deleted from Tobi™2 until you manually delete them on the device by pressing the trash can icon in the photo and video apps. You cannot load photos or videos from other devices onto Tobi™2, as the file types may not be compatible.

NOTE: Once the device is connected to your computer, do not disconnect the smartwatch or the cable while files are transferring. Once your smartwatch completes the transfer, properly eject the device from your computer. Then, physically disconnect the cable and the smartwatch.

WEARING TOBI™2 ROBOT SMARTWATCH

As with all wearable devices, some users may have skin sensitivities that are irritated by wearing the watchband for extended periods. Irritation may occur from moisture, sweat, soap or other irritants that get caught between the band and the skin. If irritation occurs, remove the watchband. It is not recommended to wear the watchband to bed at night or for extended periods. Always keep your wrist and the watchband dry and clean. To clean the band, wipe it off regularly with a damp cloth and dry thoroughly.

 
Avoid wearing the watchband too tightly, which may also contribute to skin irritation. The band should not be too loose so that it does not stay in place properly, but it should also not be so tight that is uncomfortable to wear. If you notice any redness or swelling or other skin irritation, remove the watchband and consult a doctor if necessary.

If you do find that your skin is sensitive to the watchband, it is recommended you use the included clip/stand to play with Tobi™2 Robot Smartwatch.

USING THE CLIP/STAND

In addition to wearing Tobi™2 Robot Smartwatch on your wrist, you can use the included clip/stand to attach Tobi™2 to your clothing or use it as a display stand on a table. Tobi™2 will still count your activity, steps, and motion if you clip it to your clothing, but will not track activity if used as a stand. For the most accurate activity tracking, wear the device on your wrist or clipped onto your waistband.

TIP: For both the watchband and the clip/stand, make sure Tobi's arms and legs are able to move in and out of the casing. Ensure a proper fit before use.

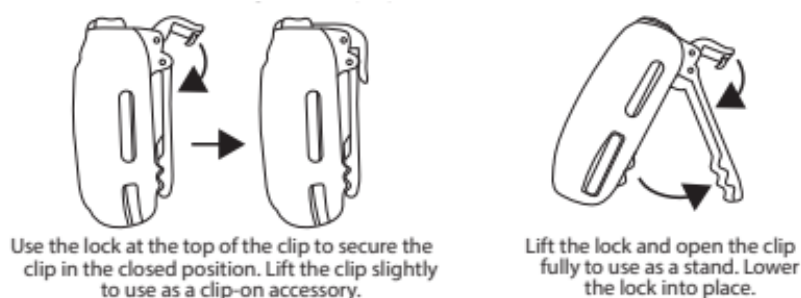


HOME BUTTON

Press and hold the home button on the front of the smartwatch for about 5 seconds to turn it on.

Once the smartwatch is turned on, press the home button once to rotate the display between **TOBI MODE**, **MENU MODE** and **WATCH SCREEN MODE**.

 - From TOBI MODE, press the home button to switch to MENU MODE.
- From MENU MODE, press the home button to switch to WATCH SCREEN MODE.
- From WATCH SCREEN MODE press the home button to switch to TOBI MODE.

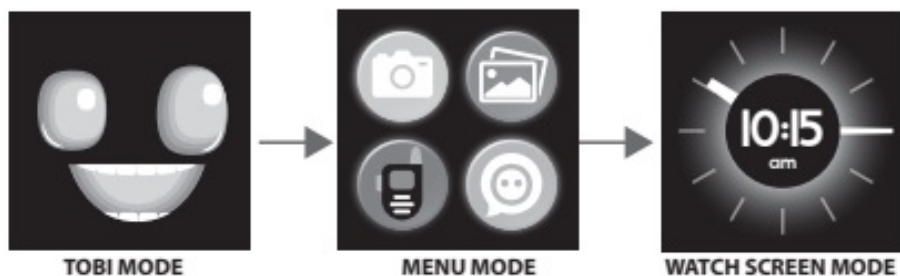

QUICK MENU VIEW

Swipe down on the touchscreen to quickly see the volume, time, wireless connectivity, daily steps, and battery charge level. Swipe up to make this quick view menu disappear or it will disappear after a few seconds. Tap on the volume or wireless connectivity icons to make changes to those settings.

NOTE: The quick view menu will not appear by swiping down on the screen while Tobi™ is listening to you in Tobi™ Mode.

TOBI™ MODE

Press the home button on the front of the smartwatch to rotate the display to TOBI™ MODE. Tobi™2 Robot Smartwatch does so many fun things and has over 100 expressions!

1. When you touch the screen in Tobi Mode, Tobi's arms and legs will move!
2. Shake Tobi around to make Tobi dizzy!
3. Leave Tobi alone and watch Tobi yawn or get annoyed.
4. Swipe right to tickle Tobi and make Tobi giggle.
5. Swipe left to make Tobi annoyed!
6. Swipe up to open Nurture Menu. Interact with Tobi™ with different features.
 1. FEED TOBI™: Click on the food item and press the check mark to feed your Tobi™.
 2. Tobi™ Nurture: Click on an icon and press the check mark to interact with Tobi™.
 3. Tobi™ World: Decorate rooms. See page 14 for more information.
 4. Tobi™ Talk: Try saying, "Hi Tobi," or asking a question to see Tobi's response. Swipe down, left, or right on Tobi's face to disable the listening mode.
7. Press and hold Tobi's mouth to select a treat to feed Tobi! Select a food by pressing on the treat. Then, press the green check to feed it to Tobi.
8. Sometimes Tobi will suggest a game to play or an app to use with a speech bubble icon. Click on the icon to open the app Tobi suggests. This will also boost Tobi's happiness on the stat bar (see STATS on page 14).



 
PLUS SO MUCH MORE! What else can Tobi™2 Robot Smartwatch do?

MENU MODE

Select from a variety of action-packed games, activities, and dual P.O.V. and selfie cameras! Press the icons on the screen to open up the sub-menus (indicated by an arrow next to the icon).

To exit a menu selection, press the home button.

There are four main menu screens, and three sub-menus for games, fitness games/tracking, and settings. Swipe left or right on the smartwatch to navigate between the four menu screens.

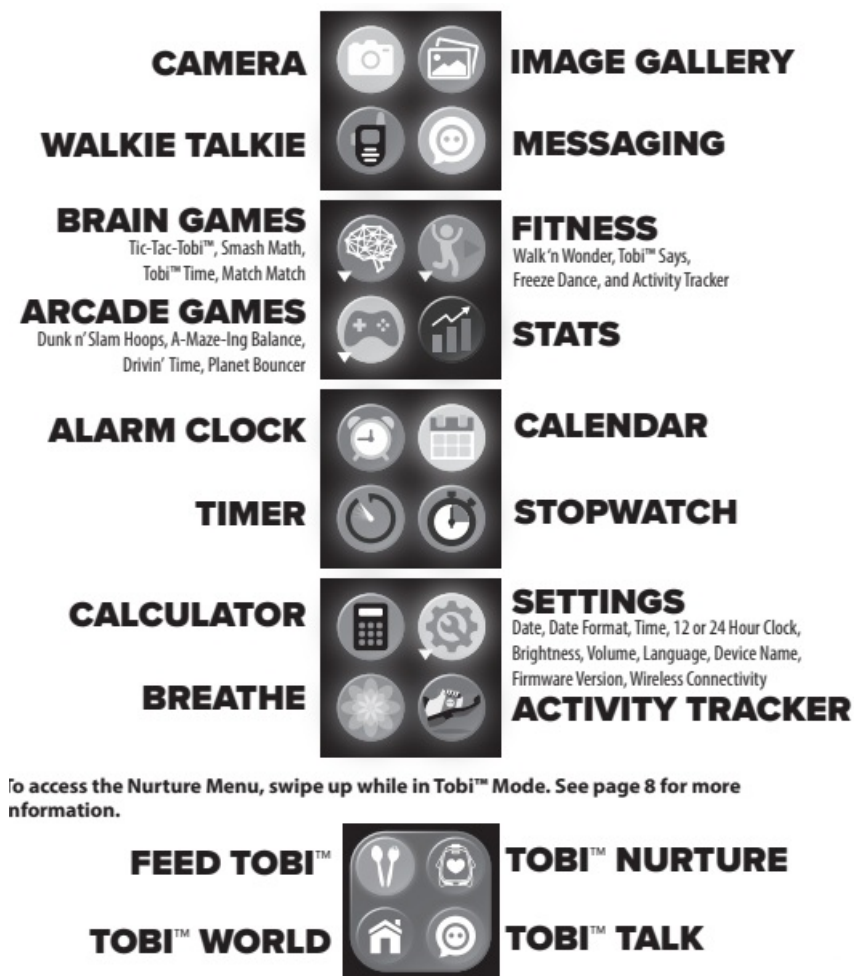

BRAIN GAMES MENU

• Tic-Tac-Tobi™:

- Play a game of Tic-Tac-Toe against Tobi™.
- Pick a section to place your X. Three X marks in a row wins! Three Tobi™ icons in a row mean Tobi™ won that round.
- Earn a coin for each game you win!
- See how many games you have won and how many games Tobi™ has won at the top of your screen. Play Head-to-Head Gaming with another Tobi™2 user.

• Smash Math:

- Solve the math problem by selecting the correct number on Tobi™ when it pops up on the screen.
- If you answer correctly, you'll earn a coin!
- Try again if you select the wrong answer.

• Tobi™ Time:

- Match the digital time to the analog time on the screen to earn coins.
- The clock will select a random analog time.
- Touch the digital numbers. Then, press the arrows above and below the digital numbers to enter the time shown on the analog clock.
- When you think the time you have set is correct, press the blue check mark to submit your answer.
- Tobi's face will show up on the clock smiling to let you know if you're correct or frowning if you didn't get the correct time.
- A new clock time will appear, so keep playing!

- Earn coins as you enter the correct time!

- **Match Match:**

- Match the images before the time runs out.
- Tap on two cards to flip them over.
- If they match, you will earn a point.
- If they don't match, they will flip back over and you will have to try again.



ARCADE GAMES MENU

- **Dunk n' Slam Hoops:**

- Tap the ball to bounce it towards the basket. Stop tapping the ball once it gets close to the basket.
- Players only control when to bounce the ball, timing is key to success.
- Earn coins each time you make a basket.
- You will lose a heart when the time runs out.
- While in a 2-player game, two scores will be shown.
- Play Head-to-Head Gaming with another Tobi™2 user.

- **A-Maze-Ing Balance:**

- Guide the colored balls into the hole with the matching color.
- If you are wearing Tobi™2 on your wrist, move your wrist around to roll the balls. If Tobi™2 is in the clip/stand, rotate the device to roll the balls.

 
- Earn coins for every ball you match correctly!
- You will lose a heart when you match them incorrectly.

- **Drivin' Time:**

- Collect coins by driving through them.
- To avoid crashing into cars, tap on the screen to switch lanes.
- You will lose a heart each time you crash into a car.

- **Planet Bouncer:**

- Move Tobi™ from planet to planet by tapping on the rotating planet.
- To earn points, make sure Tobi™ lands on a planet.
- You will lose a heart if you send Tobi™ into space, onto the sun or into a black hole.

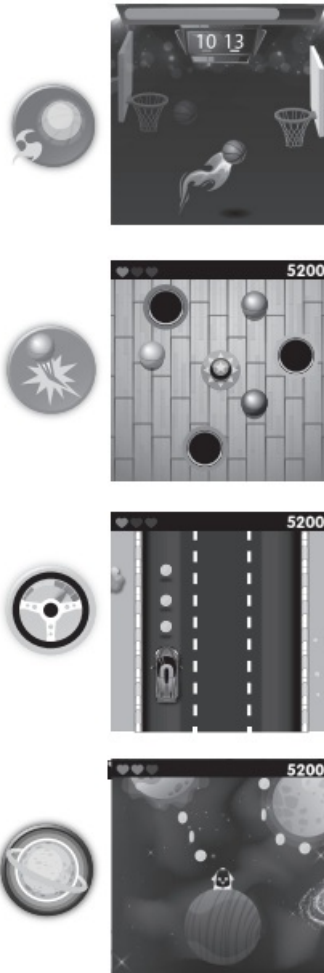

Head-to-Head Gaming: For two-player games, you can play with other Tobii™2 users. Choose two players when prompted and the device will search for another Tobii™2 user. When prompted, the device will ask to accept the connection.

FITNESS MENU

- **Walk n' Wonder:**

- Start walking around with your smartwatch.
- Walk around until target objects appear.
- Match pictures in the center square to moving objects with this augmented reality game.
- When you match the picture to the object, tap the center square to “catch” it.
- For each correct catch, earn coins!

- **Freeze Dance:**

 
- Dance until the music stops!
- When the music stops and Tobi™ is on screen with a stop sign, make sure to freeze!
- Don't move while the music is stopped.
- Don't stop moving while the music is playing.
- Earn a coin for each minute of play when you freeze at the right time! If you are still dancing when the music stops, if you move while the music is still stopped, or if you stop moving while music plays, the clock will go back to 0!

- **Tobi™ Says:**

- Watch the move that Tobi™ wants to you copy.
- Perform that move the number of times that the screen shows.
- The number will count down as you perform the move repetitively.
- Earn coins for completing moves!

- **Robot-o-Box:**

- Box against an opponent to earn coins.
- While wearing the watch, punch into the air to hit your opponent. Each hit counts as a point.
- You will earn coins for each round you win. **IMPORTANT:** Always play in an open area, away from objects or people.

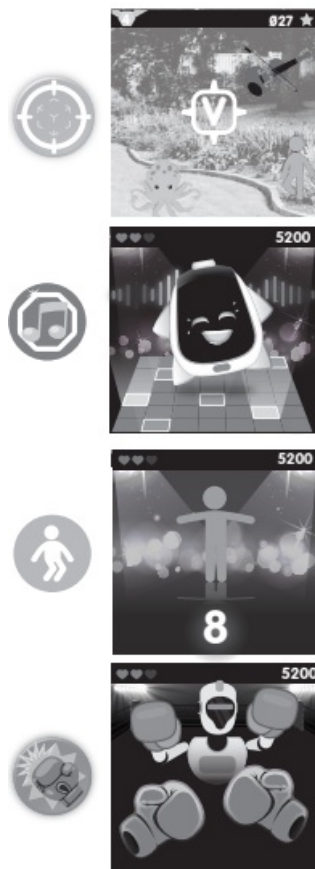

MESSAGING / WALKIE TALKIE

REMEMBER: Your Tobi™2 smartwatch can connect to other Tobi™2 smartwatches using wireless connectivity. To connect, open the Menu Mode and select the wireless connectivity icon in SETTINGS (making sure it is toggled to the ON [Blue] position). Now, you can send messages with other nearby Tobi™2 smartwatches.

NOTES:

- Wireless connectivity is only compatible with other Tobi™2 smartwatches, and will not connect to other devices.
- If wireless connectivity is turned off under Parental Control, it will not allow another Tobi™2 smartwatch to connect. The device name will appear on the screen with an option to allow the connection. An adult will need to enter the passcode to allow the connection.

- **Messaging:**

 
 
- Message another nearby Tobi™2 Robot Smartwatch!
- Send emojis or click the images icon in the top-left corner to send pictures from your gallery.
- Press the send icon in the top-right corner to send your message.
- Select the Tobi™2 device you want to send the message to.
- Two Tobi™ figures will be on the screen, and then a chat bubble will pop up on the receiving Tobi™2 device when your message has sent.
- The receiving device must press the chat bubble to view the message.

NOTE: Pictures sent to another Tobi™2 device cannot be saved on that device. They will disappear after about 15 seconds.

 
- **Walkie Talkie:**

- Press the middle button to record.
- Press it again to stop recording.
- Press the icon on the left-hand corner to select fun voice effects, like extra fast, slow-mo, robot, chipmunk or no effect.
- Press the trash can icon to delete the message.
- Press the play button to play your message back.
- Press the icon on the right-hand corner to send the message to a nearby Tobi™2 device. Select the Tobi™2 device you want to send the message to. Two Tobi™2 figures will be on the screen, and then a chat bubble will pop up on the receiving Tobi™2 device when your message has sent.
- The receiving device must press the chat bubble to view the walkie-talkie message.

NOTE: Messages sent to another Tobi™2 device cannot be saved on that device. They will disappear after about 15 seconds.

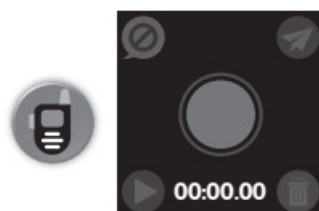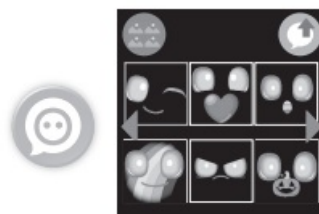



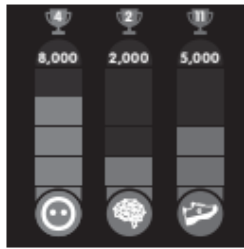








STATS



Stats:

See how happy Tobī™ is with your interactions!

  - Interact with Tobī™ in Tobī™ Mode to increase this stat bar.
- Play and win games to increase this stat bar.
- Meet your step goals, walk and play fitness games to increase this stat bar.
- **REMEMBER:** This is not an indicator of your health or mental abilities. Only medical professionals can determine your overall health.

 CALCULATOR	 HEALTH
<div><div><div>0 </div><div>AC    </div><div>7 8 9 </div><div>4 5 6 </div><div>1 2 3 </div><div>0 . =</div></div><div>Calculator:<ul style="list-style-type: none">• Solve math problems using you Tobī™2 smartwatch.• Tap on the numbers and symbols.• Press the equal symbol to get your answer.</div></div>	<div></div> <div>Breathe:<ul style="list-style-type: none">• Take a break and breathe with Tobī™.• Wait for Tobī™ to count down to one and breathe in and out.</div>

TOBī™ WORLD

- As you play games and interact with Tobī™, you'll earn room decorations.
- Swipe left or right on the touchscreen to see all of Tobī's rooms!
- Open the treasure chest icon in the top-left corner to see all the decoration items you have collected.
- Tap an item and press the green check to add it to the room you're in.
- Press and hold the item to move it around in the room, and then press the green check when you're happy with it.
- Uncheck the icon to move the item.
- Drag the item to the right side of the screen to remove it from the room.
- Tobī™ will appear to check out the room you decorated!



SETTINGS MENU

Date, Time, Language, Brightness, Volume, Tobi™2 Friends, Wireless Connectivity, Firmware Version To cycle through each setting, swipe left or right on the screen. Make the appropriate changes. If the setting is already accurate, swipe left to the next screen

- **Date Selection:**

- Press on the month, day and year or swipe up and down to set the date.
- Press the button to set the date format.

- **Time Selection:**

- Press the hour and minute numbers or swipe up and down on the numbers to change the time. Then, press the AM/PM button to finish setting the time.
- Choose how you want to display the time by pressing the 12/24 hour cycle button.

NOTE: Tobi™2 will not automatically change for Daylight Savings Time.

- **Language Selection:**

- Tap on the language name to cycle between
 - English
 - Spanish
 - French
 - Dutch
 - German
 - Italian
 - Polish

REMEMBER: Tobi™2 does not speak any language. The only apps that use language are the calendar and activity tracker.

- **Tobi™ Friends:**

- Use the toggle button to turn Tobi™ Friends on (blue) or off (red). (Tobi™ Friends sold separately.)

- **Brightness Setting**

- Use the + and – symbols to change the brightness of the screen.

- **Volume Setting**

- Use the + and – symbols to change the device's volume level.

- **Wireless Connectivity Selection:**

 
- Use the toggle button to turn wireless connectivity on (green) or off (pink).

NOTE: See page 5 for more wireless connectivity information.

- **Firmware Version:**

- Check that Tobi™2 is up-to-date with the latest available firmware.
- The screen will show you which version you have.
- See page 5 for more information on Firmware updates.

NOTE: You will also see this screen on your first start-up after updating the firmware.

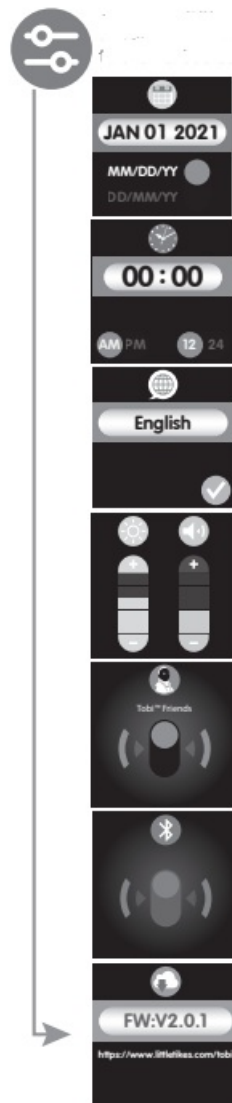

SETTINGS

Device Name, Remote Control, Parental Control

• Tobi™2 Device Name:

 
- Your device is named Tobi™2 by default, but you can add onto Tobi's name to customize it!
- Should you choose a new name, press the minus and plus icons to select a letter.
- Press the letter to set it.
- Press the X to clear the letter you've selected.
- Press the green check mark to save your new device name.

NOTE: Your device name will always start with TOBI2. The first four letters and one number T-O-B-I-2 cannot be erased.

• Remote Control:

- Connect to either Tobi™2 Director's Camera or Tobi™2 Interactive Karaoke Machine (sold separately).

- To connect, open the Menu Mode and select the wireless connectivity icon in SETTINGS (making sure it is toggled to the ON [Blue] position).

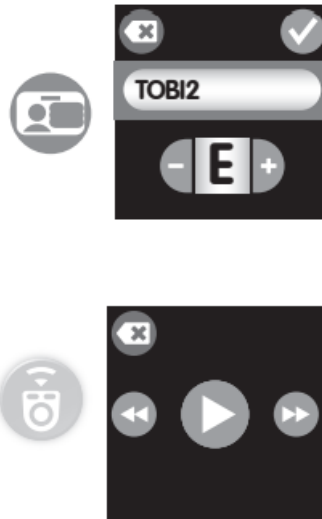

PARENTAL CONTROL

After entering the passcode, press the check mark and cycle through each setting by swiping left or right on the screen. Then, make the appropriate changes.

- **Create Passcode:**

Creating a passcode is optional.

- To create a passcode, tap on the star keys to change the numbers. Then, press the check mark to set the passcode.

NOTE: To reset the passcode, press and hold the lock icon for five seconds.

 
- **Wireless Connectivity:**

- Use the toggle button to turn wireless connectivity on (blue) or off (red).
- To allow another TobitTM2 Robot Smartwatch to connect, enter the passcode and press the check mark when the device's name displays on the screen.

- **Screentime:**

- To set a time limit, follow the below steps. By default, there is no time limit set.
- Use the toggle button to turn screentime on (blue) or off (red).
- Tap on the time bar. It will cycle between 00:30, 1:00, 1:30, 2:00, 2:30, 3:00, 3:30, 4:00, 4:30, 5:00, 5:30 and 6:00.
- Screentime will lock TobitTM2's Mode and Games, but you will still be able to access Watch Screen Mode when the time is up.

NOTE: When the time is up, it will ask for the passcode in order to allow additional time. Tap the time bar and press the check mark to allow more time.

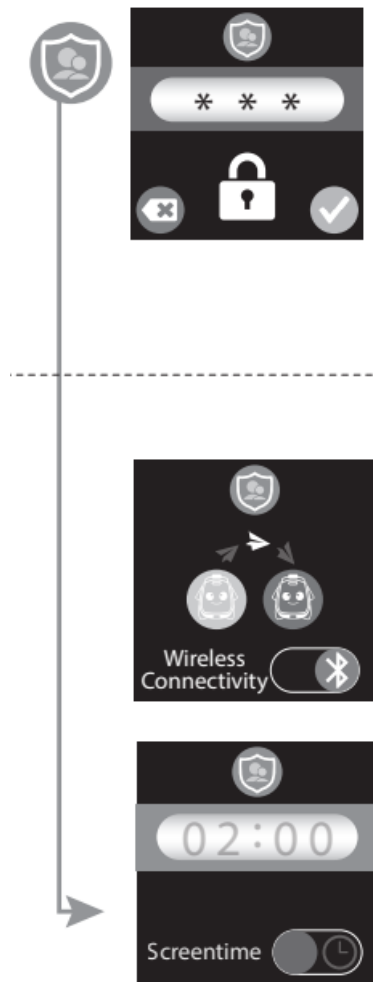

CAMERA

REMEMBER: For your security, the camera and microphone on your device will be disabled when connecting to a computer with the Micro-USB Cable, as the device must be off. Properly eject the device from your computer, unplug the Micro-USB cable, and turn the device on before using these features.



- **Camera:**

- Take selfies or point-of-view (P.O.V.) photos with your device!
- Use the arrow icon to change the view between Selfie and P.O.V.
- Press the shutter button to take your picture.

- **Hand Gestures:**

- **Selfie:** Activate the selfie and timer with a simple hand gesture. While wearing the watch, extend your arm and

then tap on your shoulder 2 to 3 times with your hand. Look at the smartwatch's Forward Facing lens to take a selfie.

- **Lens Switch:** Slightly twist your wrist 3 to 4 times to change from the Outward Facing lens to the Forward Facing lens or vice versa.

NOTE: The Lens Switch gesture only works if the camera is open.

- **Video Camera:**

- To access the video camera, swipe left or right.
- Record selfies or P.O.V. videos with your device!
- Use the arrow icon to change the view between Selfie and P.O.V.
- Press the record button screen to start and stop recording your video.

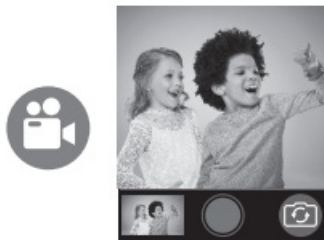 



Image Gallery:

- View all the photos you have taken on your device.
- Tap on a photo in the gallery to select it.
- Press the pencil icon to add a sticker to your image. Stickers include ice cream cones, cupcakes, pizza, glasses and so many more.
- Use the arrow keys to select the sticker you want. Then, press and hold the sticker and drag it around the screen to move it.
- Press the dashed square icon to add a graphic border to your image. You can add frames and stickers at the same time.
- Press the stamp icon to remove the border.
- Press the green check mark to save your edited image as a new picture.
- Press the trash can icon to delete your photo. Then, press the green check to delete or the X to cancel.



Video Gallery:

 - View all videos that you've taken on your device.
- Tap on a video to enlarge and watch it.
- Press the play button over the video to play it.
- Press the gallery button to return to the gallery.
- Press the trash can icon to delete the video. Then, press the green check to delete or the X to cancel.

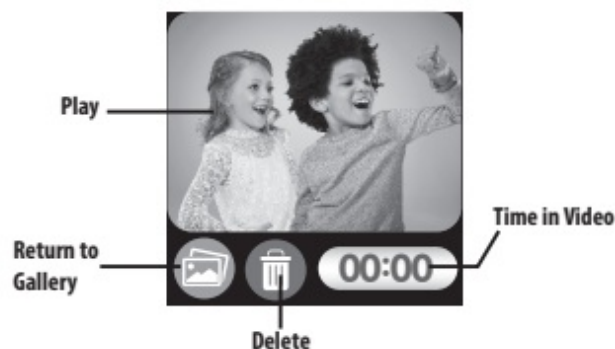

CALENDAR & TIMER

Calendar:

- Select from day or month calendar views by clicking on the calendar icon in the left-hand corner.
- Swipe left or right on the month calendar view to see different months of the year.
- In the day view, press the stamp icon in the upper right-hand corner to access stickers to mark special occasions, like travel, pets, birthday cake, holidays and more!
- Press the arrow keys to cycle through the sticker options.
- Press the green check mark to add the sticker to the date.
- Press the X icon to remove it.
- The calendar icon will rotate between day or month calendar views.

Timer:

- Set a custom timer by swipping on the minutes and seconds numbers to set the desired duration of time.
- Select a preset timer by pressing the icon in the top left. By default these times are:

- Hourglass: 1 Minute
- Moon and Stars: 30 Minutes
- Book: 15 Minutes
- Broom: 15 Minutes
- Meditation: 2 Minutes
- Music: 30 Minutes
- Phone: 15 Minutes
- Brushing Teeth: 2 Minutes

NOTE: You can change the default time on the preset timer by pressing the numbers.

- Press the green check to set the timer.
- Press the play button to start the timer.
- Press pause to pause the timer.
- Tobit™ will appear when the timer is done.



STOPWATCH & ALARM CLOCK

Stopwatch:

Time yourself doing various activities and having fun!

 
- Press the play button to start the stopwatch.
- Press the stop button to stop the stopwatch.
- Press the X button to reset the stopwatch.

Alarm Clock:

Set up to three different alarms with custom wake-up sounds.

- Press the X icon next to the time to select that timer.
- Press the X icon next to the timer again to make the numbers appear.
- Next, press the numbers to select that alarm.
- Press the hour and minute numbers to change the selection.
- Continue changing the hour numbers to switch between AM and PM.
- Press the icon next to AM/PM to set the alarm sound, like a bell, a puppy barking, a rooster, music, and water.
- Cycle back to the X icon to delete the alarm.
- When your alarm goes off, Tobi™ will appear.
- Press the stop icon to turn the alarm off.

NOTE: The alarm will stay set for the next day unless you cycle back to the X icon to clear the alarm.

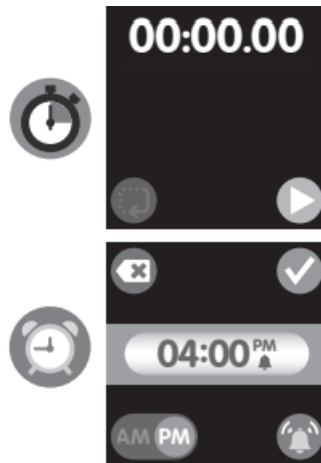

WATCH SCREEN MODE

Press the home button to rotate the display to WATCH SCREEN MODE. Swipe left or right on the touchscreen smartwatch surface to select from over 50 watch faces. Stop swiping to set the watch face that you like.



TROUBLESHOOTING

The smartwatch has stopped working.	<ol style="list-style-type: none"> 1. Turn the power OFF by pressing and holding the home button until the device turns off. 2. Turn the device back ON by pressing and holding the home button until the device turns on. <p>NOTE: if the device still does not work, charge the battery (see page 4) and follow the steps above.</p>
The touchscreen is not responding properly.	<ol style="list-style-type: none"> 1. Turn the power OFF by pressing and holding the home button until the device turns off. 2. Turn the device back ON by pressing and holding the home button until the device turns on. It should now work properly. <p>NOTE: if the device screen still does not work, charge the battery (see page 4) and follow the steps above. TIP: Use the tip of your finger rather than your fingernail for best results using the touchscreen.</p>
The image or video taken is not clear.	<ol style="list-style-type: none"> 1. Ensure the lighting in the area you are shooting is sufficient. 2. Check that the camera lens is clean. If dirty, wipe with a dry, soft cloth and blow on it to remove debris. See CARE AND MAINTENANCE on page 23.
Cannot connect the device to a computer.	<ol style="list-style-type: none"> 1. Ensure there is a good connection between the device and the computer via the Micro-USB Cable. See MICRO-USB PORT on page 4 and other supporting sections for more information. 2. If the cable is damaged, contact consumer service. Do not attempt to use the cable if it is damaged.
Wireless connectivity is not working properly.	<ol style="list-style-type: none"> 1. Stay within close proximity (about 50 ft./15m with nothing in the way) of other Tobii™2 Robot Smartwatches when connecting wirelessly. 2. The device must have a sufficient amount of battery power to connect wirelessly. Recharge the device using the included Micro-USB cable.
The device is not charging.	<ol style="list-style-type: none"> 1. Only use the included Micro-USB cable to charge the device. 2. It is recommended you only charge the device using a USB port on your computer. 3. Make sure to charge the device regularly, even if it is not in use. A battery that has not been charged in a long time may no longer accept a charge.
Smartwatch not turning on.	<ol style="list-style-type: none"> 1. Press and hold the home button for five seconds. 2. Make sure it is fully charged.

WARNING

This toy produces flashes that may trigger epilepsy in sensitized individuals. A very small percentage of people, due to an existing condition, may experience epileptic seizures or momentary loss of consciousness when viewing certain light patterns or flashing lights. While this product does not contribute any additional risks, it is recommended that parental supervision is enforced during play. If you experience any dizziness or altered vision, disorientation or convulsions, IMMEDIATELY discontinue use and consult a physician. Focus on screens in close

proximity for an extended amount of time may cause fatigue or discomfort. For every one hour of play, take a 15-minute break, or take breaks more frequently as needed.

CARE AND MAINTENANCE

- Always keep the port cover closed during use to prevent water or debris from entering the device. Only open the port cover to connect the device to your computer.
- Keep the device clean by wiping it off with a slightly damp cloth and drying it thoroughly. Do not place the device under running water or use harsh chemicals or abrasive materials to clean.
- Remove the device from the watchband and clip/stand to clean. Wipe the accessories with a damp cloth regularly to keep them clean. Always air dry; do not subject to heat.
- Keep the device and accessories out of direct sunlight for long periods of time. Do not expose the device or accessories to direct heat sources.
- Do not drop the device on a hard surface to prevent damage.
- Keep the camera lens clean. If pictures are blurry, it could be because dust or dirt is covering the camera lens. Wipe clean with a dry, soft cloth and/or blow gently on the lens to remove any debris.
- If you do not plan to use the device for an extended period, it is recommended that you turn the device off. Regularly charge the battery when not in use to ensure the battery accepts a charge. See BATTERY LIFE AND MAINTENANCE on page 24.

SPLASHPROOF

While your device can withstand splashes from washing your hands or dancing in the rain, it is not recommended to submerge the device in water. To prevent water damage:

1. Always ensure the cover over the Micro-USB port is completely closed to prevent water from getting inside the smartwatch.
2. Do not place the device under running water.
3. Do not submerge in water or wear while showering, bathing or swimming.

RESTARTING TOBI™2 ROBOT SMARTWATCH

If your device is unresponsive or if you wish to reset the watch to the way it was upon unboxing, press and hold the home button for 8 seconds to reset the watch. **NOTE:** You may need to reset all custom settings.

LiPo BATTERY SAFE USAGE

This device is equipped with a Lithium Polymer (LiPo) rechargeable battery. Please pay attention to the following cautions for safety use:

- Before recharging, allow the battery to cool for at least 10 minutes after use.
- Do not dispose of the battery in fire or extreme heat.
- Do not use or leave the battery near a heat source such as a fire or a heater.
- Do not strike or throw the battery against hard surfaces.
- Do not immerse the battery in water.
- Keep the battery in a cool, dry place.

- When recharging, only use the Micro-USB Cable specifically included for that purpose.
- Do not over-charge the battery.
- Do not directly solder the battery and pierce the battery with a nail or other sharp object.
- Do not disassemble or alter the battery.
- Charge the battery as necessary. Failure to charge the battery frequently may result in a battery that will no longer accept a charge.
- Do not transport or store the battery with metal objects such as necklaces, hairpins, etc.
- Please recycle a used battery after covering the battery wires/terminals with electrical tape or by inserting it into an individual poly bag. Check local laws and regulations for recycling and/or disposal information.
- Under the environment with electrostatic discharge, the product may malfunction and require the user to reset the product by turning it off and back on again.
- Rechargeable batteries are only to be charged by an adult.

BATTERY LIFE AND MAINTENANCE

Check the battery charge level on the quick menu view. If the battery is yellow, it’s time to charge soon. If the battery is red, charge the battery as soon as possible.

USAGE	BATTERY LIFE
Low Usage	5 Days
Typical Usage	2 Days
Heavy Usage	8 Hours

Charge the battery regularly to maintain optimum performance, even when the device isn’t regularly in use. For example, charge the device at least once every six months. Turn the device OFF before charging the battery. Keep the device OFF when the device will not be in use for an extended period. This chart is only an estimate of the projected battery life before charging is needed.

 
BATTERY DISPOSAL

‘Let’s care for the environment!’ The wheelie bin symbol indicates that the product must not be disposed of with other household waste. Please use designated collection points or recycling facilities when disposing of the item. Do not treat old batteries as household waste. Take them to a designated recycling facility


BATTERY REMOVAL INSTRUCTIONS

This toy contains a battery that is non-replaceable. Do not attempt to open the device unless you are permanently disposing of the device. Opening the device for any other reason could void the warranty. Battery removal is permanent, and the device will no longer work after removing the battery.


CAUTION: An ADULT must remove the battery for proper disposal. Always wear protective safety goggles in case of battery leakage.

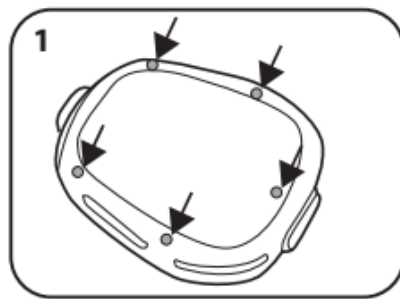

 
1
Use a small Phillip's screwdriver (not included) to remove the five screws on the back of Tobii™.

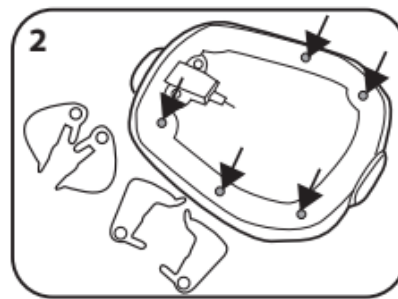

 2
Remove Tobii's arms and legs. Then, use a small Phillip's screwdriver to remove the five remaining screws on the middle panel.

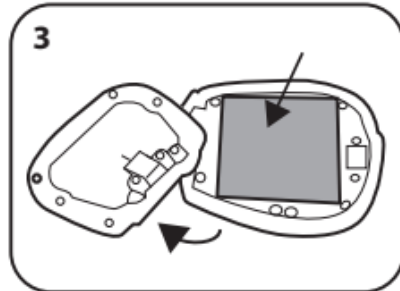

 3
Remove the middle panel to reveal the battery.

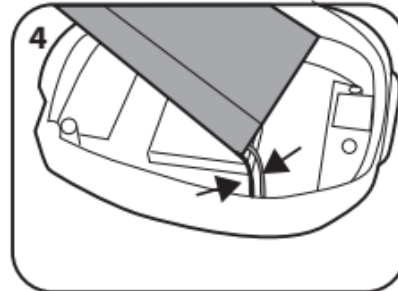

4
Lift out the battery. Use scissors to carefully cut the black and red wires **ONE AT A TIME**. Cover the wires/terminals with electrical tape and properly dispose of the battery.

FCC COMPLIANCE

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment of and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference, and
2. this device must accept any interference received, including interference that may cause undesired operation.

Caution: Modifications not authorized by the manufacturer may void users' authority to operate this device. This device contains license-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's license-exempt RSS(s). Operation is subject to the following two conditions:

1. This device may not cause interference.
2. This device must accept any interference, including interference that may cause undesired operation of the device. CAN ICES-3 (B)/NMB-3(B).

LIMITED WARRANTY

This warranty is applicable only to the original purchaser, is non-transferable, and applies only to The Little Tikes Company products or parts. This product is covered by a 6-month warranty from the original purchase date, under normal use and service, against defective workmanship and materials. This warranty does not apply to:

- Consumable parts, such as batteries
- Cosmetic damage, including but not limited to scratches and dents
- Damage caused by use with non-Little Tikes® products
- Damage caused by accident, misuse, unreasonable use, immersion in water, neglect, abuse, battery leakage, or improper installation, improper service, or other external causes
- Damage caused by operating this product outside the permitted or intended uses described by The Little Tikes Company in this manual
- A product or part that has been modified
- Defects caused by normal wear and tear or otherwise due to the normal aging of the product
- If any Little Tikes® serial number has been removed or defaced

For assistance, please contact consumer service:

U.S.A and Canada: For warranty service or replacement part information, please visit our website at www.littletikes.com, call 1-800-321-0183 or write to Consumer Service, The Little Tikes Company, 2180 Barlow Road, Hudson OH 44236, U.S.A. Some replacement parts may be available for purchase after the warranty expires—contact us for details.

United Kingdom: For warranty service or replacement part information, please visit our website at: littletikes.co.uk, and/or call +0800 521 558 or write to 50 Presley Way, Crownhill, Milton Keynes MK8 OES, Bucks UK. Some replacement parts may be available for purchase after the warranty expires – contact us for details.

Australia: For warranty service or replacement part information, please visit our website at: littletikes.com.au, and/or call 1300 059 676 or write to Suite 2.02, 32 Delhi Road, Macquarie Park NSW 2113. Some replacement parts may be available for purchase after the warranty expires – contact us for details.

Benelux Region: For warranty service or replacement part information, please visit our website at: littletikes.nl, and/or call +31(0) 172 758038 or write to klantenservice@mgae.com. Some replacement parts may be available for purchase after the warranty expires – contact us for details.

Outside of these countries: Contact the place of purchase for warranty service. This warranty gives you specific legal rights, and you may also have other rights, which vary from country/state to country/state. Some countries/states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you.

If the service representative is unable to resolve the issue, you will be provided instructions on how to return the product and have it replaced under warranty. Return of the product under warranty must adhere to the following rules:









If The Little Tikes Company believes that there may be a defect in the materials or workmanship of the product and can confirm the purchase date and location of the product, we will at our discretion replace the product with a new unit or product of comparable value. A replacement product or parts assumes the remaining warranty of the original product or 30 days from the date of replacement, whichever provides longer coverage. THIS WARRANTY AND THE REMEDIES SET FORTH ABOVE ARE EXCLUSIVE AND IN LIEU OF ALL OTHER WARRANTIES, REMEDIES, AND CONDITIONS, WHETHER ORAL, WRITTEN, STATUTORY, EXPRESS, OR IMPLIED. IF THE LITTLE TIKES COMPANY CAN NOT LAWFULLY DISCLAIM STATUTORY OR IMPLIED WARRANTIES THEN TO THE EXTENT PERMITTED BY LAW, ALL SUCH WARRANTIES SHALL BE LIMITED TO THE DURATION OF THE EXPRESS WARRANTY AND TO THE REPLACEMENT SERVICE AS DETERMINED BY THE LITTLE TIKES COMPANY IN ITS SOLE DISCRETION. ANY DISPUTES RESULTING FROM THIS WARRANTY SHALL BE SUBJECT TO THE FINAL AND CONCLUSIVE DETERMINATION OF THE LITTLE TIKES COMPANY. To the extent permitted by law, The Little Tikes Company will not be responsible for direct, special, incidental, or consequential damages resulting from any breach of warranty. A DATED SALES RECEIPT IS REQUIRED FOR PROOF OF PURCHASE

Documents / Resources



[TOBI 657573 Robot Smartwatch](#) [pdf] User Guide
657573, 659140, 487231, 657573 Robot Smartwatch, 657573, Robot Smartwatch

References

-  [Official Home of Little Tikes UK](#)
-  [Little Tikes | Fun & Learning Toys For All Ages - Australia](#)
-  [Officiële website van Little Tikes](#)
-  [Official Home of Little Tikes UK](#)
-  [Official Little Tikes Website | Parent Trusted for Over 50 Years](#)
-  [Little Tikes | Fun & Learning Toys For All Ages - Australia](#)
-  [Tobi Watch 2.0 - Black | Little Tikes – Official Little Tikes Website](#)
-  [Tobi Robot Smartwatch-Blue | Little Tikes – Official Little Tikes Website](#)