

TODDY MDT-2312F Digital Presettable Timer Multipurpose Controller User Guide

Home » TODDY » TODDY MDT-2312F Digital Presettable Timer Multipurpose Controller User Guide 🖫






Contents

- 1 MDT-2312F Digital Presettable Timer Multipurpose Controller
- **2 BEFORE FIRST USE**
- **3 SET CLOCK TIME**
- **4 SET COUNTDOWN TIMER**
- **5 START COUNTDOWN**
- **6 TIMER PLACEMENT**
- **7 BATTERY REPLACEMENT**
- **8 ONE YEAR LIMITED WARRANTY**
- 9 Documents / Resources
 - 9.1 References

MDT-2312F Digital Presettable Timer Multipurpose Controller



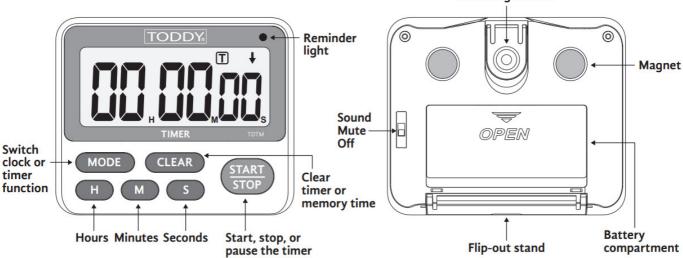

BEFORE FIRST USE

- 1. Remove protective film on screen by freeing one corner and then pulling remainder off.
- 2. Install 2 AAA batteries (included). Access battery compartment by sliding cover in the direction of the arrow.
- 3. Turn the timer on with the switch on the back.

SET CLOCK TIME

- 1. Press and hold MODE until the display is flashing.
- 2. Press H button to set hours (press and hold to increase quickly).
- 3. Press M button to set minutes (press and hold to increase quickly).
- 4. Press S button to set seconds (press and hold to increase quickly).

SET COUNTDOWN TIMER

- 1. Press MODE button to enter TIMER MODE.
- 2. Press H button to set hours (press and hold to increase quickly).
- 3. Press M button to set minutes (press and hold to increase quickly).
- 4. Press S button to set seconds (press and hold to increase quickly).

5. Press the CLEAR button to clear the timer. Press again to load memory time (last countdown time started).

START COUNTDOWN

- 1. After setting countdown time, press START/STOP button to begin countdown. Pressing this button additional times will cycle between pausing and resuming the countdown.
- 2. When the countdown timer reaches zero, the indicator light will flash, the alarm will sound (for 1 minute), and the timer will begin to count up while flashing.
- 3. Press START/STOP button to return to timer mode.

TIMER PLACEMENT

This product can free stand with use of the flip-out stand, hang on a fixture with the mounting bracket, or attach to a magnetic metal surface with rear magnets.

BATTERY REPLACEMENT

Replace batteries if display is dim or unclear.

ONE YEAR LIMITED WARRANTY

Toddy, LLC warrants this product to be free from defects in material or workmanship (excluding batteries) for 1 year from the original date of purchase.



©2023 Toddy, LLC. All rights reserved. | Version: 12-2023 Toddy® is a registered trademark of Toddy, LLC.

Documents / Resources



TODDY MDT-2312F Digital Presettable Timer Multipurpose Controller [pdf] User Guide MDT-2312F Digital Presettable Timer Multipurpose Controller, MDT-2312F, Digital Presettable Timer Multipurpose Controller, Presettable Timer Multipurpose Controller, Timer Multipurpose Controller, Multipurpose Controller, Controller

References

• User Manual

Manuals+, Privacy Policy