

TOMADO®

TOMADO TPP1400B
Pancake Maker



TOMADO TPP1400B Pancake Maker Instruction Manual

[Home](#) » [TOMADO](#) » TOMADO TPP1400B Pancake Maker Instruction Manual 

Contents

- 1 TOMADO TPP1400B Pancake Maker
- 2 Product Information
- 3 Product Usage Instructions
- 4 SAFETY INSTRUCTIONS
- 5 PRODUCT DESCRIPTION
- 6 CLEANING AND MAINTENANCE
- 7 Documents / Resources
 - 7.1 References
- 8 Related Posts

TOMADO®

TOMADO TPP1400B Pancake Maker



Specifications:

- Model: TPP1400B
- Languages: Dutch, English, German, French
- Pages: 3-5 (NL), 6-8 (EN), 9-13 (DE), 14-18 (FR)

Product Information

The product is a versatile cooking appliance with a baking plate, housing, switch, and ready light. It is designed for easy use and maintenance.

Product Usage Instructions

Prior to First Use:

Before using the product for the first time, make sure to read the user manual thoroughly.

General Use:

1. Place the product on a flat, stable surface.
2. Connect the appliance to a power source.
3. Use the switch to turn on the appliance.
4. Wait for the ready light to indicate that the appliance is heated up and ready for use.
5. Place your food on the baking plate and start cooking.

Cleaning and Maintenance:

1. After each use, unplug the appliance and allow it to cool down.
2. Wipe the baking plate and housing with a damp cloth.
3. Rinse and dry thoroughly with a clean, soft cloth.
4. Replace the baking plate and housing once cleaned.

Recycling:

Dispose of the product according to the regulations in your country for electronic waste disposal to prevent

negative environmental impact.

FAQ:

1. Q: Where can I order accessories for the product?

A: You can order accessories or spare parts by visiting www.tomado.com/support.

2. Q: What are the warranty conditions for the product?

A: A 24-month warranty is provided for the product when used according to the user instructions and for its intended purpose. Keep the original proof of purchase with the purchase date, retailer name, and product item number for warranty claims. For detailed warranty information, visit www.tomado.com/support.

SAFETY INSTRUCTIONS

- Carefully read the entire instruction manual prior to using the appliance and store it carefully for future reference.
- Only use this appliance for the purposes described in the instruction manual.
- Do not use accessories that are not recommended by the manufacturer.



- **Caution!** Avoid contact with the hot surfaces. The grill plates and other surfaces become very hot when using the appliance.
- Allow the appliance and grill plates to cool down fully before cleaning or storing the appliance.
- Only connect the appliance to alternate current, to an earthed wall socket, with a mains voltage that corresponds with the information provided on the information plate of the appliance.
- Never bend the power cord sharply or allow it to run across hot parts.
- Fully unwind the cord to prevent it from overheating.
- Never place the appliance near appliances that give off heat, such as ovens, gas cookers, hotplates, etc. Keep the appliance away from walls or other objects that may catch fire, such as curtains, towels (cotton or paper, etc.).
- Place the appliance on a sturdy, flat surface and make sure there is enough space around it for sufficient ventilation. A minimum space of 10 cm is required between the appliance and the walls. Place nothing on top of the appliance.
- Only use the appliance indoors.
- Do not leave the appliance unattended when it is in operation.
- Do not use the appliance if the plug, cord or appliance are damaged, or if the appliance is no longer functioning properly, or has been dropped or damaged in any other way. If this is the case, consult the retailer or our maintenance service.
- If the connection cord of this appliance becomes damaged, it must be replaced by the manufacturer, its customer service or a similarly qualified person in order to prevent hazardous situations.
- Do not pull the cord and/or appliance to remove the plug from the wall socket. Never touch the appliance with wet or damp hands.
- Never connect the appliance to an external timer or a separate remote control system, in order to prevent hazardous situations.
- Keep the appliance out of reach of children. Children do not see the dangers associated with handling electrical appliances.

Therefore, never allow children to operate electrical appliances without supervision. Keep the appliance and cord out of reach of children younger than 8 years of age.

- The appliance may be used by children of 8 years and older and by persons with restricted physical, sensory or mental capacities or a lack of experience or knowledge, provided that they use the appliance under supervision and are instructed about the safe use of the appliance, and understand the associated hazards.
- Children must not play with the appliance.
- The appliance may not be cleaned or maintained by children, unless this is done under supervision.
- If the appliance does not function after it has been switched on, it is possible that the fuse or earth leakage circuit breaker has been activated in the electrical distribution box. The group may be overloaded or an earth leakage current may have occurred.
- In case of a breakdown, never make repairs yourself; a tripped safety device in the appliance could indicate a defect that cannot be remedied by removing or replacing this safety device. Only original parts should be used.
- Never submerge the appliance, cord or plug in water.
- This appliance is intended for household and similar use, such as:
 - in staff kitchens, shops, offices and other work environments;
 - by guests of hotels, motels and other residential environments;
 - in Bed&Breakfast type environments;
 - farms.
- If the appliance is not used as intended, no compensation can be claimed in case of defects or accidents and the warranty will be invalidated.
- Always make sure the appliance is on a sturdy, flat, heat-resistant surface and only use it indoors.
- The use of accessory attachments not recommended by the manufacturer may result in fire, electrical shock, or risk of injury to persons.

PRODUCT DESCRIPTION

1. Baking plate
2. Housing
3. Switch
4. Ready Light



PRIOR TO FIRST USE

- Read all instructions carefully and keep them for future reference.

- Remove all packaging
- Clean the baking plate by wiping a sponge or cloth dampened in warm water.

DO NOT IMMERSE THE UNIT AND DO NOT RUN WATER DIRECTLY ON THE COOKING SURFACES.

- Dry with a cloth or paper towel.
- For best results, lightly coat the baking plate with a little cooking oil or cooking spray.

Notice: When your appliance is heated for the first time, it may emit slight smoke or odor. This is normal with many heating appliances. This does not affect the safety of your appliance.

GENERAL USE

- Close the appliance and plug it into the wall outlet, you will notice that the ready light (4) will come on, indicating that the appliance has begun preheating.
- It will take approximately 5 minutes to reach baking temperature, the ready light (4) will go off.
- Put the butter on the baking plate (1).
- The ready light (4) will go on again.
- Bake for about 6 to 12 minutes, the ready light (4) goes off again, or until golden brown, adjusting the time to suit your own individual taste.
- Remove the poffertjes with the help of a plastic spatula. Never use metal tongs or a knife as these can cause damage to the non-stick coating of the baking plate (1).
- Once you are finished cooking, disconnect the plug from the wall outlet and leave unit open to cool.

CLEANING AND MAINTENANCE

- Always unplug the appliance and allow it to cool before cleaning. The unit is easier to clean when slightly warm. Never immerse the appliance in water or place in dishwasher.
 - Wipe the baking plate with a soft cloth to remove food residue. For baked on food residue squeeze some warm water mixed with detergent over the food residue then clean with a non abrasive plastic scouring pad or place wet kitchen paper over the plate to moisten the food residue.
 - Do not use anything abrasive that can scratch or damage the non-stick coating.
 - Do not use metal utensils to remove your foods, they can damage the non-stick surface.
 - Wipe the outside of the appliance with a damp cloth only. Do not clean the outside with any abrasive scouring pad or steel wool, as this will damage the finish. Do not immerse in water or any other liquid.
 - Do not place in the dishwasher.
 - Avoid the use of scouring pads or harsh detergents as they may damage the surface.
- Rinse and dry thoroughly with a clean, soft cloth and replace.

RECYCLING



■ This symbol means that this product should not be disposed of with regular household waste (2012/19/EU). Observe the applicable rules in your country for the separated collection of electric and electronic products. By disposing of the product correctly, you prevent negative consequences for the environment and for public health. The packaging material of this product can be recycled 100%, return packaging material separately.

ORDERING ACCESSORIES

Go to www.tomado.com/support to purchase accessories or spare parts.

WARRANTY CONDITIONS

A 24 month warranty is provided for this product. Your warranty is valid if the product has been used in accordance with the user instructions and for the purpose for which it was made. Also the original proof of purchase must be submitted, stating the date of purchase, the name of the retailer and the item number of the product. For extensive warranty information you are referred to our website: www.tomado.com/support

Tomado Electric Appliances

Postbus 159

6920 AD Duiven

The Netherlands

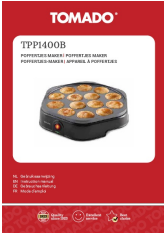
support@tomado.com

www.tomado.com

Modifications and printing errors reserved

TOMADO.COM

Documents / Resources

	<p>TOMADO TPP1400B Pancake Maker [pdf] Instruction Manual TPP1400B Pancake Maker, TPP1400B, Pancake Maker, Maker</p>
--	--

References

- [T Klantenservice](#)
- [User Manual](#)

Manuals+, Privacy Policy

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.