



TOMADO TSB3500B Stick Mixer



Contents

- [1 SAFETY INSTRUCTIONS](#)
- [2 PRODUCT DESCRIPTION](#)
- [3 USING THE APPLIANCE FOR THE FIRST TIME](#)
- [4 USE](#)
- [5 CLEANING AND MAINTENANCE](#)
- [6 RECYCLING](#)
- [7 CUSTOMER SUPPORT](#)
- [8 Documents / Resources](#)
 - [8.1 References](#)
- [9 Related Posts](#)

SAFETY INSTRUCTIONS

- First carefully read the instruction manual in full prior to using the appliance and store the manual in a safe place for future reference.

- Only use this appliance for the purposes described in the instruction manual.



Attention! Avoid contact with the blade when the appliance is switched on.



Warning: the blades of the stick mixer foot and mincer are very sharp.

- Make sure the appliance is switched off and remove the plug from the socket prior to changing accessories or touching parts that could rotate during use.
- Only connect the appliance to alternate current, to an earthed wall socket, with a mains voltage that corresponds with the information provided on the information plate of the appliance.
- Never bend the power cord sharply or allow it to run across hot parts.
- Fully unwind the cord to prevent it from overheating.
- Never place the appliance near appliances that give off heat, such as ovens, gas cookers, hotplates, etc. Keep the appliance away from walls or other objects that may catch fire, such as curtains, towels (cotton or paper, etc.).
- Always make sure the appliance is placed on an even, flat surface and is only used indoors.
- Do not leave the appliance unsupervised if the appliance is operational.
- Do not use the appliance if the plug, cord or appliance are damaged, or if the appliance no longer functions properly or if it is damaged in any other way. If this is the case, consult the retailer or our maintenance service.
- If the cord of the appliance is damaged, it should be replaced by the manufacturer, his customer service or a similarly qualified person in order to prevent hazardous situations.
- Do not pull the cord and/or appliance to remove the plug from the wall socket. Never touch the appliance with wet or damp hands.
- Keep the appliance out of reach of children. Children do not see the dangers associated with handling electrical appliances.

Therefore, never allow children to operate electrical appliances without supervision. Keep the appliance and cord out of reach of children younger than 8 years of age.

- The appliance can be used by children of 8 years and older and persons with a limited physical, sensory or mental capacity or lack of experience or knowledge, provided they use the appliance under supervision or have been instructed about its safe use and understand the hazards involved.
- Children must not play with the appliance.
- The appliance may not be cleaned or maintained by children, unless this is done under supervision.
- If the appliance is not being used or is being cleaned, switch off the appliance and remove the plug from the socket.
- In case of a breakdown, never make repairs yourself; a tripped safety device in the appliance could indicate a defect that cannot be remedied by removing or replacing this safety device.

Only original parts should be used.

- Never submerge the appliance, cord or plug in water.
- This appliance is intended for household and similar use, such as:
 - in staff kitchens, shops, offices and other work environments.
 - by guests of hotels, motels and other residential environments.
 - in Bed&Breakfast type environments
 - farms
- If the appliance is not used as intended, no compensation can be claimed in case of defects or accidents and

the warranty will be invalidated.


PRODUCT DESCRIPTION

1. Cord
2. On/Off button – position I
3. On/Off button – turbo
4. Motor unit
5. Stick mixer foot



USING THE APPLIANCE FOR THE FIRST TIME

Follow these instructions when using the stick mixer for the first time: Carefully remove the stick mixer and accessories from the packaging and remove all packaging material.

 **Warning:** the blades of the stick mixer foot and mincer are very sharp. Keep the packaging (plastic bags and cardboard) out of reach of children. After unpacking the appliance, carefully check it for external damage that may have occurred during transport.

Clean the stick mixer foot with warm water and a mild detergent and then wipe it dry thoroughly.


The outside of the motor unit can be wiped with a lightly damp cloth.

Do not use aggressive cleaning agents. These could affect the material.


Always fully unwind the cord. Ensure that all of the components are properly dry before you start using the appliance.

USE

STICK MIXER

 **Attention:** the blade of the stick mixer foot is very sharp.

- Take the motor unit and stick mixer foot. Attach the stick mixer foot to the motor unit by turning it clockwise. To remove it, you must turn the stick mixer foot in the opposite direction.
- Insert the plug in the socket.
- Insert the stick mixer foot in the food to be mashed.
- Press the on/off button for position I or turbo.
- When you let go of the button, the stick mixer will stop.
- When you are ready mixing or mashing and have let go of the button, wait for the blade to stop rotating before touching the stick mixer foot.

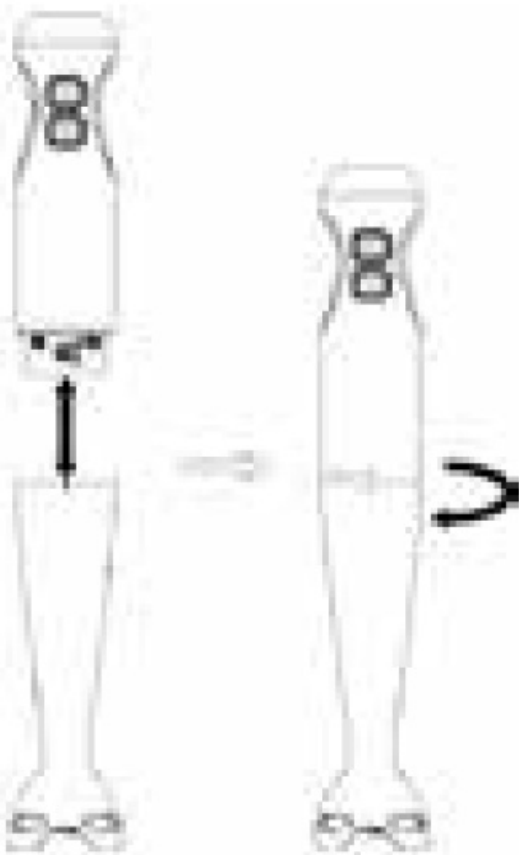

Caution: do not switch on the stick mixer constantly, this could cause problems with the motor.

Preferably use the stick mixer one minute each time and then allow the stick mixer to cool down for one or two minutes. If you want to mash large volumes, you should do this in several turns.

Switch on the appliance for a maximum of 15 seconds per time when it is not being used to mix or mash food.

Always remove the plug from the socket when you leave the appliance unsupervised and before you assemble, disassemble or clean the appliance.


The stick mixer can be used directly in a pan or bowl. Remove the pan from the hotplate to prevent the stick mixer from overheating.

CLEANING AND MAINTENANCE

Always remove the plug from the socket when you leave the appliance unsupervised and before you assemble, disassemble or clean the appliance.

Unscrew the motor unit from the stick mixer foot.

- The outside of the motor unit and the coupling piece can be wiped with a lightly damp cloth.
- Clean the stick mixer foot under the tap, using warm flowing water. If necessary, use a mild washing-up liquid.
- The stick mixer foot should not be cleaned in the dishwasher.

 **Warning:** be careful when washing up the stick mixer foot and the mincer's blade. The blades are extremely sharp.

- Do not use aggressive cleaning agents. These could affect the materials.
- Never submerge the motor unit in water or other liquids.

RECYCLING



— This symbol means that this product should not be disposed of with regular household waste (2012/19/EU). Observe the rules that apply in your country for the separated collection of electric and electronic products. Correct disposal of the product prevents negative consequences for the environment and for public health. The packaging material of this product can be recycled for 100%. Please dispose of the packaging material separately.

CUSTOMER SUPPORT



Quality since 1923



Excellent service



Best choice

Tomado Electric Appliances
Postbus 159
6920 AD Duiven
The Netherlands




support@tomado.com



www.tomado.com


Modifications and printing errors reserved
TSB3500B/01.0624

TOMADO.COM

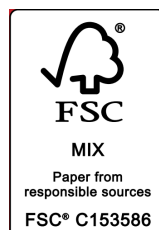



Documents / Resources

 The image shows the front cover of the TOMADO TSB3500B instruction manual. It features a red background with a white central panel containing a black and white photograph of the stick mixer. Text on the cover includes the brand name "TOMADO", the model number "TSB3500B", and the title "STICK MIXER".	<p>TOMADO TSB3500B Stick Mixer [pdf] Instruction Manual TSB3500B Stick Mixer, TSB3500B, Stick Mixer, Mixer</p>
------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------	------------------------------------------------------------------------------------------------------------------------------------

References

- [User Manual](#)

[Manuals+](#), [Privacy Policy](#) | [@manuals.plus](#) | [YouTube](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.