



Tomarsy TMS-127 Pager and Buzzer User Manual

[Home](#) » [Tomarsy](#) » Tomarsy TMS-127 Pager and Buzzer User Manual 

Contents

- [1 Tomarsy TMS-127 Pager and Buzzer](#)
- [2 Using steps](#)
- [3 Buzzer number setting](#)
- [4 Buzzer prompting time setting](#)
- [5 Pager number setting](#)
- [6 FCC](#)
- [7 Documents / Resources](#)
- [8 Related Posts](#)

Tomarsy

Tomarsy TMS-127 Pager and Buzzer



Using steps



Host model	TMS-127
Pager Size	240×155×37 mm
Buzzer Size	105×51×10 mm
Buzzer pcs	16
Frequency	315MHz
Transmission Distance	40~50 m/Multi-obstacle occasions 80~100 m/General indoor occasions
Input Voltage	(AC) 100 ~ 240 V / 50 ~60 Hz
Output Voltage	(DC) 12 V / 1A
Rated Power	18 W
Battery Capacity	200 mAh
Waterproof & dustproof grade	IP 32

1. Before using, it is necessary to put all the buzzers in the pager charging tank and charge them for 20 minutes to avoid invalid settings.

2. Power on: Put all the buzzers in the pager charging tank, plug in, they will start automatically.

3. Call: Enter the number from the pager keyboard, then press the [CALL] key, the buzzer will vibrate, beep & lights flashing, you can stop it by pressing the button on the side of the buzzer.

Note: When using it for the first time, if the buzzer doesn't respond, please reset the number. You can find how to set it in the setting section.

4. Shutdown: Put all the buzzers in the pager charging tank, enter '99' from pager keyboard, then press the [CALL] key.

Note: After shutdown, unplug the power plug.

Buzzer number setting

1. Remove the acrylic card and number paper on the front of the buzzer;
2. Press the 'Stop' and 'Set' button at the same time, two lights on the side of the buzzer will flash, then you have 3 seconds to set the number;
3. Enter the number you would like to set from the pager keyboard and press the [CALL] key to save it within 3 seconds.

Tip: Please use a small tool to press the 'Set' button if you could not press it by your nail.

Tip: If you want to change the number of a buzzer, you can directly set a new number by the method above.

Note: Do not set the number to '99', this number is a shutdown command!

Buzzer prompting time setting

1. Remove the acrylic card and number paper on the front of the buzzer;
2. Press the 'Set' button, the lights around the buzzer will on, you can adjust the number of lights that's on by press the 'Set' button, every light that's on means 7 seconds of prompting time.
3. After setting, it will save automatically in 3 seconds.

Tip: No light on means Vibration mode.

Pager number setting

Turn off the pager and unplug it. Insert the power plug while holding down the [CALL] key, release the [CALL] key when the current number of the pager is displayed on the LED screen. Enter the new number in the range 1-99 and press the [CALL] key.

Note: Do not set the number to 'O'

Note: After changing the number of the pager, all buzzers need to be set number again to use it.

Note: If all buzzers cannot be called, the Pager number may be changed by maloperation. You need to renumber all buzzers.

FCC

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference, and
2. This device must accept any interference received, including interference that may cause undesired operation

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:


- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

- Consult the dealer or an experienced radio/TV technician for help.

Warning: changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment

The devices has been evaluated to meet general RF exposure requirement, the device can be used in portable exposure condition without restriction

Documents / Resources

 <p>Tomarsy Pager & Buzzer TMS-127</p> <p>Model: TMS-127</p> <p>Frequency: 462.000 MHz</p> <p>Power: 1W</p> <p>Antenna: 1m</p> <p>Dimensions: 100x50x20mm</p> <p>Weight: 10g</p> <p>Operating Temperature: -20°C to +60°C</p> <p>Storage Temperature: -40°C to +80°C</p> <p>Humidity: 5% to 95%</p> <p>Shock: 10g</p> <p>Vibration: 10g</p> <p>EMC: CE</p> <p>RoHS: Yes</p> <p>REACH: Yes</p> <p>Warranty: 1 Year</p> <p>Manufacturer: Tomarsy</p> <p>Country: China</p> <p>Year: 2017</p>	<p>Tomarsy TMS-127 Pager and Buzzer [pdf] User Manual</p> <p>2BAP7-TMS127, 2BAP7TMS127, TMS-127 Pager and Buzzer, TMS-127, Pager and Buzzer</p>
--	---