

Contents [[hide](#)]

- [1 ToolkitRC M6D Multi Function Charger](#)
- [2 Introduction](#)
- [3 Product description](#)
- [4 M6D Layout](#)
- [5 Charge and discharge work](#)
- [6 System settings](#)
- [7 Other functions](#)
- [8 Specification](#)
- [9 FAQ](#)
- [10 Documents / Resources](#)
 - [10.1 References](#)

ToolkitRC

ToolkitRC M6D Multi Function Charger



Introduction

Thank you for purchasing the ToolkitRC M6D multi-function charger, please read this manual carefully before use.

Key Points

-  Tips
-  Important
-  Information

Further information

To ensure you have the best experience with this product please scan the QR code below to stay up to date with news, information and firmware updates for your charger.

Or visit www.toolkitrc.com

FOLLOW US



Safety

1. M6D allows input voltage of 7-28V. Please ensure that the power supply voltage is in line with this range. Pay attention to the positive and negative polarities of the power supply when connecting.
2. Do not use this product in a hot area or near a heat source. Do not use this product in a damp, flammable or explosive gas environment.
3. Only use this product while under direct supervision. No not leave charging batteries unattended.
4. When not using this product, please unplug the input power in time.
5. When using the charging function, please set the current matching with the battery.


Don't set excessive current charging, so as not to damage the battery.

Product description


M6D is a dual-channel balanced charger product. Small size, high power density, innovative design, charging accuracy can be as low as 5mV..

- Charge, discharge and balance management of LiPo, LiHV, LiFe Lion 1-6S, NiMh 1-16S, PB 1-10S batteries.
- **Charging current** Synchronous mode maximum 25A@MAX500W Asynchronous mode maximum 15A@MAX250W
- **Discharge current**
 - Recycle mode maximum 15A @250W *2
 - Normal mode maximum 3A @12W *2
- Lithium battery cut-off voltage can be set (TVC function).
- Constant current and constant voltage output, customizable 1-28V constant voltage, 1-15A constant current.
- Can be adapted to mainstream UAV batteries, automatically activated and charged.
- Multi-language system, can arbitrarily upgrade the required language.
- USB 2.1A@5.0V output, rechargeable mobile device.
- The device connects to PC like a USB drive for easy firmware upgrades. Simply copy and paste new firmware files to update.

M6D Layout

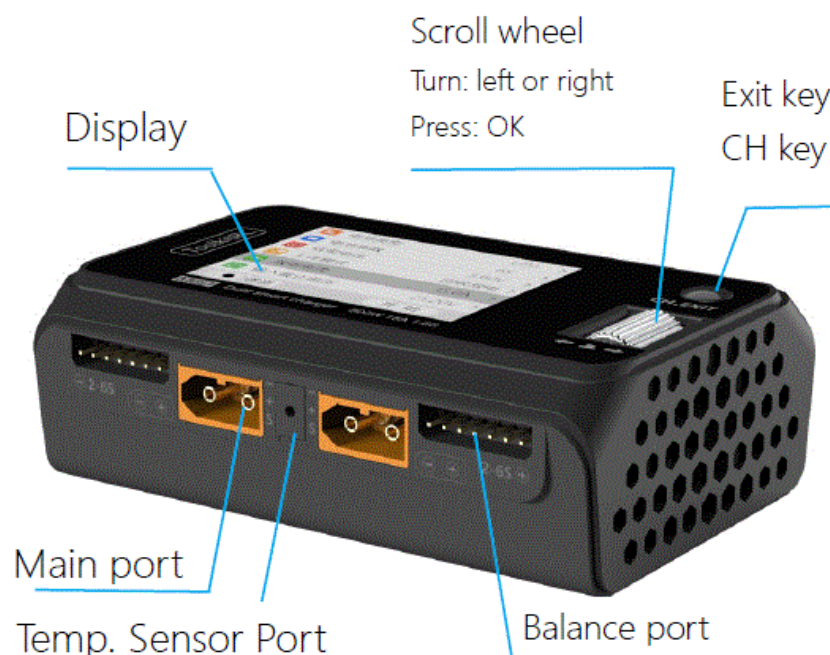


Front

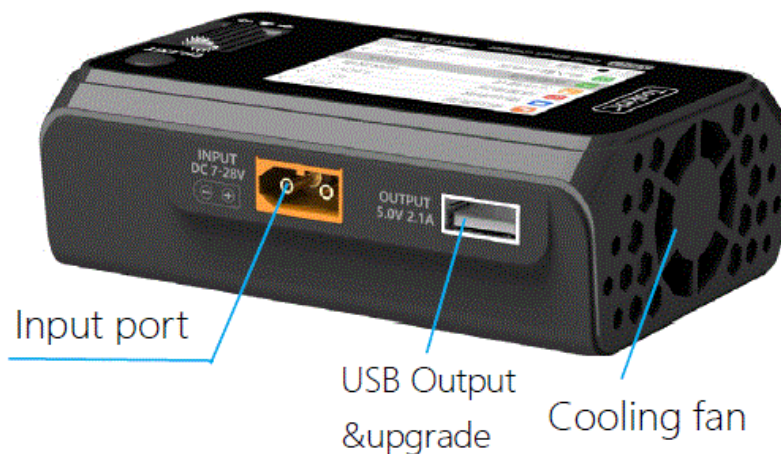

Quick start

1. Connect a 7-28V power supply or input battery to the input port on the back of the M6D.
2. The display shows the boot logo and stays for 2 seconds.
3. At the same time accompanied by do-re-mi's boot sound.
4. After booting, the display will enter the main interface and display as follows:

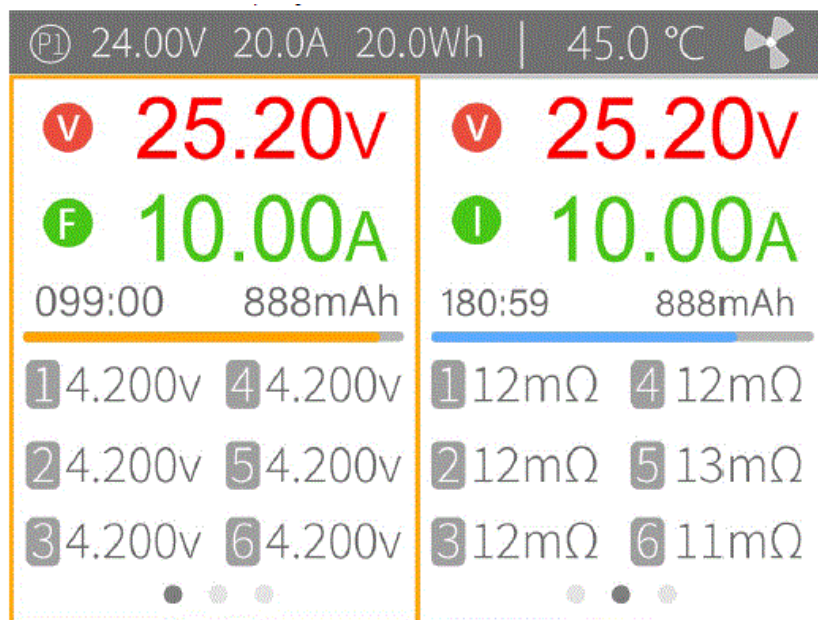

5. Short press [Exit], the cursor switches between the left and right channels.
6. Press and hold [EXIT] to start testing the internal resistance of the corresponding channel. After the test, the internal resistance will be displayed.
7. Scroll [Scroll Wheel] to switch the pages in the corresponding channel.
8. Short press [OK], can select the charging task when the channel is idle and can adjust and end the work when the channel is working.


- 9. Press and hold [OK] to enter the system setting interface when both channels are idle.
- 10. Press [Exit], to end the modification or return to the previous interface

=====

- 1. Short press [Scroll Wheel] once to confirm the key function
- 2. Press and hold [Scroll Wheel] for 2 seconds to delete the key function
- 3. If any key is operated successfully, there will be a di-di prompt tone.






Charge and discharge settings

Short press [OK] on the main interface to enter the charging function, the following interface is displayed.

	Battery selection		
LiPoAT	10.0A	Charger	>
NiMhAT	2.0A	DisCHG	>
New			>
New			>
New			>

Battery type


- Scroll [Scroll Wheel], move the cursor, select the stored battery type, or create a new battery, press [Enter] to enter the battery setting interface, the display is as follows:

	Battery Type	LiPo	>
	Cells	Auto	>
	Mode	Charge	>
	End Voltage	4.15V	>
	Charge Current	10.0A	>

☐ CH2

Start

- Move the cursor to [Battery Type] and press [OK] to modify the battery type, as shown below:

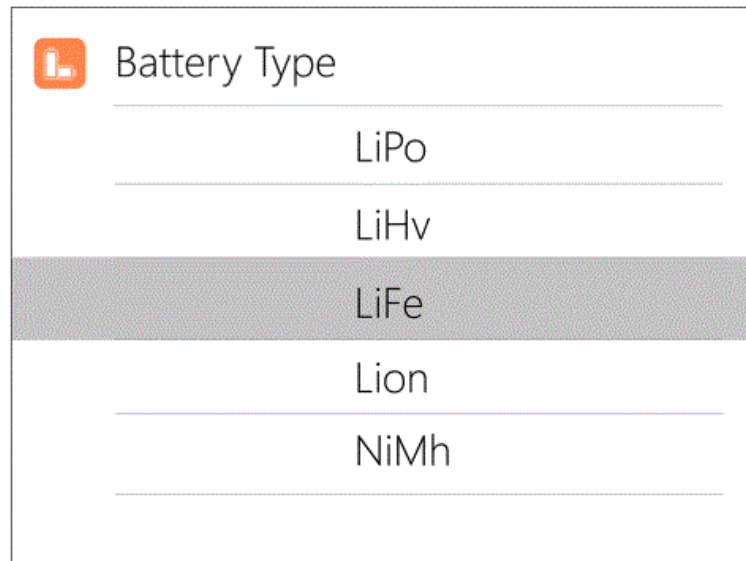

- The charger supports charging and discharging of 6 types of batteries: Lipo, LiHV, LiFe, Lion, NiMh, and PB. And two modes of power supply and the smart battery can be also selected. After selecting a battery that matches the actual battery. Short press [OK] and [Exit] to take effect and return to the previous interface.

Warning


1. Choosing the wrong battery type to charge may damage the battery, the charger, and the risk of burning, so please choose carefully.
2. Do not use this product to charge batteries that do not indicate the battery type.

Glossary of battery terms explanation

1. **LiPo:** often referred to as a lithium polymer battery with a nominal voltage of 3.70V and a fully charged battery of 4.20V.
2. **LiHV:** often referred to as a high-voltage lithium battery with a nominal voltage of 3.85V and a fully charged battery of 4.35V.
3. **LiFe:** often referred to as iron-lithium battery, with a nominal voltage of 3.30V and a fully charged battery of 3.60V.
4. **Lion:** often referred to as a lithium-ion battery with a nominal voltage of 3.60V and a fully charged battery of 4.10V.
5. **NiMh:** often called NiMH battery, nominal voltage 1.20V.
6. **PB:** often called lead-acid battery, nominal voltage 2.00V.

Number of cells

Move the cursor to the position of [Battery cell Number] and press [OK] to modify the number of battery cells. The display is as follows.

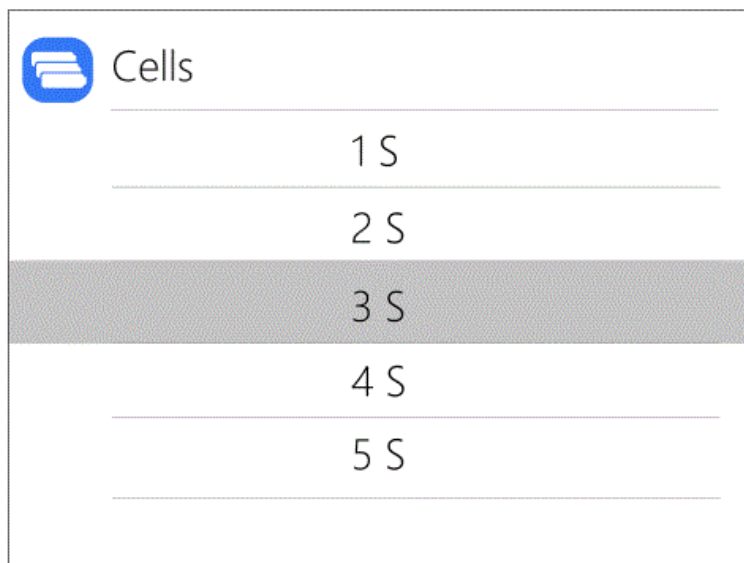


Turn [Scroll wheel] to adjust the value. When set to [Auto], the charger will automatically recognize the number of connected battery cells according to the battery voltage connected to the output port. Short press [OK] and [Exit] to take effect and return to the previous interface.

Tips

1. Over-discharging or over-charging of the connected battery may lead to incorrect recognition of the battery cell number, and it is necessary to manually set the correct cell number.
2. If the cell number is set incorrectly, it may not be fully charged, or the battery may be damaged by overcharging. Please set it carefully.
3. After Lixx battery is connected to the balance port, the number of battery cells can be more accurately identified.

Mode


Move the cursor to [Mode] and press [OK] to modify the working mode, as shown below:

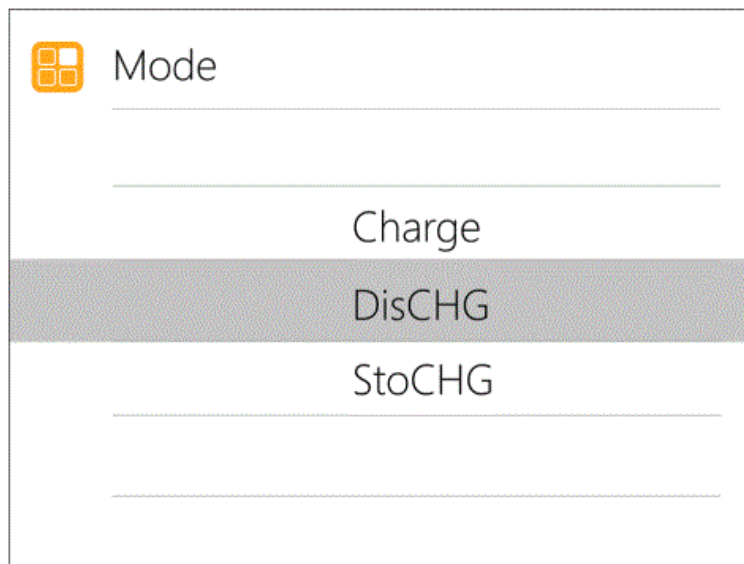


Lipo, LiHV, LiFe, Lion batteries can be charged, discharged, and stored. NiMh battery can choose to charge, discharge, cycle. PB battery can choose to charge and discharge. Short press [OK] and [Exit] to take effect and return to the previous interface.

Discharge mode

When the working mode selects discharge, storage, and cycle mode, the battery setting interface will increase the discharge mode. As shown below.

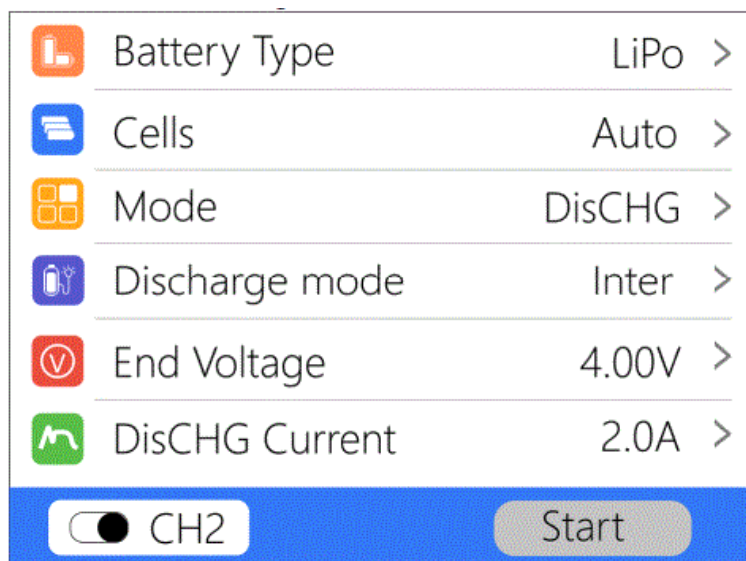

Move the cursor to [Discharge Mode] and press [OK] to modify the discharge mode, as shown below.

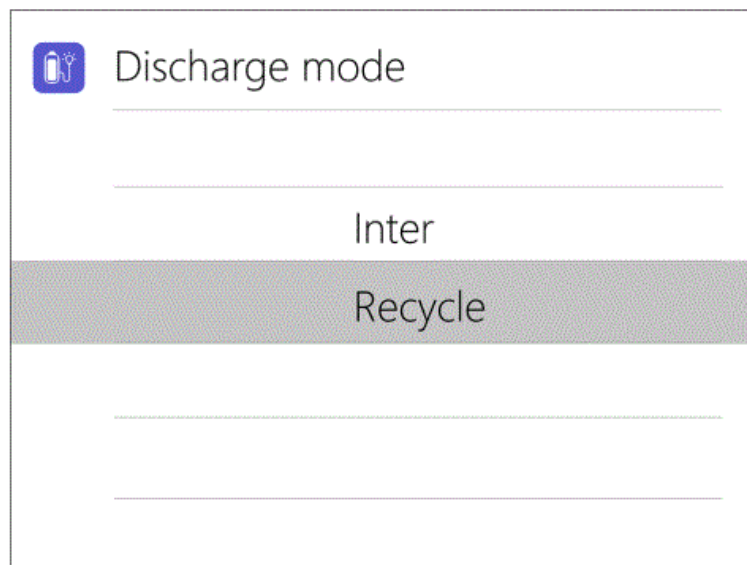


M6D supports two discharge modes.

1. Inter (Internal) Mode, discharge through internal heat consumption, maximum support 3.0A@12W discharge.
2. Recycle mode, when the input is a suitable battery, this function can recover the electric energy from the discharging battery to the input battery, the maximum support is 15.0A@250W discharge.

Input MaxVoltage

When the discharge mode is selected to recycle, the battery setting interface will increase the input MaxVol setting. As shown below.

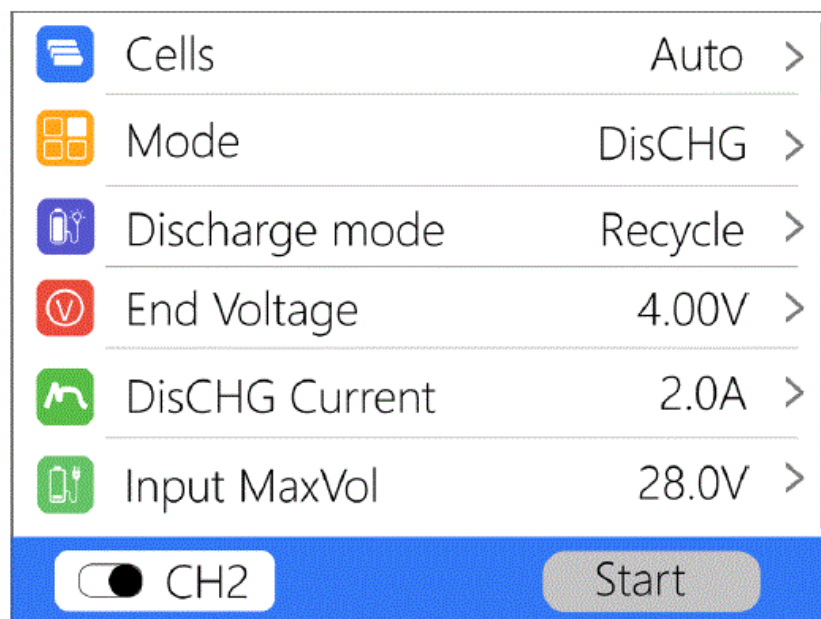


Move the cursor to [Discharge Mode] and press [OK] to adjust the input MaxVol. If the input voltage reaches this voltage during discharge, the discharge will stop.

Tips

Please set the input cut-off voltage within the safe voltage range of the power supply battery. After the voltage is reached, the charger will automatically stop recycling and discharging. Setting a high over-voltage may damage the input power battery.

End voltage TVC

Move the cursor to [End Voltage] and press [OK] to modify the end voltage of the single battery. When the working mode is charging, it is the charging cut-off voltage, and the range is plus or minus 50mV of the full voltage. When the working mode is discharge, it is the discharge cut-off voltage. Scroll the [Scroll Wheel] to adjust the value in steps of 0.01V.

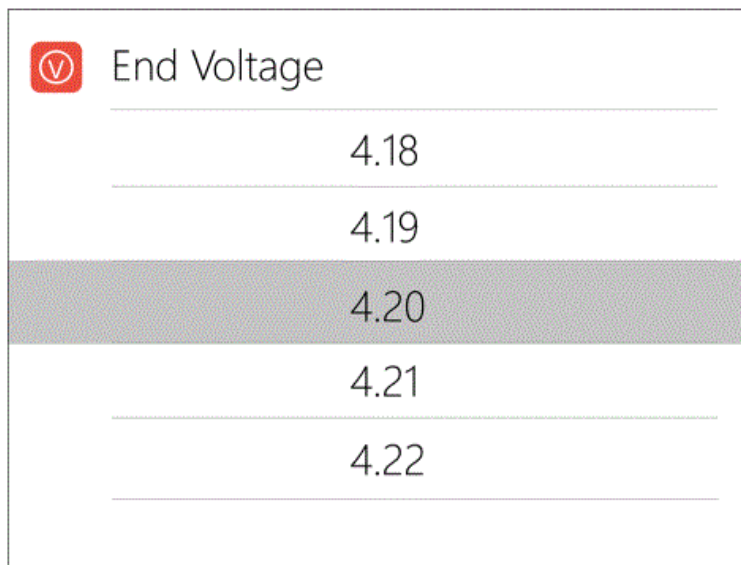

The screenshot shows a menu titled "End Voltage" with a red voltage icon. Below the title is a list of voltage values: 4.18, 4.19, 4.20, 4.21, and 4.22. The value 4.20 is highlighted with a grey background. The values are separated by horizontal lines.

End Voltage
4.18
4.19
4.20
4.21
4.22


1. Only LiPo, LiHV, LiFe batteries can set the end voltage.
2. If not familiar with battery characteristics, please do not modify the cut-off voltage.
3. The charging cut-off voltage can be set to a range of plus or minus 50mV of full voltage.

4. Glossary explanation:

TVC: English abbreviation for terminal voltage control

Current setting

Move the cursor to the position of [Charge Current] or [Discharge Current] and press [OK] to modify the current. Rotate the [Scroll Wheel] to adjust the value and step 0.1A. Quickly scroll [Scroll Wheel] to quickly increase or decrease. The charger supports up to 15.0A. In synchronous mode, maximum support 25A.

 Charge Current

9.8A

9.9A

10.0A

10.1A


10.2A

Tips

1. Please set the charging rate of 1-2C according to the battery capacity.
For example: For a battery with a capacity of 2000mAh, please set the charging current to 2.0-4.0A as appropriate.
2. Charging and discharging current are only valid in the corresponding working mode
3. For the setting of discharge mode, please refer to the chapter of <System Settings> in this manual =====

NiMH setting (PeakV)

When the battery type is NiMh, can set the negative pressure value when the battery is fully charged, the range is 5mV-15mV, as shown below.

 NiMh Peak

5mV

6mV

7mV

8mV

9mV


Tips

1. Only NiMh battery can set negative battery voltage.


2. Glossary explanation: PeakV: When the nickel-metal hydride battery is fully charged, the voltage drop of each piece peaks.

Cycle setting


- When the battery type is NiMh, and the work mode is selected to cycle, the battery setting interface will increase the number of cycles and the rest time setting. As shown below.

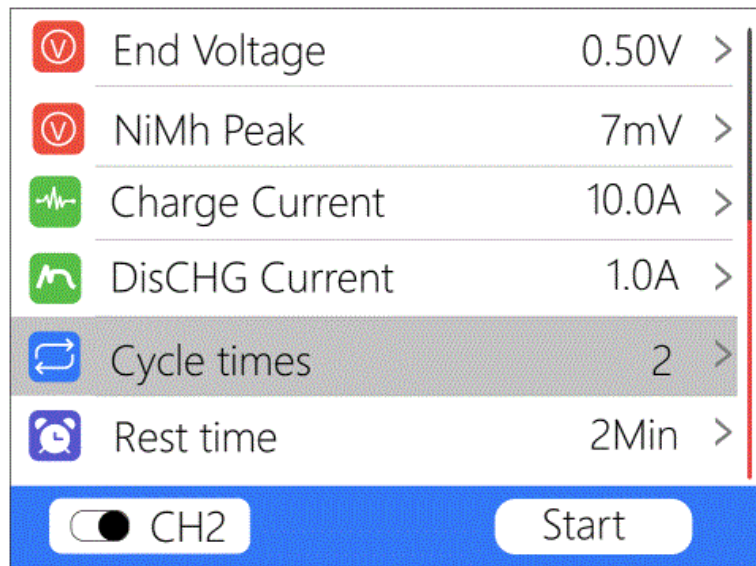

- Move the cursor to [Cycle times] and press [OK] to set the cycle times to 2-12. The charger will follow the pattern cycle of discharging-> charging-> discharging-> charging ... “Discharge-> Charge” is 2 times.

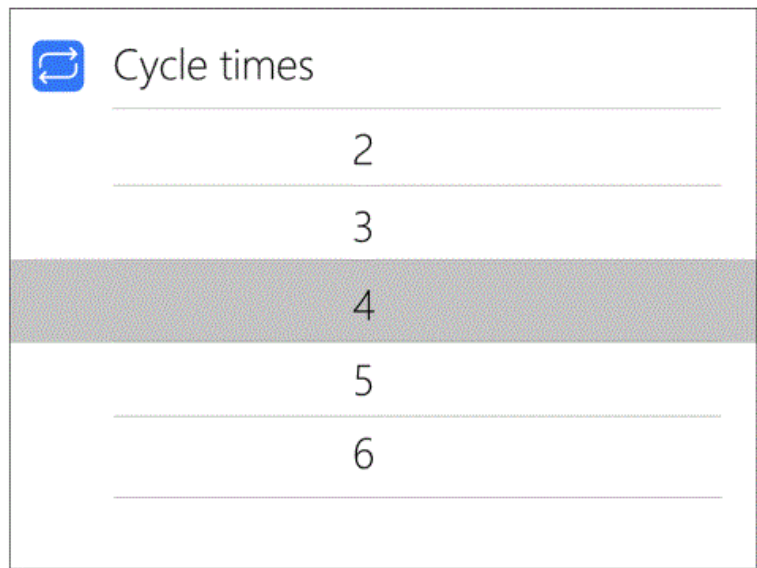

- Move the cursor to [Rest time] and press [OK] to set the interval time of the cycle charging. The range is 2 to 10 minutes. As shown below.



Rest time

2 Min

3 Min


4 Min

5 Min

6 Min

Power mode setting

- When the battery type is power, the battery setting interface only has two options: output voltage and maximum current. As shown below.

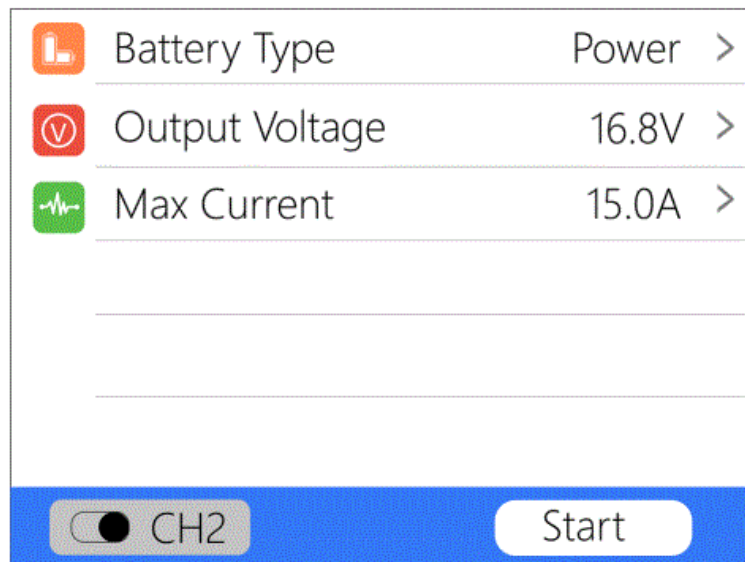


Battery Type	Power	>
Output Voltage	16.8V	>
Max Current	15.0A	>

CH2 Start


- Move the cursor to [Output Voltage] and press [OK] to modify the output voltage. The voltage range is 1V to 28V. Move the cursor to [Max Current] and press [OK] to modify the maximum current, which is the maximum current of the output power supply. The range is 0.5A to 15A.

Smart battery

- When the battery type is smart battery, the battery settings are only the drone type and maximum current. As shown below.

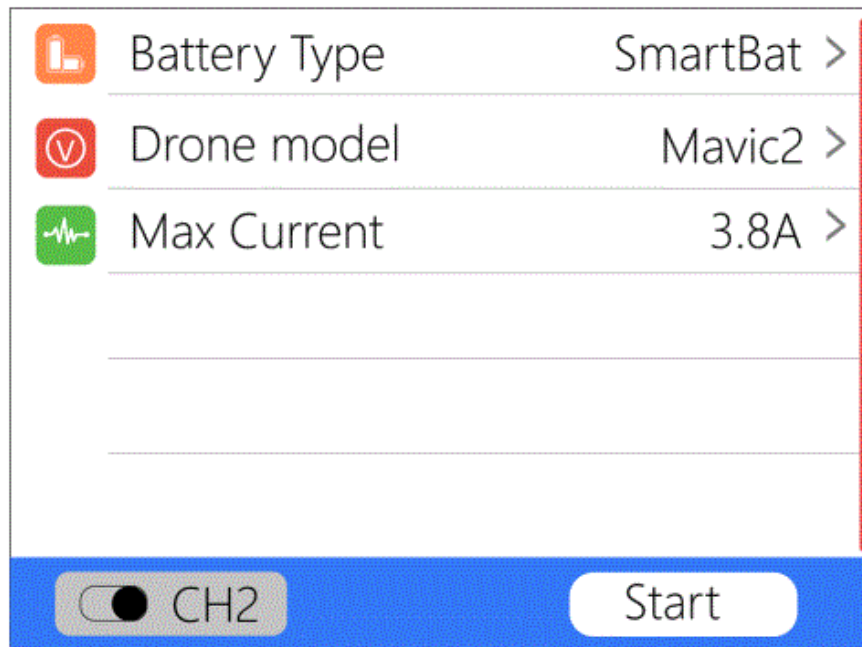


- Move the cursor to [Drone model] and press [OK] to select different drone models. As shown below.

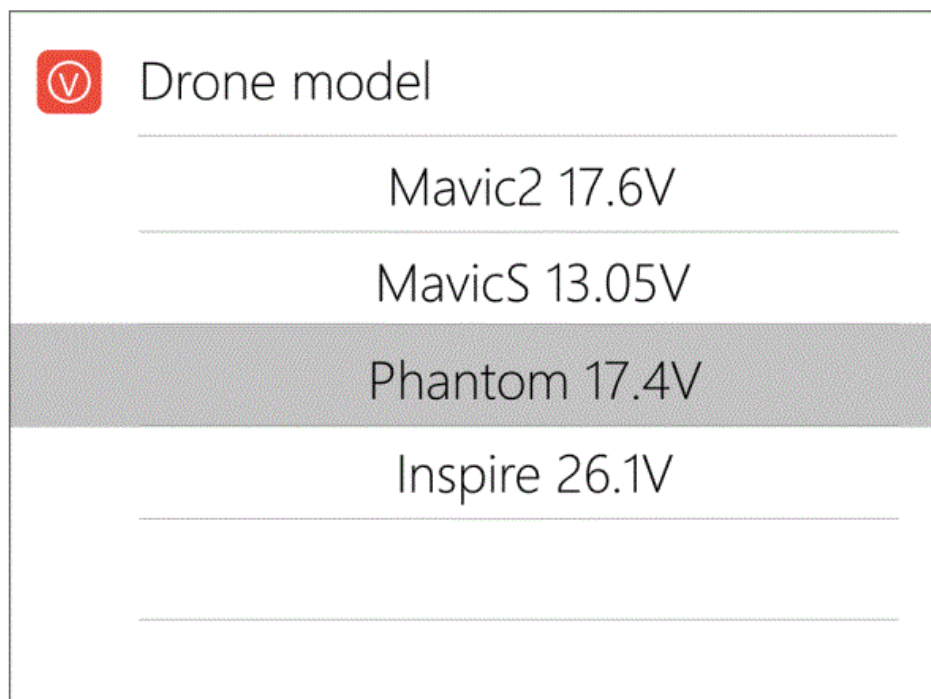

- Move the cursor to [Max Current] and press [OK] to set the charging current. The range is 0.5A to 15A.


Synchronous mode

In the settings menu, when the synchronization function is turned on. The M6D will allow two channels to charge the same battery with a total current of 25A. Connect as shown below.

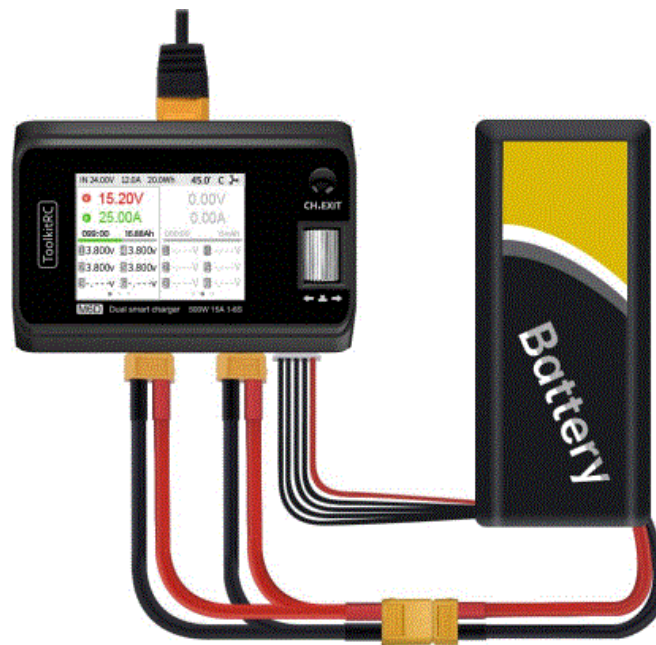


Charge and discharge work

- When charging and discharging starts, the charger enters the working interface as shown below.

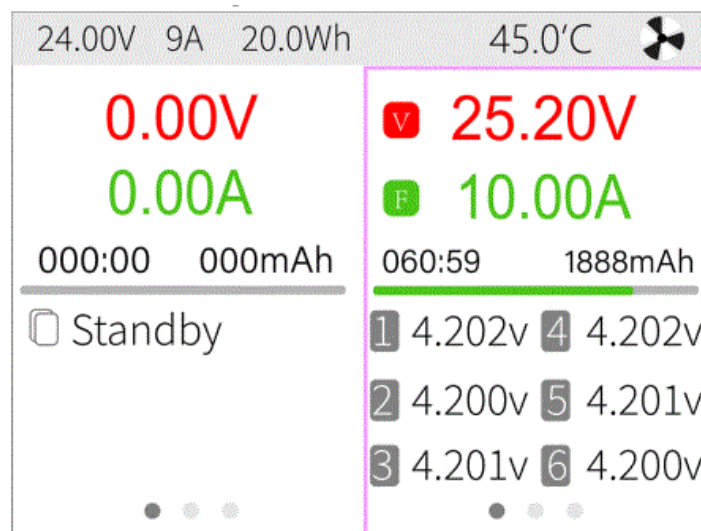

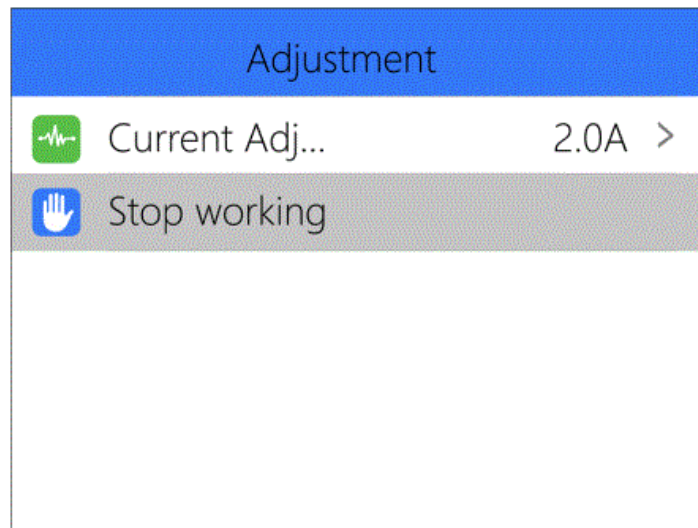


- Rotate the [Scroll wheel] on this interface to switch the bottom status information and internal resistance voltage value. Short press [OK] to dynamically set the working current or stop working. As shown below.




- To end the charge and discharge work, short press [OK], move the cursor to [Stop working], short press [OK], stop work and return to the main interface.
- When charging is completed or an error occurs during charging, a prompt box pops up and a tone sounds.

Display content description

- **24.00V Input** power supply voltage
- **9A Input** power current
- **20.0Wh Total** power consumption of input power 45.0°C Charger internal temperature.
- **V:** Constant pressure sign. **C** Constant current sign. **F:** Current limit sign. **P:** power, **I:** Input overcurrent, **C:** Maximum current, **A:** Activate charging, **F:** The main port is full voltage or a single chip is full voltage.
- **25.20V** Second channel main port voltage. **10.00A** Second channel main port current.
- **060:59** Second channel working time.
- **1888mAh** Cumulative capacity of the second channel. 1 **4.202V** 1st battery voltage
.....
- **4 4.200V** 4th battery voltage(this cell is in balance management)
- **-.—V** No battery connected
-  **Constant voltage flag.** **C:** Constant current sign.
-  **Current limit sign.** **P:** Power limit, **I:** Input limit, **C:** Maximum current **A:** Activate charging, **F:** Main port voltage or single cell voltage is full
- **Scroll** [Scroll Wheel] to switch to the second column of the second channel, which is the internal resistance information. As shown below.

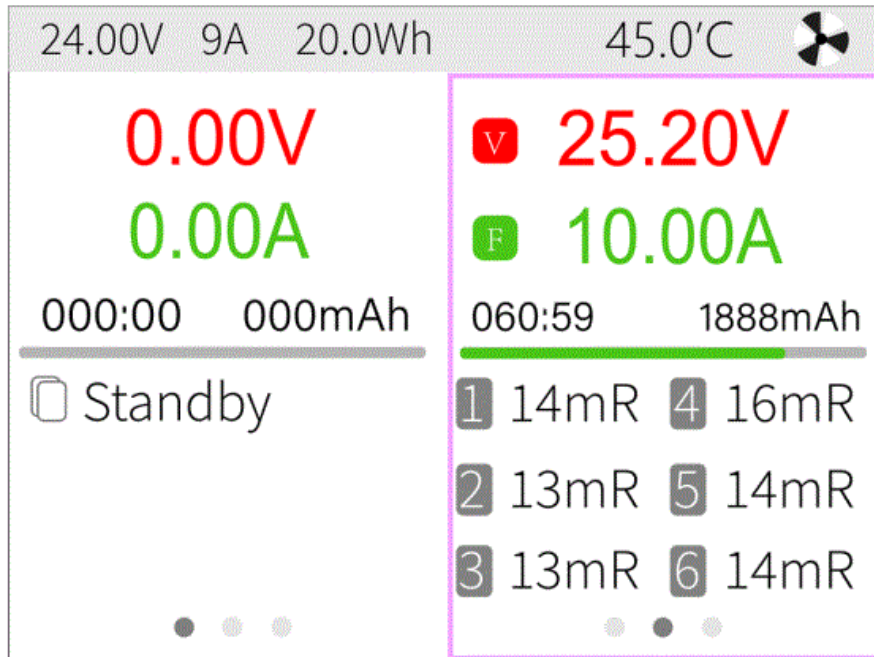

- **14mΩ** Internal resistance of the first battery Scroll [Scroll Wheel] to switch to the third column of the second channel, which is the information bar. As shown below.

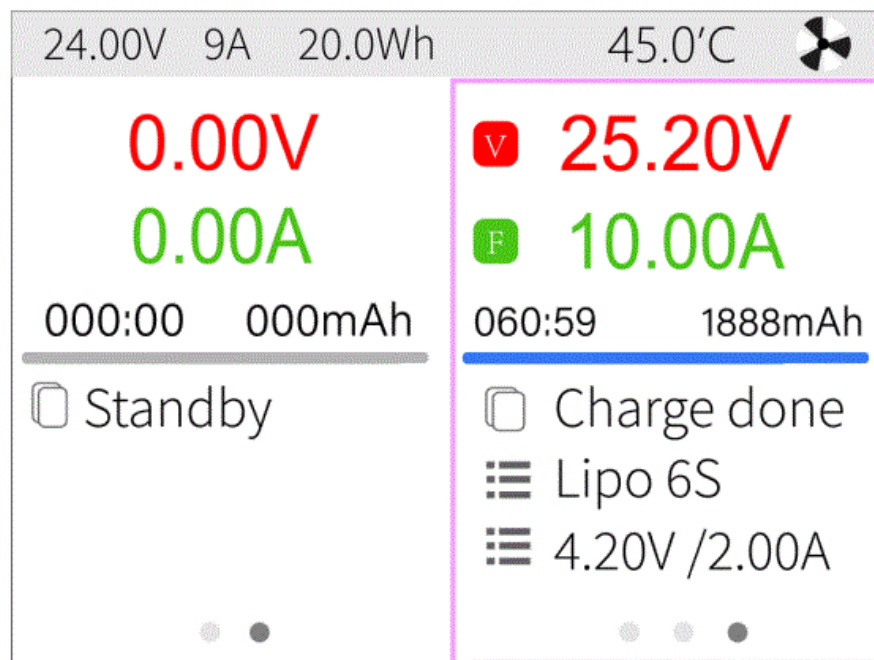

- **Charge done:** indicates the current charging status. Lipo 6S: the current rechargeable battery type and battery number.
- **4.20V/2.00A** Current battery end voltage and charging current.

Tips:


1. When charging and discharging, please directly supervise throughout the process to deal with the abnormality in time. Do not leave charging or discharging batteries unattended.
2. When charging and discharging lithium batteries, only connecting to the main port will

not perform balance management. Please pay attention to the balance of the battery. Connecting the balance lead is recommended and will automatically begin balance management.



3. After the charging is completed, unplug the battery and connect a new battery, it will automatically continue to charge and discharge according to the set mode (if continuous work mode is selected). When set to a fixed number of cells, you need to connect the batteries of the same cells and capacity. When set to automatically detect the number of battery cells, please pay attention to whether the detected number of cells is consistent with the actual battery.

System settings

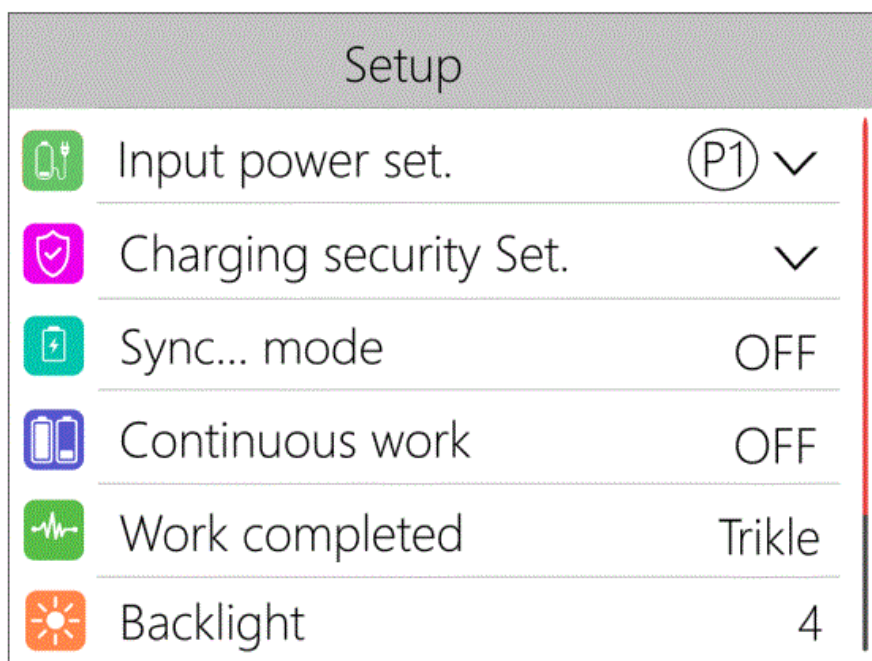

After long-pressing [OK] on the main interface, you can enter the system setting interface when both channels are idle, as shown below.



- **Input power settings:** Enter the relevant settings of the power supply. After long-pressing, can select power supply 1, power supply 2, and power supply 3. Short press to expand settings. As shown below.


Setup		
	Input power set.	(P1) ^
	Power type	Battery
	Max power	560W
	Max current	30.0A
	Voltage range	7.0-28.0V
	Charging security Set.	✓

- **Power type:** Battery and adapter (PSU). A battery can be used to recover energy when discharging batteries (Recycle mode). This mode also provides greater current draw than internal resistance discharging. Recycle mode can not be used with a Power Supply Unit (PSU) or any form of mains power adapter
- **Max power:** the maximum power absorbed from the input port when charging.
- **Max current:** the maximum current drawn from the input port during charging.
- **Voltage range:** the allowable input voltage range. Charging security Set.: Short press to expand settings. As shown below.

Setup		
	Input power set.	(P1) ✓
	Charging security Set.	^
	Safe Inter. Temp.	80'C
	Safe Exter. Temp.	60'C
	Safe time	200Min
	Safe capacity	30Ah

- **Safe Inter. Temp.:** Above this temperature value, the device will stop the main port output.
- **Safe Exter. Temp.:** If the external sensor detects a temperature higher than this temperature, the device will stop the main port output.

- **Safe time:** the maximum time of continuous charge and discharge, beyond which it will stop working.
- **Safe capacity:** the maximum capacity of continuous charge and discharge, beyond which it will stop working. Synchronization mode: can be set to open or not. After opening, the two channels will work synchronously. Support more power.
- **Continuous work:** When selected the charger will automatically continue the same charging settings on the next connected battery. Ensure the next connected battery requires the same settings as the previous battery that was being charged.
- **Work completed:** After charging, whether to stop or trickle charge.
- **Backlight:** The backlight brightness level of the display can be set from 1 to 10 levels

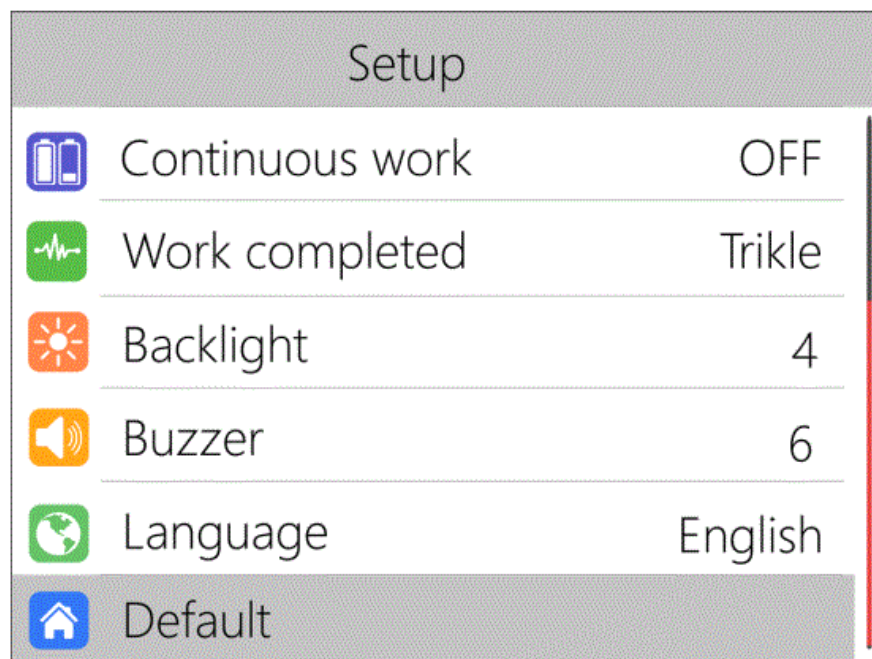

- **Buzzer:** The tone of the buzzer can be set to off. Language: The system display language. English, Chinese, etc. can be selected.
- **Default :** Restore all settings to factory defaults.

Other functions

1. Firmware upgrade

After connecting the M6D to the computer with the USB cable in the box, the computer will recognize a USB disk named Toolkit, download the upgrade file app.upg on the official website Copy and Paste the new file to overwrite the previous files in the USB disk, and the firmware can be upgraded.

2. USB 5.0V output

In addition to the above upgrade function, the USB interface can also output 2.0A current to charge mobile devices.

3. **Automatically continue to charge and discharge**

When a battery is fully charged, unplug the battery for 2 seconds, connect the next battery, the device will continue to charge and discharge automatically, you can set the menu to start and stop this function (Continuous work mode)

4. **Fan level**

When the internal temperature of the device exceeds 45°C, the fan turns on half-speed airflow to reduce noise. When the internal temperature exceeds 53°C, the fan turns on full-speed airflow to enhance heat dissipation.

5. **Manual voltage calibration**

In the shutdown state, press and hold [Scroll Wheel] and do not release, connect the power supply, the system will enter the manual calibration voltage function. Measure the actual voltage of each battery with a voltmeter, move the cursor to the corresponding voltage value, modify the voltage value to be consistent with the voltmeter value, and achieve calibration. After the calibration is completed, move the cursor to save, short press once, the buzzer will beep once, and the save is successful. Just log out or shut down

6. **Fully charged**

When the lithium battery is charged, it prompts “Fast charging has ended”. If the battery is not removed, constant voltage trickle charging will be performed automatically to make the battery more fully charged.

Specification

Charging	Input	7-28V@MAX30A
	Battery Type	LiPo LiHV LiFe Lion LTO@1-6S NiMh @1-16S Pb @1-10S
	Bal Cur.	800mA @2-6S
	Accuracy	<0.005V
	Charging Power	0.1-15A@250W *2 Asyn mode 0.1-25A@500W S ync mode

	Discharging Power	0.1-15A@250W*2 Recycle Mode 0.1-3A@12W*2 Normal Mode
	USB	2.1A@5V upgrade@USB3.0
	Battery Voltage	1.0V-5.0V @1-6S
	Battery Internal Resistance	1-100mR @1-6S
Display	LCD	IPS 2.4 inch 320*240 resolution
Product	Size	98mm*68mm*35mm
	Weight	220g
Individual packaging	Size	108.5mm*80.5mm*46mm
	Weight	300g

FAQ


- **How do I update the firmware on the M6D charger?**
 - To update the firmware, connect the charger to a PC via USB like a USB drive. Copy and paste the new firmware files onto the charger to initiate the update process.
- **What are the maximum charging and discharging currents supported by the M6D charger?**
 - The M6D charger supports a maximum charging current of 25A@MAX500W in synchronous mode and 15A@MAX250W in asynchronous mode. The maximum discharge current is 15A @250W *2 in recycle mode and 3A @12W *2 in normal mode.
- **Can I charge different types of batteries with the M6D charger?**
 - Yes, the M6D charger is compatible with various battery types including LiPo, LiHV, LiFe, Lion, NiMh, and PB batteries with different cell configurations.

Documents / Resources

M6D

Manual V1.2

2025-03



ToolkitRC

www.toolkitrc.com

ToolkitRC Technology (Shenzhen) Co., Ltd

1


© ToolkitRC 2025


[ToolkitRC M6D Multi Function Charger \[pdf\]](#) Instruction Manual

M6D, M6D Multi Function Charger, Multi Function Charger, Function Charger, Charger

References

- [User Manual](#)

 charger, Function Charger, M6D, M6D Multi Function Charger, Multi Function Charger,

 ToolkitRC ToolkitRC

Leave a comment

Your email address will not be published. Required fields are marked *

Comment *

Name

Email

Website

☐ Save my name, email, and website in this browser for the next time I comment.

Post Comment

Search:

e.g. whirlpool wrf535swhz

Search

[Manuals+](#) | [Upload](#) | [Deep Search](#) | [Privacy Policy](#) | [@manuals.plus](#) | [YouTube](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.