



REMOTE  
CONTROL  
RATTLE  
SNAKE



# Top Race TR-A22 Remote Control Rattle Snake User Manual

[Home](#) » [Top Race](#) » Top Race TR-A22 Remote Control Rattle Snake User Manual 

## Contents

- [1 Top Race TR-A22 Remote Control Rattle Snake](#)
- [2 INTRODUCTION](#)
- [3 SPECIFICATIONS](#)
- [4 WHAT'S IN THE BOX](#)
- [5 PRODUCT OVERVIEW](#)
- [6 FEATURES](#)
- [7 PRODUCT REMOTE](#)
- [8 SETUP GUIDE](#)
- [9 CARE & MAINTENANCE](#)
- [10 TROUBLESHOOTING](#)
- [11 PROS & CONS](#)
- [12 WARRANTY](#)
- [13 FREQUENTLY ASKED QUESTIONS](#)
- [14 References](#)
- [15 Related Posts](#)



**Top Race TR-A22 Remote Control Rattle Snake**



## INTRODUCTION

A fascinating and realistic toy that will keep youngsters and adults entertained for hours on end is the Top Race TR-A22 Remote Control Rattle Snake. This remote-controlled snake's realistic movement and rattling sound make it ideal for playing practical jokes on friends or just having fun in a different way. The TR-A22 is a great gift option for kids 4 years old and up, especially at its reasonable \$20.99 pricing. The snake is easy to handle and control because to its small size, measuring only 11.97 x 8.46 x 2.05 inches when packaged, and its lightweight construction weighing only 8 ounces. With the help of three LR44 batteries, this snake realistically slithers around the floor, adding a bit of the wild to your house. The TR-A22 Remote Control Rattle Snake, made by Top Race, a company renowned for producing imaginative and durable toys, is guaranteed to be a hit during any playtime.


## SPECIFICATIONS

<b>Brand</b>	Top Race
<b>Product Name</b>	Remote Control Rattle Snake
<b>Price</b>	\$20.99
<b>Package Dimensions</b>	11.97 x 8.46 x 2.05 inches
<b>Item Weight</b>	8 ounces
<b>Batteries Required</b>	3 LR44 batteries
<b>Manufacturer Recommended Age</b>	4 years and up
<b>Manufacturer</b>	Top Race

**WHAT’S IN THE BOX**

- Remote Control
- Battery
- Rattle Snake
- Manual

**PRODUCT OVERVIEW**

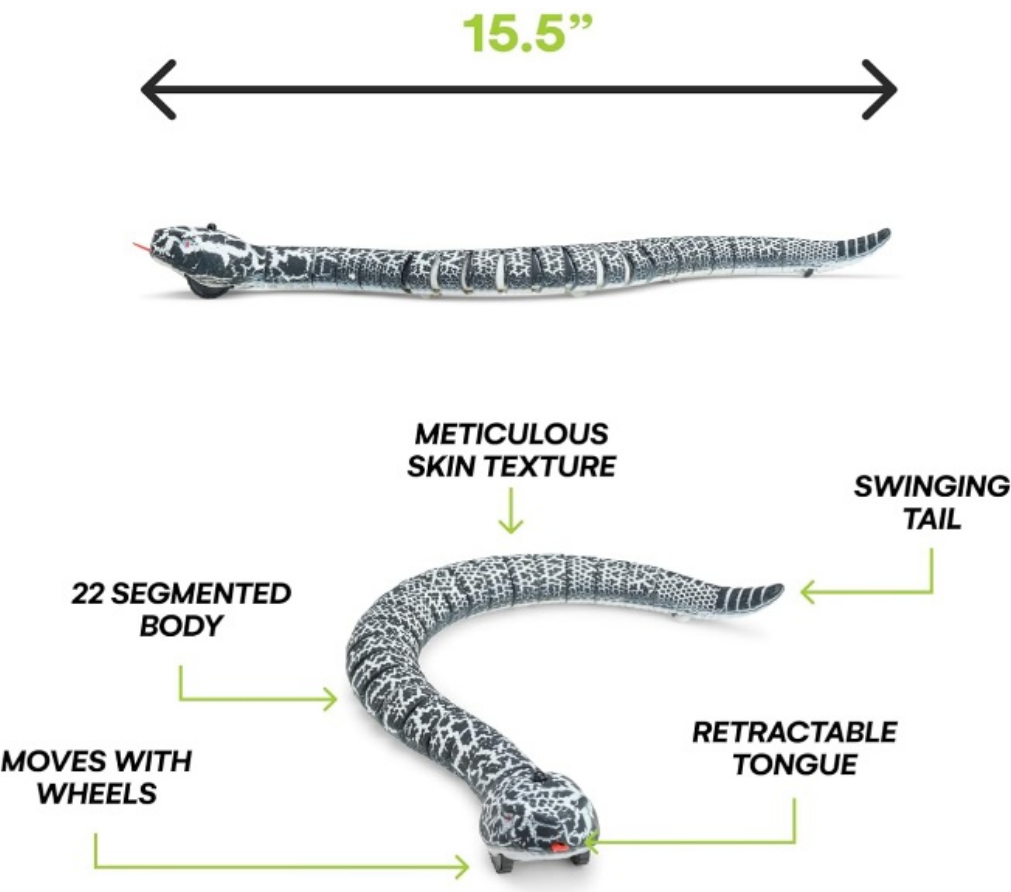

## FEATURES

- **Realistic Reptilian Design:** With its scaly skin, retractable tongue, and swinging tail, the TR-A22 remote control rattle snake has an incredibly lifelike appearance.
- **Impressive Length:** At nearly 16 inches long, this remote control snake is big enough to have a noticeable effect when playing or pulling practical jokes.
- **Quick Movement:** The snake's swift movement adds to its realism and increases its usefulness for tricks and amusement.
- **Multiple Direction Control:** The snake's ability to move in three directions—left, right, and forward—makes for a realistic and interesting range of movement patterns.
- **Infrared Receiver:** The snake is easily controlled from a distance by means of an infrared receiver in the shape of an egg.
- **20-Foot Control Range:** You may arrange practical jokes from a safe distance with the infrared receiver's control range, which is about 20 feet.
- **Retractable Tongue:** The snake's ability to retract and extend its tongue while in motion gives it a more realistic aspect.
- **Swinging Tail:** To add to the realism of the snake's motions, its tail swings as it slithers.
- **Perfect for Pranks:** This remote-control snake is a fun toy for both kids and adults, and it's great for pulling practical jokes on friends and family.
- **Battery-Powered Receiver:** The snake may be used immediately because the receiver is powered by three LR44 batteries, which are included.
- **USB Rechargeable Snake:** Keeping the fun continuing is made convenient and environmentally friendly by the snake's USB rechargeability.
- **Lightweight Design:** At just 8 ounces, the snake has a manageable weight that is ideal for kids 4 years old and up.
- **Robust Design:** Constructed from premium materials, the TR-A22 is designed to resist repeated use and hard play.
- **Small Package:** Measuring just 11.97 x 8.46 x 2.05 inches, the snake's small package makes it simple to store and move.
- Reasonably priced at \$20.99, this remote control snake is a wonderful deal for the money, giving hours of fun at a reasonable expense.



**Retractable Tongue  
and Swinging Tail**




**Moves in 3  
Different Directions**



**Three Different  
Frequencies**

**PRODUCT REMOTE**

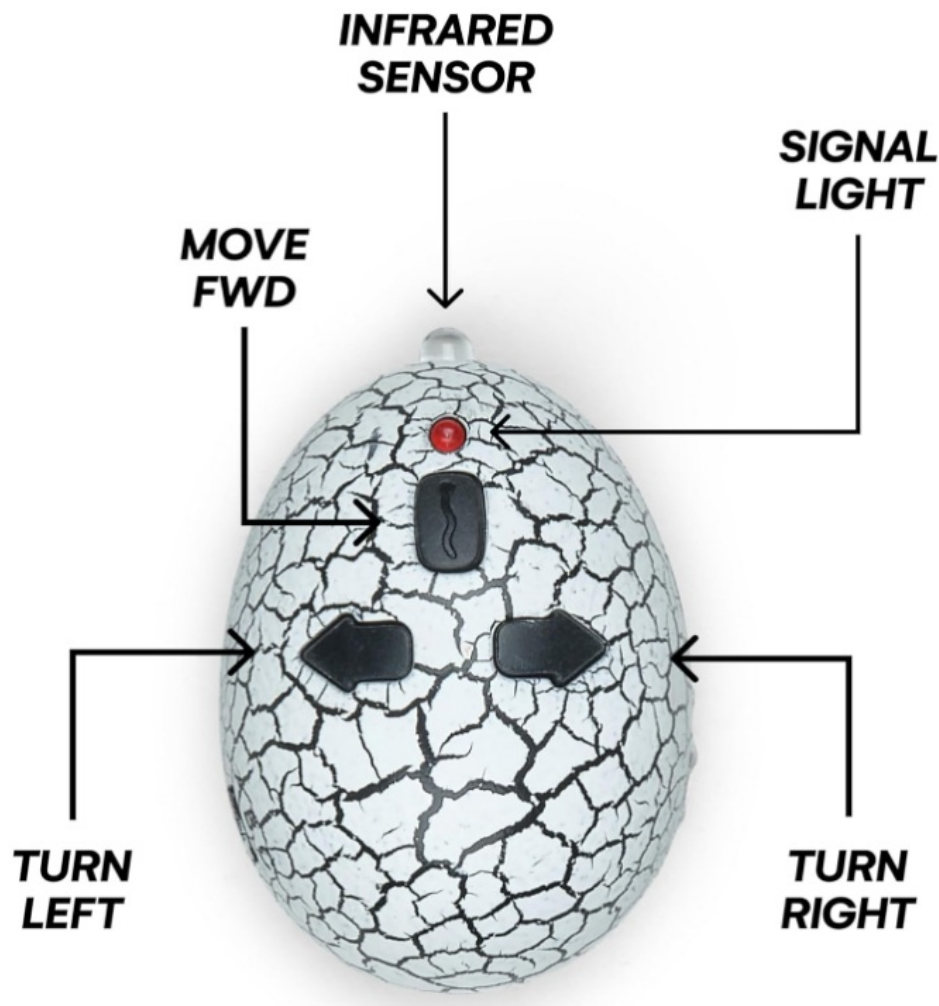

## SETUP GUIDE

- **Unpack the Snake:** Take the infrared receiver, USB charging cord, batteries, and TR-A22 snake carefully out of the packing.
- **Charge the Snake:** Using the provided USB cable, connect the snake to a power source and give it a full charge before using it for the first time.
- **Place Batteries in the Receiver:** Carefully open the infrared receiver's battery box and place three LR44 batteries inside, making that they are polarized correctly.
- **Activate the Snake:** To activate the snake, hit the power button, which is often found on its underside.
- **Switch on the Receiver:** To initiate communication with the snake, switch on the infrared receiver by pushing the assigned button.
- **Test Basic motions:** Test the snake's left, right, and forward basic motions using the infrared receiver.
- **Examine the Tongue and Tail:** Make sure the snake's retractable tongue and swaying tail are in good working order by keeping an eye on them.
- **Examine the Control Range:** To make sure the receiver functions properly, move the snake up to 20 feet away to test the control range.
- **Choose a Play Area:** Pick a spot that will work well for the snake to play, either indoors or outside, and provide it ample room to walk around.
- **Start with a Test Run:** To get a feel for the controls and the snake's movements, start with a slow test run.
- **Arrange Your Joke:** If you're preparing a joke, try manipulating the snake covertly and place it in a strategic location.
- **Watch Battery Levels:** To guarantee continuous play, keep a watch on the receiver's and snake's battery

levels.

- **Use on Smooth Surfaces:** The snake works best on level, smooth surfaces where it can move with ease.
- **Store Safely:** To avoid damage, switch off the receiver and the snake after using them, then put them somewhere secure.
- **Charge After Use:** To make sure the snake is prepared for the next play session, recharge it after each usage.

## CARE & MAINTENANCE

- **Routine Cleaning:** To remove dust and debris, wipe the snake down with a dry or slightly damp towel after each usage.
- **Battery maintenance:** Change the batteries in the receiver when they begin to lose power and recharge the snake's battery as needed.
- **Prevent Water Exposure:** To avoid damaging the electronic components, keep the receiver and snake away from damp or water.
- **Examine the Snake Frequently for Any Loose pieces:** Tighten any loose screws or pieces that you find.
- **Keep in a Dry Place:** To avoid moisture accumulation that can harm the materials, keep the snake in a cold, dry place.
- **Avoid Rough Handling:** Promote gentle play to keep the snake from being dumped or smacked into hard objects, as these actions may result in harm.
- **Keep an eye on Battery Life:** Change the receiver's batteries if the connection becomes erratic or the control range shrinks.
- **Avoid Overuse:** To prevent the electronic parts from overheating, let the snake relax after prolonged play.
- **Examine the Receiver:** Frequently examine the infrared receiver for indications of deterioration or wear, paying particular attention to the buttons and battery compartment.
- **Safe Storage of the USB Cable:** Make sure the USB charging cable is kept in an area where it won't get misplaced or damaged.
- **Use on Appropriate Surfaces:** To guarantee that the snake moves correctly and doesn't become trapped, operate it on smooth surfaces.
- **Steer clear of Direct Sunlight:** Extended exposure to direct sunlight may cause the snake's plastic components to deteriorate or fade in color.
- **Stay Away from Small Parts:** To prevent choking hazards, make sure that all small parts, including the batteries, are stored together and out of small children's reach.
- Recharge the snake as soon as possible after each usage to make sure it's prepared for the following gaming session.

## TROUBLESHOOTING

Issue	Possible Cause	Solution
Snake not moving	Batteries are dead	Replace the batteries with fresh ones.
Remote control unresponsive	Weak batteries in remote	Replace the remote control batteries.
Snake stops mid-motion	Signal interference	Move to an area with less signal interference.
Snake not rattling	Batteries may be low	Replace the batteries with new ones.
Limited range on remote control	Weak batteries	Ensure the remote has fresh batteries.
Snake moves slowly	Batteries are running low	Replace with fully charged batteries.
Buttons on remote not working	Dust or debris inside buttons	Clean the remote control carefully.
Snake not responding to commands	Signal obstruction	Ensure there are no obstructions between the remote and the snake.
Snake only moves in one direction	Malfunctioning remote	Try resetting the remote or replacing batteries.
Remote control signal is weak	Interference from other devices	Avoid using near other remote-controlled devices.
Snake movement is jerky	Low battery power	Replace the batteries with fresh ones.
Snake not turning as expected	Misalignment of wheels or mechanisms	Check and adjust the wheels or mechanisms.
Rattling sound is faint	Low battery power	Replace with new batteries.
Remote control LED not lighting up	Dead batteries	Replace the remote batteries.

## PROS & CONS

### PROS:

1. Realistic design with lifelike movement and rattling sound.
2. Compact and lightweight, easy for kids to handle.
3. Affordable price for a unique and fun toy.
4. Great for pranks and imaginative play.
5. Simple remote control operation.

### CONS:

1. Requires 3 LR44 batteries (not included).
2. Limited battery life with frequent use.
3. Not suitable for very young children due to small parts.
4. May not perform well on rough surfaces.
5. Limited range on the remote control.



## WARRANTY

The Top Race TR-A22 Remote Control Rattle Snake comes with a 90-day limited warranty. This warranty covers any defects in materials and workmanship under normal use. If the product encounters any issues due to manufacturing defects, Top Race will repair or replace the toy at no additional cost. Retain your proof of purchase to facilitate any warranty claims.

## FREQUENTLY ASKED QUESTIONS

What is the Top Race TR-A22 Remote Control Rattle Snake?

The Top Race TR-A22 is a remote-controlled rattle snake toy that mimics the movements and sounds of a real snake, designed for children aged 4 years and up.

How much does the Top Race TR-A22 Remote Control Rattle Snake cost?

The Top Race TR-A22 is priced at \$20.99.

What are the package dimensions for the Top Race TR-A22 Remote Control Rattle Snake?

The package dimensions are 11.97 x 8.46 x 2.05 inches.

What is the weight of the Top Race TR-A22 Remote Control Rattle Snake?

The Top Race TR-A22 weighs 8 ounces.

What type of batteries does the Top Race TR-A22 Remote Control Rattle Snake require?

The Top Race TR-A22 requires 3 LR44 batteries.

What is the recommended age range for the Top Race TR-A22 Remote Control Rattle Snake?

The Top Race TR-A22 is recommended for children aged 4 years and up.

What are the key features of the Top Race TR-A22 Remote Control Rattle Snake?

Key features include realistic rattling sound effects, snake-like movements controlled by a remote, and a design that simulates a real snake.

How does the remote control for the Top Race TR-A22 operate?

The remote control allows users to maneuver the rattle snake, activating its movements and rattling sounds for an interactive experience.

How should the LR44 batteries be inserted into the Top Race TR-A22 Remote Control Rattle Snake?

Insert the LR44 batteries into the battery compartment, following the polarity markings indicated inside.

What materials is the Top Race TR-A22 Remote Control Rattle Snake made from?

The Top Race TR-A22 is made from durable plastic materials designed to mimic the look and feel of a real snake.

What should I do if the Top Race TR-A22 Remote Control Rattle Snake does not work?

Ensure that the LR44 batteries are properly inserted and fully charged. Check the battery compartment for any corrosion or loose connections.

How does the rattling effect work in the Top Race TR-A22 Remote Control Rattle Snake?

The rattling effect is produced by an internal sound module activated by the remote control, creating realistic rattling noises.

Why is my Top Race TR-A22 Remote Control Rattle Snake not turning on?

Ensure that the batteries in both the rattle snake and the remote control are fully charged and properly installed. Make sure the power switch on the rattle snake is in the on position. If it still doesn't turn on, try replacing the batteries.

What should I do if the Top Race TR-A22 Rattle Snake is not responding to the remote control?

Verify that both the rattle snake and the remote control are on the same frequency and have been properly paired. If they are, replace the batteries in the remote control, as weak batteries can cause connection issues.

Why does the Top Race TR-A22 Remote Control Rattle Snake stop moving during play?

This could be due to the battery running low. Recharge or replace the batteries in the rattle snake. Also, check if the motor is overheating; allow it to cool down before continuing to use it.

## References

- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.