




## TopTech 9181008 Duck Shower Speaker Instruction Manual

[Home](#) » [Tiptech](#) » TopTech 9181008 Duck Shower Speaker Instruction Manual 

# TOPTECH

Duck Shower Speaker

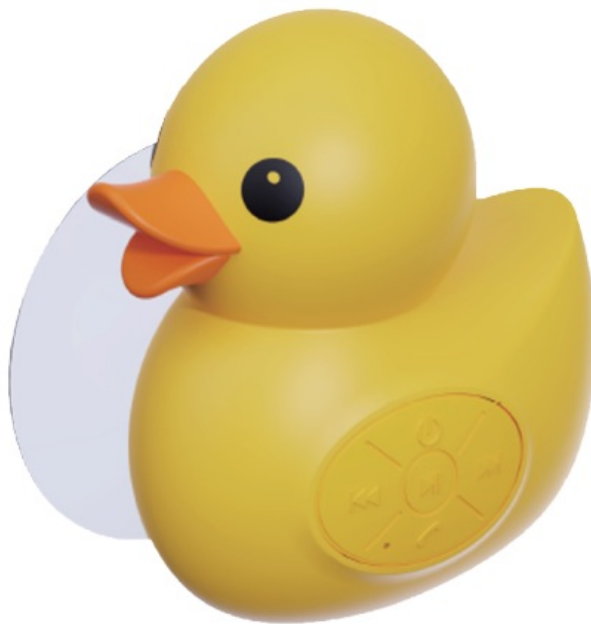

Instruction Manual

### NOTICE

Please read this manual before use.

## Contents

- 1 PACKAGE CONTENT
- 2 BLUETOOTH INSTRUCTIONS
- 3 BASIC OPERATIONS
- 4 SPECIFICATIONS
- 5 INDICATOR LIGHT STATUS
- 6 Q&A
- 7 FCC STATEMENT
- 8 WARNING FOR BATTERY
- 9 Documents / Resources
- 9.1 References

## PACKAGE CONTENT

1(One) Duck Shower Speaker 4.13in.x3.94in.x2.83in.  
(10.50cmx10.00cmx7.20cm)  
1(One) USB-A to USB-C Charging Cable 11.8lin.(30cm)  
1(One) Instruction Manual

## BLUETOOTH INSTRUCTIONS

1. To start the pairing process turn on the Bluetooth™ device.
2. Press ON/OFF to turn on the speaker, and you will hear prompt tone.
3. Go to your Bluetooth setting on your device and click on "Duck Shower SPKR". When the speaker is paired successfully, you will hear "Di-Di"


### Please note:

\*Make sure your device and speaker are within 30 feet.

"Once the speaker is paired successfully, it will reconnect to your device automatically.

"The speaker will automatically turn off if there is no connection after 5 minutes.

## BASIC OPERATIONS

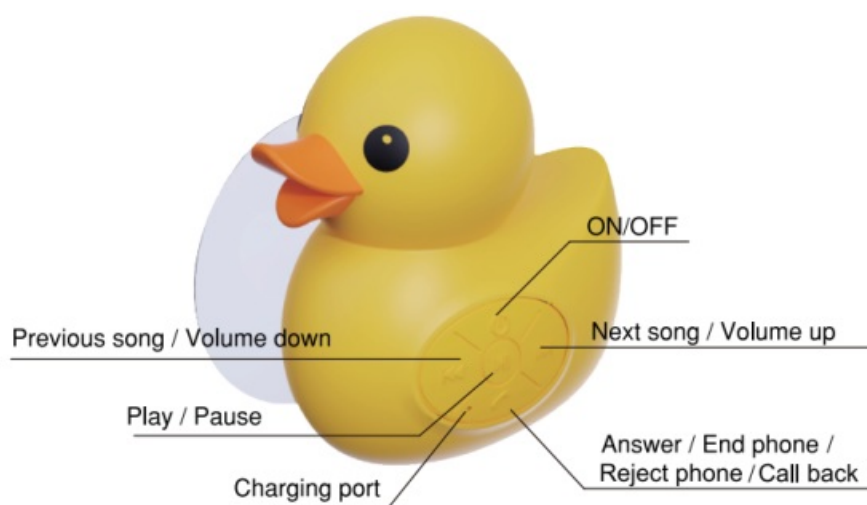

⏻ Turn on: Long press for 5 seconds Turn off: Long press for 5 seconds

📞 Answer phone: One click End phone: One click Reject phone: Long press for 3 seconds Call back Click for 3

times

▶|| Play: One click Pause: One click

◀◀ Previous song: One click Volume down: Long press for 2 seconds

▶▶ Next song: One click Volume up: Long press for 2 seconds

## SPECIFICATIONS

Battery Capacity: 300mAh

Playing Time: 3-4 Hours (70% volume)

Charging Time: 2 Hours

Bluetooth Range: 30 Feet

## INDICATOR LIGHT STATUS

Turn on: Red light slow flashes

Turn off: Red light slow flashes, then light off

Paired mode: Red light slow flashes

Paired successfully: Light off

Speaker charged: Red light on

Speaker fully charged: Light off

Low battery: Red light flashes

## Q&A

If the Wireless speaker cannot be paired with your device please try the following:

Ensure that your speaker is in pairing mode or reconnection mode, Ensure that Bluetooth search function of your mobile device is activated.

If the Wireless speaker cannot be recharged:

If you use a power outlet, ensure that the power supply is connected securely and the outlet works. If you use a computer, ensure that it is connected and the USB port is powered.

## FCC STATEMENT

This device complies with Part 15 of the FCC Rules.

Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation.

**Warning:** Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment

**NOTE:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected Consult the dealer or an experienced radio/TV technician for help

## CAUTION

- Reorient or relocate the receiving antenna to increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected
- Consult the dealer or an experienced radio/TV technician for help.
- The device has been evaluated to meet general RF exposure requirements.
- The device can be used in portable exposure conditions without restriction.
- Operation temperature range: 45

## WARNING FOR BATTERY

Please do not handle the battery in the following manners. It can lead to an explosion or leakage of flammable liquids and gases.

Do not fire, discard, crush or cut.

Do not leave in an extremely high temperature environment.


Do not leave in an extremely low pressure environment.

USB-A to USB-C charging cable rating 5V/0.5A max.

**CAUTION:** The USB-A to USB-C charging cable included with this item is intended for use with this product



## Documents / Resources

	<p><a href="#">TopTech 9181008 Duck Shower Speaker</a> [pdf] Instruction Manual 2BDON-9181008, 2BDON9181008, 9181008 Duck Shower Speaker, 9181008, Duck Shower Speaker, Shower Speaker, Speaker</p>
---	---

## References

- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.