

 


# TORAIZ Multi tracker SQUID User Guide

[Home](#) » [TORAIZ](#) » TORAIZ Multi tracker SQUID User Guide 

*TORAIZ Multi tracker SQUID User Guide*

# Operating Instructions (Quick Start Guide)

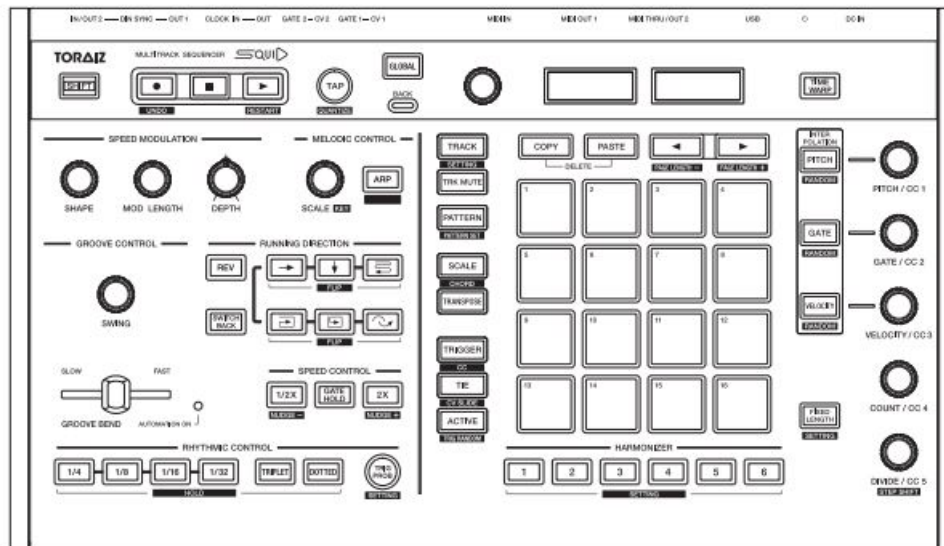

## Multitrack Sequencer



[pioneerdj.com/support/](http://pioneerdj.com/support/)

For FAQs and other support information for this product, visit the above site.

# TORAIZ

[pioneerdj.com/support/](http://pioneerdj.com/support/)

Thank you for buying this Pioneer DJ product. Please read through these operating instructions so you will know how to operate your model properly. After you have finished reading the instructions, put them away in a safe place for future reference. In some countries or regions, the shape of the power plug and power outlet may sometimes differ from that shown in the explanatory drawings. However the method of connecting and operating the unit is the same.

## IMPORTANT



The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the

presence of uninsulated “dangerous voltage” within the product’s enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.

## **CAUTION**

### **RISK OF ELECTRIC SHOCK DO NOT OPEN**

**CAUTION:** TO PREVENT THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

## **IMPORTANT SAFETY INSTRUCTIONS**

1. Read these instructions.
2. Keep these instructions.
3. Heed all warnings.
4. Follow all instructions.
5. Do not use this apparatus near water.
6. Clean only with dry cloth.
7. Do not block any ventilation openings. Install in accordance with the manufacturer’s instructions.
8. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
9. Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
10. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
11. Only use attachments/accessories specified by the manufacturer.
12. Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.



 
13. Unplug this apparatus during lightning storms or when unused for long periods of time.
14. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.


## **WARNING**


This equipment is not waterproof. To prevent a fire or shock hazard, do not place any container filled with liquid near this equipment (such as a vase or flower pot) or expose it to dripping, splashing, rain or moisture.

## **WARNING**


To prevent a fire hazard, do not place any naked flame sources (such as a lighted candle) on the equipment.

 The graphical symbol  placed on the product means alternating current.

The graphical symbol  placed on the product means direct current.

The graphical symbol  placed on the product means Class II equipment.

## **CAUTION**

The  switch on this unit will not completely shut off all power from the AC outlet. Since the power cord serves as the main disconnect device for the unit, you will need to unplug it from the AC outlet to shut down all power. Therefore, make sure the unit has been installed so that the power cord can be easily unplugged from the AC outlet in case of an accident. To avoid fire hazard, the power cord should also be unplugged from the AC outlet when left unused for a long period of time (for example, when on vacation).

## **Operating Environment**

Operating environment temperature and humidity: +5 °C to +35 °C (+41 °F to +95 °F); less than 85 %RH (cooling vents not blocked)

Do not install this unit in a poorly ventilated area, or in locations exposed to high humidity or direct sunlight (or strong artificial light).

When using this product, confirm the safety information shown on the bottom of the unit.

## **The Safety of Your Ears is in Your Hands**

Get the most out of your equipment by playing it at a safe level – a level that lets the sound come through clearly without annoying blaring or distortion and, most importantly, without affecting your sensitive hearing. Sound can be deceiving. Over time, your hearing “comfort level” adapts to higher volumes of sound, so what sounds “normal” can actually be loud and harmful to your hearing. Guard against this by setting your equipment at a safe level BEFORE your hearing adapts.

## **ESTABLISH A SAFE LEVEL:**

- Set your volume control at a low setting.
- Slowly increase the sound until you can hear it comfortably and clearly, without distortion.
- Once you have established a comfortable sound level, set the dial and leave it there.

## **BE SURE TO OBSERVE THE FOLLOWING GUIDELINES:**

- Do not turn up the volume so high that you can't hear what's around you.
- Use caution or temporarily discontinue use in potentially hazardous situations.
- Do not use headphones while operating a motorized vehicle; the use of headphones may create a traffic hazard and is illegal in many areas.

## **Information to User**

Alterations or modifications carried out without appropriate authorization may invalidate the user's right to operate the equipment.

## **IMPORTANT NOTICE**

THE MODEL NUMBER AND SERIAL NUMBER OF THIS EQUIPMENT ARE ON THE REAR OR BOTTOM. RECORD THESE NUMBERS ON PAGE 19 FOR FUTURE REFERENCE.

### **POWER-CORD CAUTION**

Handle the power cord by the plug. Do not pull out the plug by tugging the cord and never touch the power cord when your hands are wet as this could cause a short circuit or electric shock. Do not place the unit, a piece of furniture, etc., on the power cord, or pinch the cord. Never make a knot in the cord or tie it with other cords. The power cords should be routed such that they are not likely to be stepped on. A damaged power cord can cause a fire or give you an electrical shock. Check the power cord once in a while. When you find it damaged, ask your nearest service center or your dealer for a replacement.

S002\*\_A1\_En

### **[Supplied power cord]**

The supplied power cord is designed specifically for 120 V. Do not use it with a voltage other than 120 V. Doing so may cause a fire or electric shock.

D3-7-14\_PDJ\_A1\_En

**CAUTION** This product is evaluated in moderate climate condition.

D3-8-2-1-7b\_A1\_En

### **VENTILATION CAUTION**

When installing this unit, make sure to leave space around the unit for ventilation to improve heat radiation (at least 5 cm at rear, and 5 cm at each side).

D3-4-2-1-7d\*\_A1\_En

### **NOTE:**

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

D8-10-1-2\_A1\_En

### **FEDERAL COMMUNICATIONS COMMISSION DECLARATION OF CONFORMITY**

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Product Name: Multitrack Sequencer

Model Number: SQUID

Responsible Party Name: PIONEER ELECTRONICS (USA) INC. SERVICE SUPPORT DIVISION

Address: 2050 W, 190th Street, Suite 100, Torrance, CA 90504, U.S.A.

Phone: 1-310-952-2915

URL: [pioneerelectronics.com](http://pioneerelectronics.com)

D8-10-4\*\_C1\_En

### **How to read this manual**

Thank you for buying this Pioneer DJ product. Be sure to read this manual and the Operating Instructions available on the Pioneer DJ site. Both documents include important information that you should understand before using this product. In particular, be sure to read "IMPORTANT SAFETY INSTRUCTIONS." Furthermore, be sure to keep this manual together with "Warranty" on page 19.

- In this manual, the names of buttons, controls and terminals indicated on the product, and program options appearing on the unit display, etc., are indicated within square brackets ([ ]). (e.g. **[GLOBAL]** button, **[CLOCK OUT]** terminal, **[Save As]**)
- Please note that the screens and specifications of the software described in this manual as well as the external appearance and specifications of the hardware are currently under development and may differ from the final specifications.
- Please note that depending on the operating system version, web browser settings, etc., operation may differ from the procedures described in this manual. This manual provides brief descriptions regarding the names of the parts of the unit, the connections between the unit and peripherals, and basic operations. For more detailed instructions on using the unit, see the Operating Instructions for this unit.
- To learn how to obtain the Operating Instructions for this unit, see “Viewing the Operating Instructions” on page 5.

## Contents

### 1 Before starting

- 1.1 Features
- 1.2 What's in the box
- 1.3 Viewing the Operating Instructions
- 1.4 Auto power off function

### 2 Part names

- 2.1 Control panel
- 2.2 Rear Panel

### 3 Connections

- 3.1 Connecting inputs and outputs

### 4 Operation

- 4.1 Playing demo patterns
- 4.2 Creating a new project
- 4.3 Recording notes in a pattern
- 4.4 Using INTERPOLATION
- 4.5 Using TIME WARP
- 4.6 Saving a project

### 5 Additional information

- 5.1 Troubleshooting
- 5.2 Changing the settings
- 5.3 Precautions regarding our repair services
- 5.4 About trademarks and registered trademarks
- 5.5 Specifications

### 6 Documents / Resources

### 7 Related Posts

## Before starting

### Features

The SQUID is a standalone multitrack sequencer that can connect various music production equipment and produce phrases successively. Phrases can be sequenced quickly using the step parameter controls which work independently for each parameter and the sequence functions such as HARMONIZER and INTERPOLATION. Get new inspirations and phrases constantly by adding different arrangements to the sequence and experimenting with the user interface using numerous arrangement functions such as RUNNING DIRECTION, GROOVE BEND and SPEED MODULATION. This inspiring and expressive musical tool is compatible with many types of music production systems. It features terminals for USB and MIDI as well as CV/GATE OUT and DIN

SYNC—which can control not only modular synthesizers but also vintage electronic musical instruments.

### What's in the box

- AC adaptor
- Power cord
- Operating Instructions (Quick Start Guide) (this document)

### Viewing the Operating Instructions

Instructions may also be provided in PDF files. Adobe® Reader® must be installed in order to view PDF-format files.

1. Launch a web browser on your PC/Mac and access the Pioneer DJ site below. [pioneerdj.com](http://pioneerdj.com) ! To select your language, click the flag or global icon in the top right corner of the screen.
2. Point the cursor to [**Support**] and click it.
3. Click [**Tutorials, manuals & documentation**].
4. Click [**SQUID**] in the [**MUSIC PRODUCTION**] category.
5. Click on the desired language from the list. Download the manual if needed.

### Auto power off function

This unit has an auto power off function, which is enabled as the default setting. The power turns off automatically when there is no signal input, output or operation for approximately 4 hours. To turn on the power once the unit has turned off automatically, press the [⏻] button on the rear panel to release it to the off position (■), and then press in the [⏻] button again (–). To disable the auto power off function, press the [GLOBAL] button to display the GLOBAL menu. Then, turn the rotary selector to switch the [Auto Power Off] setting to [Disable].

### Notes

 
- Unsaved data will be lost if the unit is powered off automatically. Be sure to save important data such as edited project data.
- The auto power off function may not turn off the unit in certain modes of operation. Therefore, always be sure to turn off the power manually after use.

### Part names

For further details on each button and control, refer to “Part names and functions” section in the Operating Instructions.

### Control panel


## Global section

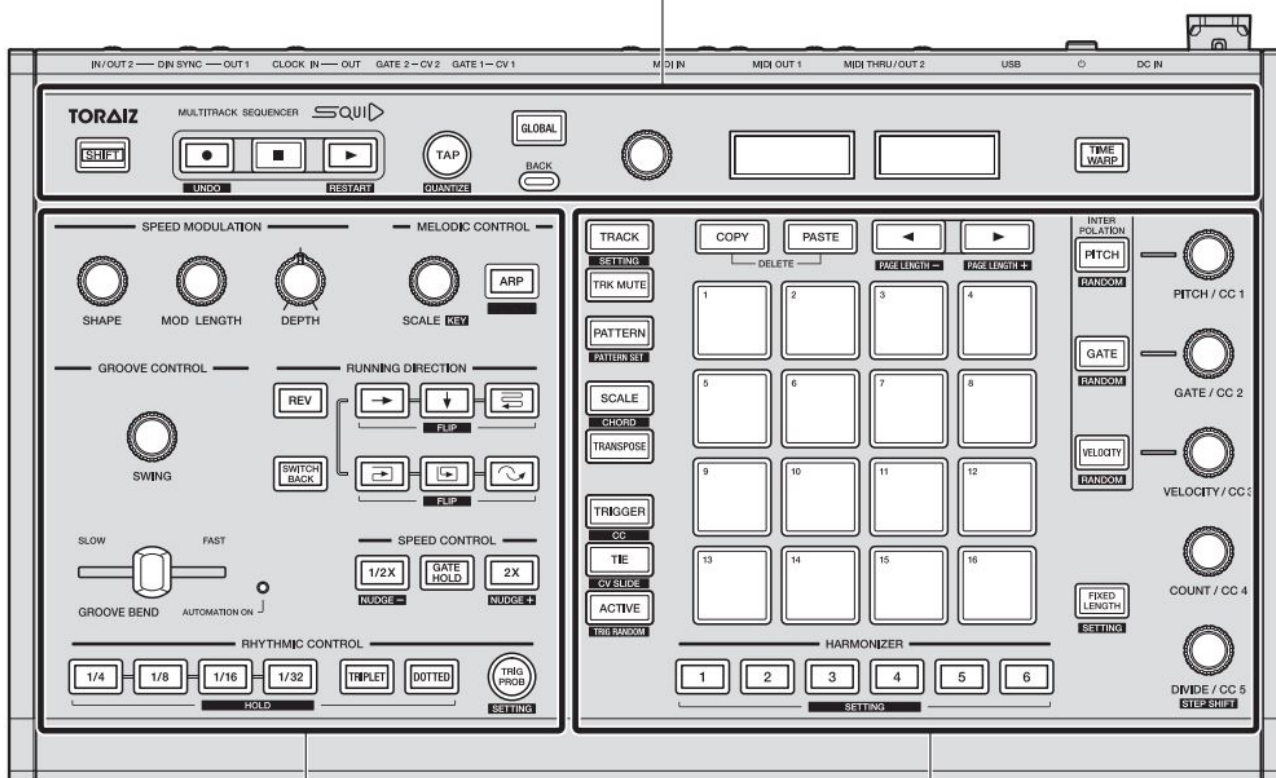

## Phrase arrangement section

## Step edit section
 
## Global section

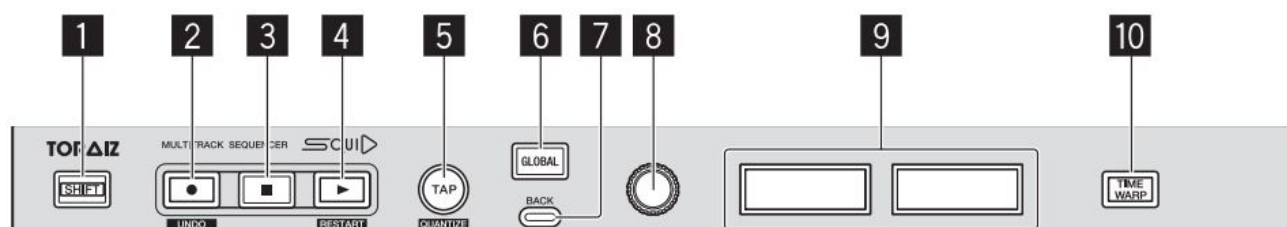


1. SHIFT button
2. ● (record) button
3. ■ (stop) button
4. ► (play) button
5. TAP button
6. GLOBAL button
7. BACK button
8. Rotary selector
9. Display
10. TIME WARP button

## Phrase arrangement section

 - 11.



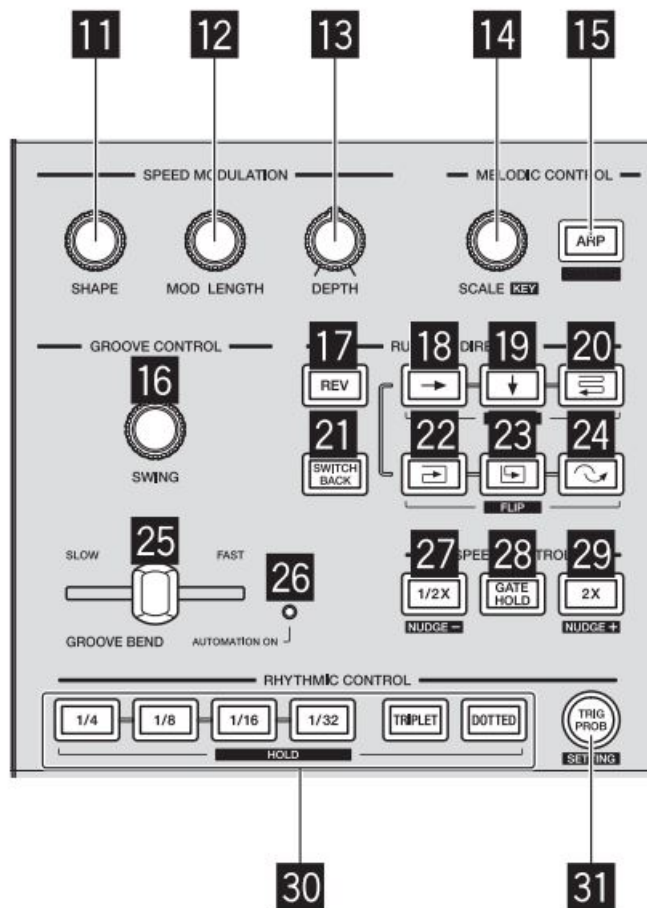

HAPE control

12. MOD LENGTH control

13. DEPTH control

14. SCALE control

15. ARP button

16. SWING control

17. REV button

18. →(right) button

19. ↓(down) button

20. ≡(zigzag) button

21. SWITCH BACK button

22. ↻(clockwise) button

23. ↺(counterclockwise) button

24. ↶(skip back) button

25. GROOVE BEND slider

26. AUTOMATION ON indicator

27. 1/2X (half) button


28. GATE HOLD button

29. 2X (double) button

30. RHYTHM buttons 1/4, 1/8, 1/16, 1/32, TRIPLET, DOTTED

31. TRIG PROB button


### Step edit section

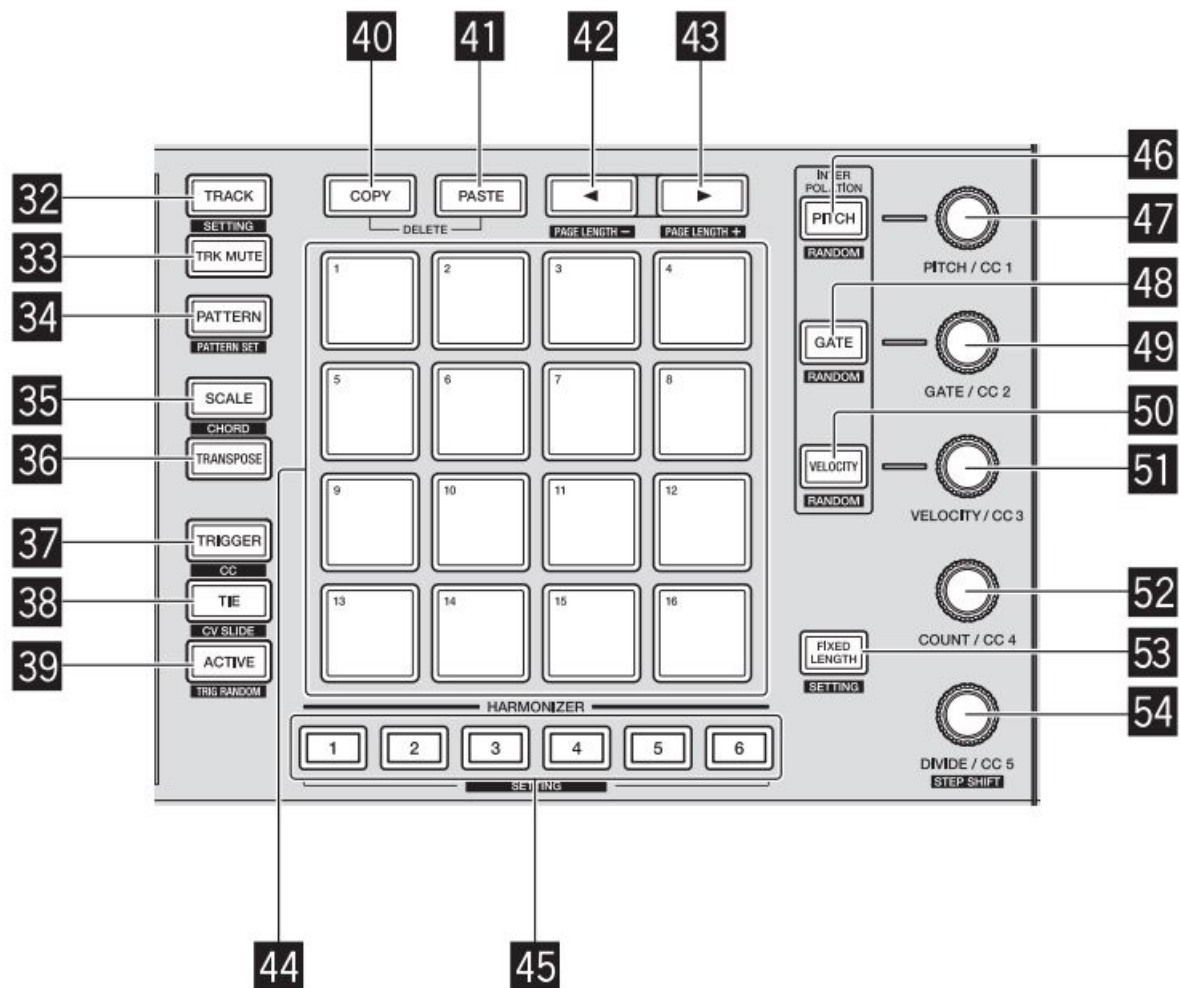 

- 32. TRACK button
- 33. TRK MUTE button
- 34. PATTERN button
- 35. SCALE button
- 36. TRANSPOSE button
- 37. TRIGGER button
- 38. TIE button
- 39. ACTIVE button
- 40. COPY button
- 41. PASTE button
- 42. ◀ button
- 43. ▶ button
- 44. 16 pads
- 45. HARMONIZER buttons
- 46. PITCH button
- 47. PITCH/CC1 control
- 48. GATE button
- 49. GATE/CC2 control
- 50. VELOCITY button
- 51. VELOCITY/CC3 control
- 52. COUNT/CC4 control
- 53. FIXED LENGTH button
- 54. DIVIDE / CC 5 STEP SHIFT

## 54. DIVIDE/CC5 control
 
### Rear Panel

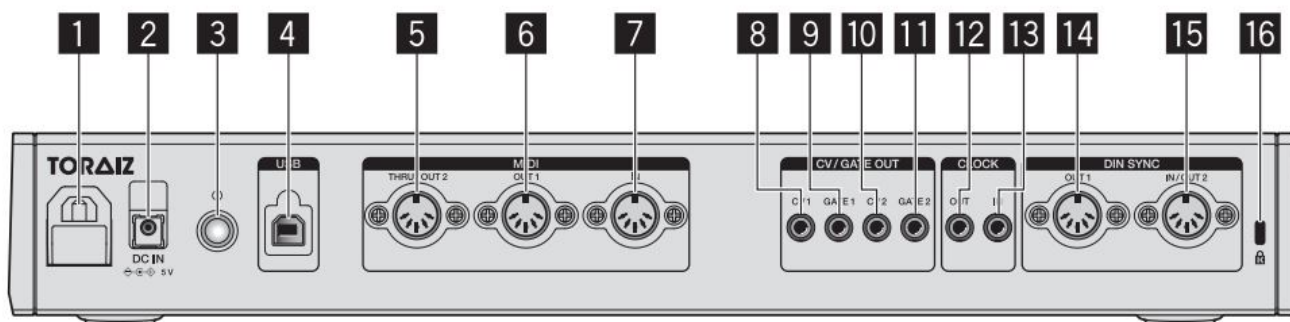

1. Cable hook
2. ⏻ DC IN terminal
3. button  
Turns the power of this unit On/Off.  
This switch is between off and on for this unit.
4. USB-B terminal
5. MIDI THRU/OUT2 terminal
6. MIDI OUT1 terminal
7. MIDI IN terminal
8. CV OUT1 terminal
9. GATE OUT1 terminal
10. CV OUT2 terminal
11. GATE OUT2 terminal
12. CLOCK OUT terminal
13. CLOCK IN terminal
14. DIN SYNC OUT1 terminal
15. DIN SYNC IN/OUT2 terminal
16. Kensington lock slot

### Connections

- Be sure to turn off the power, disconnect the USB cable from this unit, and unplug the power cord from the power outlet whenever making or changing connections.
- Connect the power cord and a USB cable once all the connections between devices have been completed.
- Be sure to use the included power cord and AC adaptor.
- Refer to the operating instructions for components to be connected.
- Use a USB cable which complies with USB 2.0.
- The unit is powered by either the AC adaptor or USB-bus power.

The unit can be operated by just connecting the unit and your PC/Mac via a USB cable without connecting the AC adaptor.

If the AC adaptor is connected at the same time, the USB-bus power can be used as a backup power source. If

 
the AC adaptor is disconnected

while using the unit, the unit automatically switches the power drive to the USB-bus power.

### Special notes when using USB-bus power

- There are some restrictions in functions such as dimming on buttons, LEDs for pads, and display.
- Connect the unit directly to a USB 2.0/3.0 port on your PC/Mac using a USB cable.
- We recommend using a USB certified USB cable that is 2 meters (6.56 feet) or shorter.


### Connecting inputs and outputs

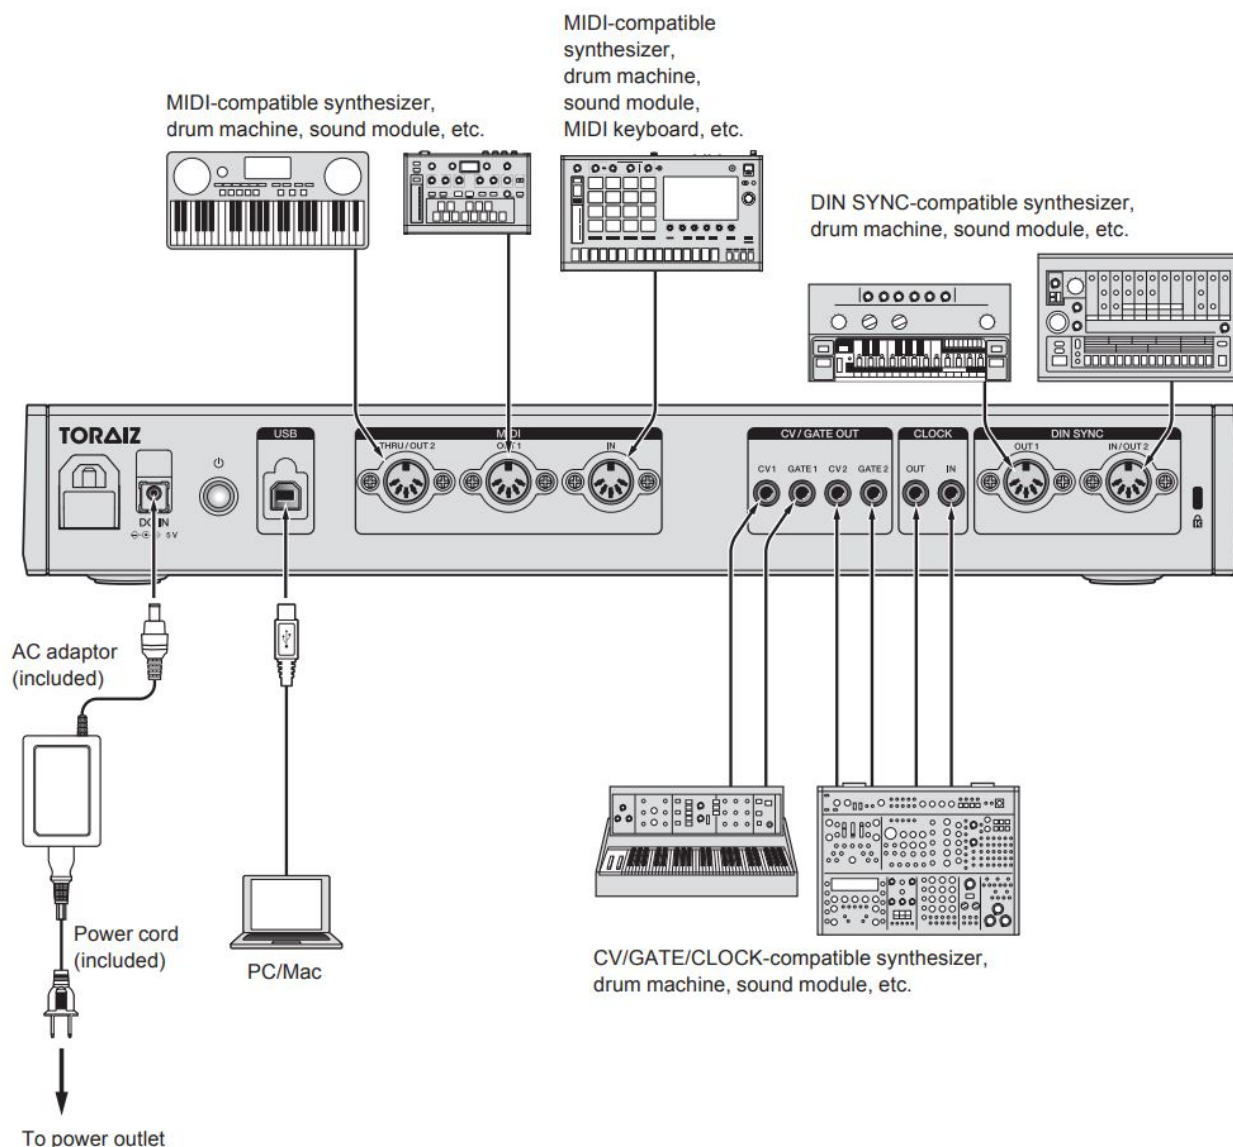


### How to use the cable hook

Hook the connection cable of the AC power adaptor to avoid accidentally disconnecting it from the unit.

 - 1 Fit the connection cable of the AC adaptor into the cable hook.  
Secure the cable into place.

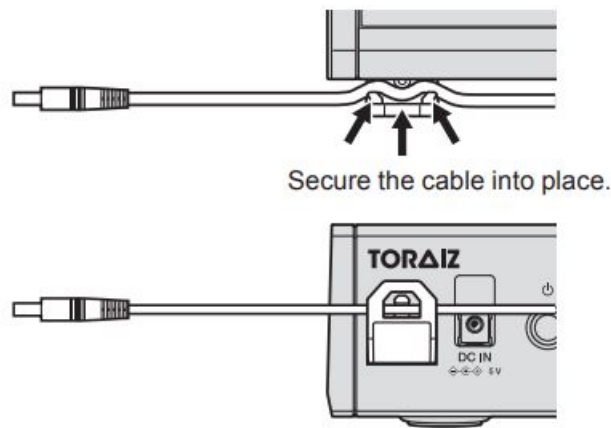

 2 Connect the plug of the connection cable to the **[DC IN]** terminal. If the cable on the left side of the cable hook is too long, tighten it moderately.  
Plug in. Pull gently to tighten.

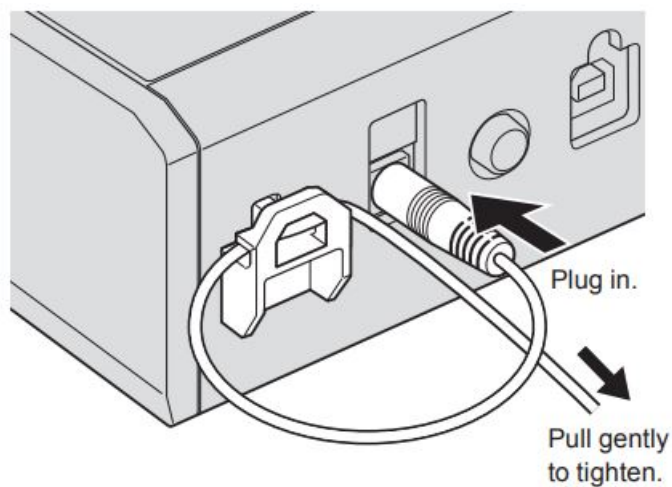

## Operation

### Playing demo patterns

The SQUID has a pre-installed project including multiple demo patterns which load automatically when the unit is turned on for the first time after purchase.

1. Press the **[u]** button on the rear panel to turn on the unit.

The buttons and the 16 pads light up and the main screen appears in the display.

2. Turn on the external devices connected to the unit.

3. Press the **[TRACK]** button.

The **[TRACK]** button lights up and the output destination for the current track is displayed and highlighted.

4. Turn the rotary selector to choose the output terminal for the connected external device.

- One of the following can be selected: **[MIDI1 Ch.1-16]**, **[MIDI2 Ch.1-16]**, **[USB Ch.1-16]**, **[CV/GATE1]**, **[CV/GATE2]**, **[None]**.

 


5 Press the [▶] (play) button.

The [▶] (play) button lights up green and the unit plays the demo patterns.

The external device selected for the output destination also plays depending on the demo pattern being played. The beat and MIDI indicators appear in the display and show the current operation.

- To pause the pattern being played Press the [▶] (play) button. The [▶] (play) button flashes.
- To stop the pattern being played Press the [■] (stop) button. The light of the [▶] (play) button turns off.

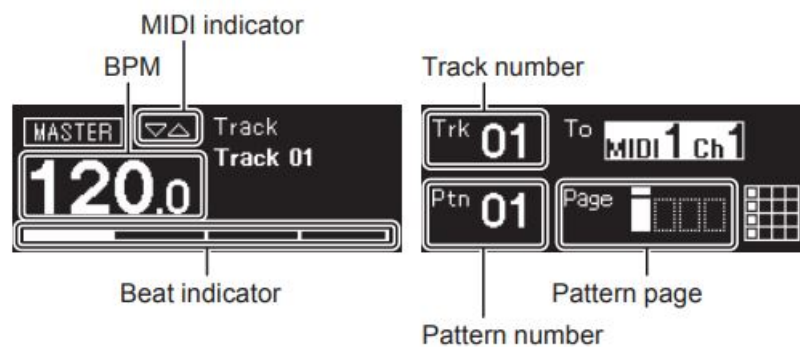

## Creating a new project

First, create a new project in order to create a pattern from scratch.

1. Press the [GLOBAL] button.

The [GLOBAL] button lights up and the display shows the GLOBAL menu.

2. Turn the rotary selector to select [Create New] and press it.

A new project is created.

- If a current project is modified and a new project is created without saving the current project, then any changes will be lost.



## Recording notes in a pattern

There are two basic ways to record notes in a pattern.

- Step recording method You can record note information (muting status and parameters such as Pitch, Gate,

and Velocity) for each step regardless if the pattern is being played or stopped.

- Real-time recording method When using the pads to perform while a pattern is being played in recording mode, this method will record the note information of your performance.

## Step recording

1. Press the [TRIGGER] button.

The [TRIGGER] button lights up and the 16 pads light dim orange.

 
2. Press the desired pad for the step to unmute the notes.

The pad for the step lights up bright orange when the notes are unmuted.

- To mute the notes, press the same pad.


3. Press and hold the desired pad for the step to edit the saved parameters, and turn the rotary selector.

The display shows a note in sequence to select such as [Note1], [Note2], and [Note3].

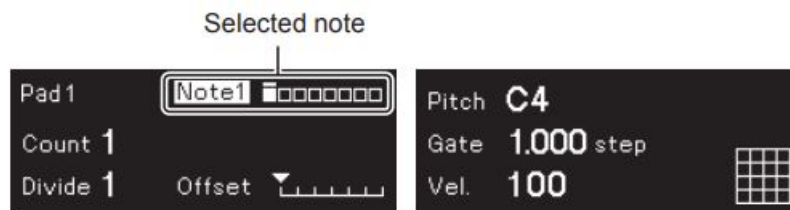

4. Turn the [PITCH/CC1], [GATE/CC2], and/or [VELOCITY/CC3] controls while pressing down the pad. You can change the parameters for the note selected in step 3. The display shows the value of each parameter.

 - Turn the [PITCH/CC1] control to change the Pitch value.
- Turn the [GATE/CC2] control to change the Gate value.
- Turn the [VELOCITY/CC3] control to change the Velocity value.

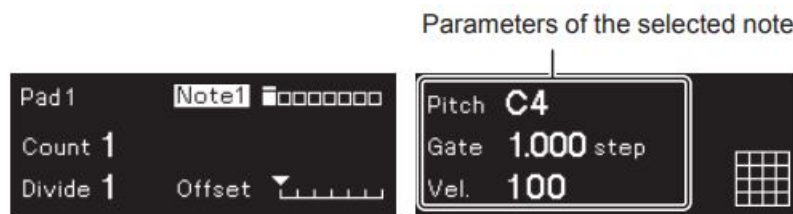

## Real-time recording

1. Press the [SCALE] button.

The [SCALE] button lights up and the 16 pads light up or dim red.

2. Press the [●] (record) button.

The [●] (record) button lights up red and the unit enters recording mode.

3. Press the [▶] (play) button.

The [▶] (play) button lights up green and a pattern is played in recording mode.

4. Play the 16 pads.

The notes will be recorded in the pattern when the pads are tapped.

5. Press the [●] (record) button again.

The light of the [●] (record) button turns off and the unit exits recording mode.

- You can change the parameters of the recorded notes in the same way as in the step recording.



## Using INTERPOLATION

By setting each parameter for the beginning step, the middle step(s), and the end step, the unit automatically interpolates (supplements) parameters for the steps in-between them. You can use this function for the Pitch, Gate, Velocity, and CC1 to CC3 parameters.

 
1. Press [PITCH], [GATE], or [VELOCITY] button.

The pressed button lights up.

2. Press and hold the pad to save the beginning, middle, or end step, and turn the control to the right of the button pressed in step 1.

The display shows the value of the parameter. The pads where the beginning, middle, and end steps were saved light up white.

- In addition to the beginning step and the end step, up to 3 middle steps can also be inserted.
- To delete the beginning step, the middle step(s), or the end step, press the pad where the step is saved. The light of the pad dims.

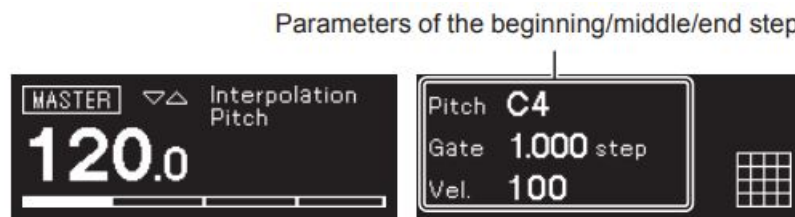

- 3 Press the same button pressed in step 1. The unit exits Interpolation mode.

## Using TIME WARP

The Time Warp function can be used to automatically loop record the output from the unit so that you can call patterns previously played.

 
- 1 Press the [TIME WARP] button.

The [TIME WARP] button changes from a dim white light to a bright white light. The display shows the length of the pattern to be previewed.

- If the [TIME WARP] button is pressed during pattern playback, the unit plays back to the fourth beat indicator (the [TIME WARP] button flashes), and then enters Time Warp mode (the [TIME WARP] button lights up).
- The pattern cannot be changed while in Time Warp mode.

- 2 Turn the rotary selector.

The pattern can be previewed in different lengths: [1 Bar], [2 Bars], [3 Bars], [4 Bars].

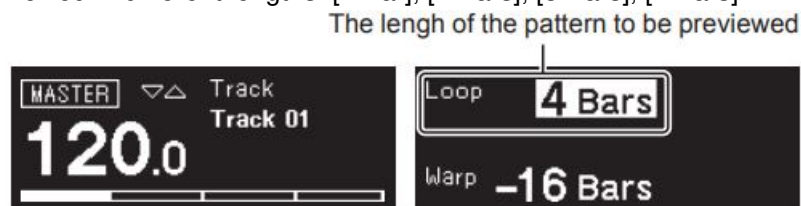


- 3 Press the desired pad to begin previewing.

The unit plays the loop with the length specified in step 2 from the pad that was pressed.

The pads that light up brightly are in the preview range. The pads with a dim light can be selected to start the preview. The preview cannot be started at pads that do not light up.



 - The preview restarts each time a pad is pressed.
- To stop a preview, press the **[STOP]** (stop) button.
- The length of one pad is 1 Bar.

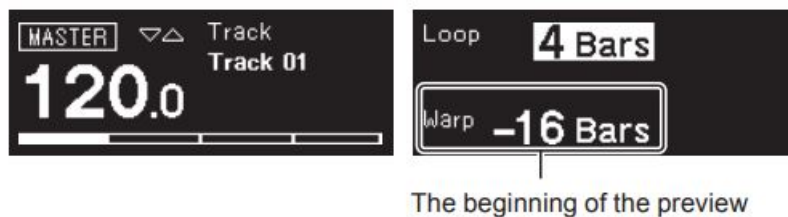

4 Press the **[PATTERN]** button.

The unit enters Save mode and the **[PATTERN]** button lights up green. The pad of the current pattern lights up brightly. The pads with saved patterns have a dim light. The pads do not light up when there are no saved patterns.

5 Press the desired pad to save a pattern being previewed.

The pattern is saved and the pressed pad lights up. ! A pattern cannot be saved to the pad with the current pattern.

6 Press the **[PATTERN]** button again to exit Save mode.

The **[PATTERN]** button dims green.

7 Press the **[TIME WARP]** button again to exit Time Warp mode.

The **[TIME WARP]** button changes from a bright white light to a dim white light.

### Saving a project

1. Press the **[GLOBAL]** button.

The **[GLOBAL]** button lights up and the display shows the GLOBAL menu.

2. Turn the rotary selector to select **[Save As]**, and press the rotary selector.

- Select [Save] to overwrite the project.

3. Press the **[LEFT/RIGHT]** button to move the cursor and change the character by turning the rotary selector.

Name the project by repeating this step.

- Alphanumeric characters, symbols, or a blank space can be inserted.
- To delete a character in front of the cursor, press and hold the **[SHIFT]** button and press the **[BACK]** button.
- To insert a blank in front of the cursor, press and hold the **[SHIFT]** button and press the rotary selector.
- When an existing project is opened, the name of the project appears in the display.



4 Press the rotary selector.

The Project is saved.

### Additional information

#### Troubleshooting

- If there seems to be a problem with this unit, check the items in the “Troubleshooting” section in the Operating Instructions of this unit, or access the Pioneer DJ site and check [FAQ] for the [SQUID]. [pioneerdj.com/support/](http://pioneerdj.com/support/) Also, check the connected devices. If the problem cannot be resolved, ask your nearest Pioneer authorized service center or your dealer to carry out repair work.
- This unit may not operate properly due to static electricity or other external influences. In such cases, normal operation may be restored by unplugging the power cord and the USB cable then plugging the power cord back in.

### Changing the settings

- For details on how to change the settings of this unit, see “Changing the settings” in the Operating Instructions.

### Precautions regarding our repair services

- When we repair your unit, we may need to reset the unit to factory default depending on the unit conditions. Since we do not back up your settings prior to repair, we recommend that you back up your original data using DAW software and MIDI utility software, etc.

### About trademarks and registered trademarks

- Pioneer DJ is a trademark of PIONEER CORPORATION, and is used under license.
- The names of companies and products mentioned herein are the trademarks of their respective owners.

### Specifications

#### AC adapter

Power ..... AC 100 V to 240 V, 50 Hz/60 Hz

Rated current ....0.4 A

Rated output ... DC 5 V, 2 A

#### General – Main Unit

Power consumption

DC IN .... DC 5 V, 1 200 mA

Main unit weight .... 1.9 kg (4.2 lbs.)

Max. dimensions ....374.8 mm (width) × 72.1 mm (height) × 223.9 mm (depth)  
(14.8 in. (width) × 2.8 in. (height) × 8.8 in. (depth))

Tolerable operating temperature.....+5 °C to +35 °C (+41 °F to +95 °F)

Tolerable operating humidity.....5 % to 85 % (no condensation)

#### Input/output terminals

**DIN SYNC IN/OUT2** input/output terminal 5-pin DIN..... 1 set

**DIN SYNC OUT1** output terminal

5-pin DIN..... 1 set

**CLOCK IN** input terminal

1/8 stereo mini jack ... 1 set

**CLOCK OUT** output terminal

1/8 stereo mini jack ... 1 set

**GATE OUT** output terminal

1/8 mono mini jack ..... 2 sets

**CV OUT** output terminal

1/8 mono mini jack ..... 2 sets

**MIDI IN** input terminal  
5-pin DIN..... 1 set  
**MIDI OUT1** output terminal  
5-pin DIN..... 1 set  
**MIDI THRU/OUT2** output terminal  
5-pin DIN..... 1 set  
**USB** terminal  
B type..... 1 set

- The specifications and design of this product are subject to change without notice.
- © 2019 Pioneer DJ Corporation. All rights reserved.



Pioneer DJ Americas, Inc.  
**LIMITED WARRANTY**  
WARRANTY VALID ONLY IN THE U.S.A. AND CANADA

**WARRANTY**

Pioneer DJ Americas, Inc. (PDJA) warrants that products distributed by PDJA in the U.S.A. and Canada that fail to function properly under normal use due to a manufacturing defect when installed and operated according to the owner's manual enclosed with the unit will be repaired or replaced with a unit of comparable value, at the option of PDJA, without charge to you for parts or actual repair work. Parts supplied under this warranty may be new or rebuilt at the option of PDJA.

THIS LIMITED WARRANTY APPLIES TO THE ORIGINAL OR ANY SUBSEQUENT OWNER OF THIS PIONEER DJ PRODUCT DURING THE WARRANTY PERIOD PROVIDED THE PRODUCT WAS PURCHASED FROM AN AUTHORIZED PIONEER DJ DISTRIBUTOR/DEALER IN THE U.S.A. OR CANADA. YOU WILL BE REQUIRED TO PROVIDE A SALES RECEIPT OR OTHER VALID PROOF OF PURCHASE SHOWING THE DATE OF ORIGINAL PURCHASE OR, IF RENTED, YOUR RENTAL CONTRACT SHOWING THE PLACE AND DATE OF FIRST RENTAL. IN THE EVENT SERVICE IS REQUIRED, THE PRODUCT MUST BE DELIVERED WITHIN THE WARRANTY PERIOD, TRANSPORTATION PREPAID, ONLY FROM WITHIN THE U.S.A. AS EXPLAINED IN THIS DOCUMENT. YOU WILL BE RESPONSIBLE FOR REMOVAL AND INSTALLATION OF THE PRODUCT. PDJA WILL PAY TO RETURN THE REPAIRED OR REPLACEMENT PRODUCT TO YOU WITHIN THE U.S.A.

**PRODUCT WARRANTY PERIOD**

	<u>Parts</u>	<u>Labor</u>
<b>Audio and Video</b> .....	<b>1 Year</b>	<b>1 Year</b>

The warranty period for retail customers who rent the product commences upon the date product is first put into use (a) during the rental period or (b) retail sale, whichever occurs first.

**WHAT IS NOT COVERED**

IF THIS PRODUCT WAS PURCHASED FROM AN UNAUTHORIZED DISTRIBUTOR, THERE ARE NO WARRANTIES, EXPRESS OR IMPLIED, INCLUDING THE IMPLIED WARRANTY OF MERCHANTABILITY AND THE IMPLIED WARRANTY OF FITNESS FOR A PARTICULAR PURPOSE AND THIS PRODUCT IS SOLD STRICTLY "AS IS" AND "WITH ALL FAULTS". PIONEER DJ SHALL NOT BE LIABLE FOR ANY CONSEQUENTIAL AND/OR INCIDENTAL DAMAGES.

THIS WARRANTY DOES NOT APPLY IF THE PRODUCT HAS BEEN SUBJECTED TO POWER IN EXCESS OF ITS PUBLISHED POWER RATING.

THIS WARRANTY DOES NOT COVER THE CABINET OR ANY APPEARANCE ITEM, USER ATTACHED ANTENNA, ANY DAMAGE TO RECORDS OR RECORDING TAPES OR DISCS, ANY DAMAGE TO THE PRODUCT RESULTING FROM ALTERATIONS, MODIFICATIONS NOT AUTHORIZED IN WRITING BY PIONEER DJ, ACCIDENT, MISUSE OR ABUSE, DAMAGE DUE TO LIGHTNING OR TO POWER SURGES, SUBSEQUENT DAMAGE FROM LEAKING, DAMAGE FROM INOPERATIVE BATTERIES, OR THE USE OF BATTERIES NOT CONFORMING TO THOSE SPECIFIED IN THE OWNER'S MANUAL.

THIS WARRANTY DOES NOT COVER THE COST OF PARTS OR LABOR WHICH WOULD BE OTHERWISE PROVIDED WITHOUT CHARGE UNDER THIS WARRANTY OBTAINED FROM ANY SOURCE OTHER THAN A PIONEER DJ AUTHORIZED SERVICE COMPANY OR OTHER DESIGNATED LOCATION. THIS WARRANTY DOES NOT COVER DEFECTS OR DAMAGE CAUSED BY THE USE OF UNAUTHORIZED PARTS OR LABOR OR FROM IMPROPER MAINTENANCE.

ALTERED, DEFACED, OR REMOVED SERIAL NUMBERS VOID THIS ENTIRE WARRANTY

#### NO OTHER WARRANTIES

PIONEER DJ LIMITS ITS OBLIGATIONS UNDER ANY IMPLIED WARRANTIES INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, TO A PERIOD NOT TO EXCEED THE WARRANTY PERIOD. NO WARRANTIES SHALL APPLY AFTER THE WARRANTY PERIOD. SOME STATES DO NOT ALLOW LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS AND SOME STATES DO NOT ALLOW THE EXCLUSIONS OR LIMITATIONS OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THE ABOVE LIMITATIONS OR EXCLUSIONS MAY NOT APPLY TO YOU. THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS AND YOU MAY HAVE OTHER RIGHTS WHICH MAY VARY FROM STATE TO STATE.

#### TO OBTAIN SERVICE

PDJA has appointed a number of Authorized Service Companies throughout the U.S.A. and Canada should your product require service. To receive warranty service you need to present your sales receipt or, if rented, your rental contract showing place and date of original owner's transaction. If shipping the unit you will need to package it carefully and send it, transportation prepaid by a traceable, insured method, to an Authorized Service Company. Package the product using adequate padding material to prevent damage in transit. The original container is ideal for this purpose. Include your name, address and telephone number where you can be reached during business hours.

On all complaints and concerns in the U.S.A. and Canada call Customer Support at 1-800-872-4159.

For hook-up and operation of your unit or to locate an Authorized Service Company, please call or write:

CUSTOMER SUPPORT  
PIONEER ELECTRONICS (USA) INC.  
P.O. BOX 1720  
LONG BEACH, CALIFORNIA 90801  
1-800-872-4159  
<http://www.pioneerelectronics.com>

#### DISPUTE RESOLUTION

Following our response to any initial request to Customer Support, should a dispute arise between you and Pioneer DJ, Pioneer DJ makes available its Complaint Resolution Program to resolve the dispute. The Complaint Resolution Program is available to you without charge. You are required to use the Complaint Resolution Program before you exercise any rights under, or seek any remedies, created by Title I of the Magnuson-Moss Warranty-Federal Trade Commission Improvement Act, 15 U.S.C. 2301 *et seq.*

To use the Complaint Resolution Program call 1-800-872-4159 and explain to the customer service representative the problem you are experiencing, steps you have taken to have the product repaired during the warranty period and the name of the authorized Distributor/Dealer from whom the Pioneer DJ product was purchased. After the complaint has been explained to the representative, a resolution number will be issued. Within 40 days of receiving your complaint, Pioneer DJ will investigate the dispute and will either: (1) respond to your complaint in writing informing you what action Pioneer DJ will take, and in what time period, to resolve the dispute; or (2) respond to your complaint in writing informing you why it will not take any action.

<http://www.pioneerelectronics.com>

To register your product, find the nearest authorized service location, and to purchase replacement parts, operating instructions, or accessories, please go to one of following URLs:

**In the USA/Aux Etats-Unis or In Canada/Aux Canada**  
**<http://www.pioneerelectronics.com>**

S018\_C1\_EnFr\_PSV

<https://www.pioneerelectronics.com/>

## Pioneer DJ Corporation

6F, Yokohama i-Mark Place, 4-4-5 Minatomirai, Nishi-ku, Yokohama, Kanagawa 220-0012 JAPAN

## Pioneer DJ 株式会社

〒220-0012 神奈川県横浜市西区みなとみらい4丁目4番5号 横浜アイマークプレイス6階

## Корпорация Пайонир Диджей

6F, Йокогама i-Mark Place, 4-4-5 Минатомирай, Ниси-ку, Йокогама, Канагава 220-0012 ЯПОНИЯ

## Pioneer DJ Europe Limited

Artemis Building, Odyssey Business Park, West End Road, South Ruislip, Middlesex, HA4 6QE, U.K.  
TEL: +44-203-7617-220

## Pioneer DJ Americas, Inc.

2050 W. 190th Street, Suite 109, Torrance, CA 90504, U.S.A. TEL: +1 (424) 488-0480

## PIONEER ELECTRONICS ASIACENTRE PTE. LTD.

2 Jalan Kilang Barat, #07-01, Singapore 159346 TEL: +65-6378-7888

## PIONEER ELECTRONICS AUSTRALIA PTY. LTD.

5 Arco Lane, Heatherton, Victoria, 3202, Australia, TEL: +61-3-9586-6300

## PIONEER ELECTRONICS (THAILAND) CO., LTD.

17th Fl., KPN Tower, 719 Rama 9 Road, Bangkapi, Huaykwang, Bangkok 10310

TEL: +66-2-717-0777

## PIONEER TECHNOLOGY (MALAYSIA) SDN. BHD

16th Floor, Menara Uni. Asia 1008 Jalan Sultan Ismail 50250 Kuala Lumpur

TEL: +60-3-2697-2920

## 先鋒股份有限公司

台灣台北市內湖區瑞光路 407 號 8 樓 TEL: +886-(0)2-2657-3588

## 先鋒電子（香港）有限公司

香港九龍長沙灣道 909 號 5 樓 TEL: +852-2848-6488

## PIONEER ELECTRONICS DE MEXICO S.A. DE C.V.

Blvd.Manuel Avila Camacho 138 10 piso Col.Lomas de Chapultepec,  
Mexico, D.F. 11000 TEL: +52-55-9178-4270

## PIONEER INDIA ELECTRONICS PRIVATE LTD.

216, Second Floor, Time Tower, M.G. Road, Sector 28, Gurgaon 122001,  
Haryana, India TEL: +91-124-463-6100


PDJ\_001\_all

Printed in Malaysia

<DRH1509-A>



## Documents / Resources

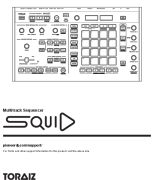	<p><a href="#">TORAIZ Multi tracker SQUID</a> [pdf] User Guide</p> <p>Multi tracker SQUID</p>
------------------------------------------------------------------------------------	-----------------------------------------------------------------------------------------------