



TORK Sensor Pack for PeakServe Mini and Standard Instruction Manual

[Home](#) » [TORK](#) » TORK Sensor Pack for PeakServe Mini and Standard Instruction Manual 



Sensor Pack for Turk Peak Serve
Mini & Standard




Contents

- 1 Sensor Pack for Peak Serve Mini and Standard
- 2 Replace battery
- 3 Documents / Resources
 - 3.1 References

Sensor Pack for Peak Serve Mini and Standard


Sensor Pack for Turk Peak Serve

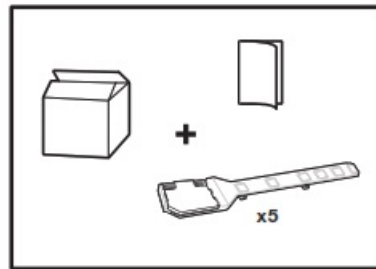


1




2

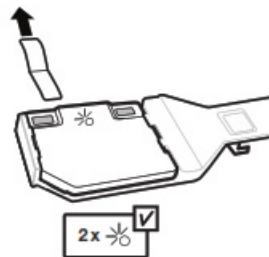


3

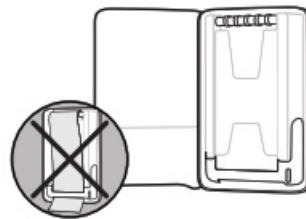


4

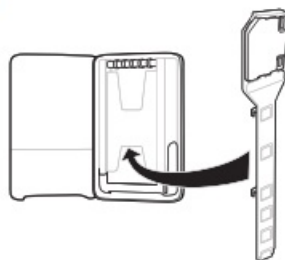


5

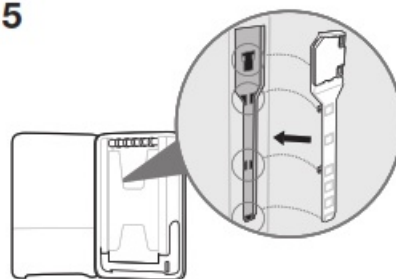

6

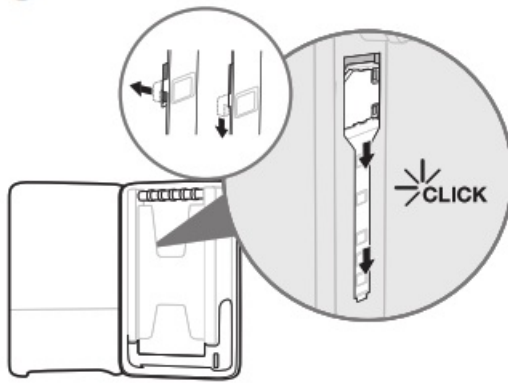


7

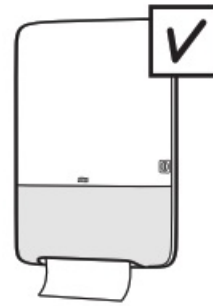


Replace battery

1

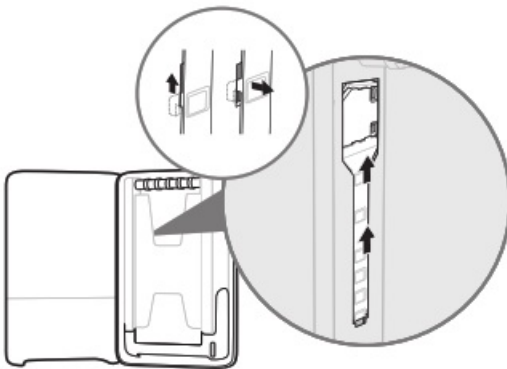


2

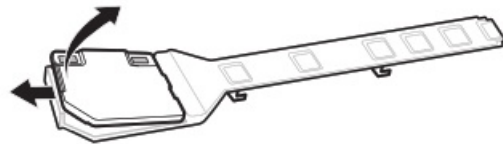


3



4

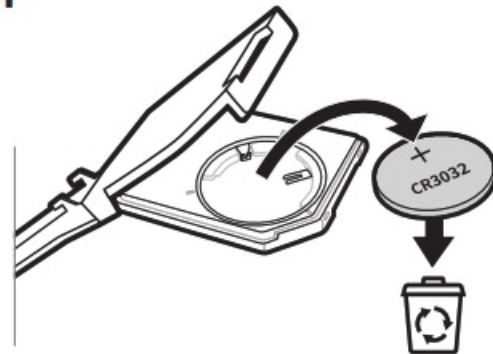


5

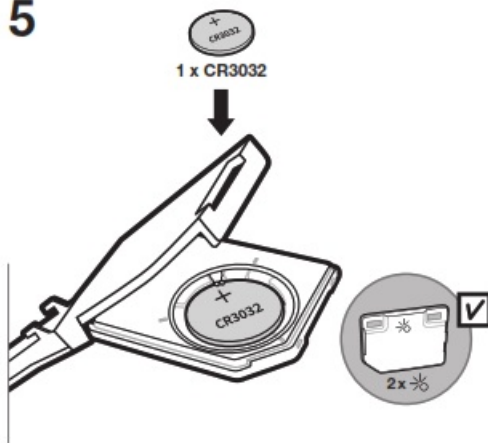


6



7

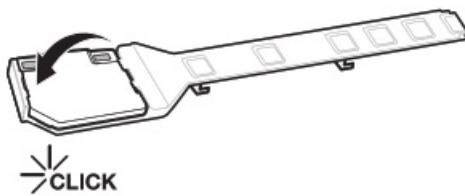

8

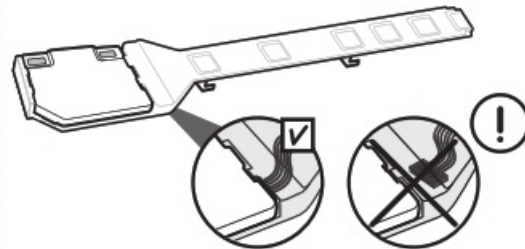

Manufactured by Asity Hygiene and Health AB

SE-405 03 Goteborg, Sweden

Visiting address: Mondale Bro 2, Mandal

UK: Asity UK Limited

Southold's Road, Dunstable, Bedfordshire, LU6 3EJ, UK

+44 1582 677400

North America:

Distributed by Asity HMS North America Inc

2929 Arch Street

Suite 2600

Philadelphia, PA 19104

www.essity.com,

www.torkglobal.com

Made in Sweden

Version A

Documents / Resources

	TORK Sensor Pack for PeakServe Mini and Standard [pdf] Instruction Manual 2023-01-17, Sensor Pack for PeakServe Mini and Standard, Sensor Pack, Sensor Pack PeakS erve Mini, PeakServe Mini and Standard, PeakServe Mini, PeakServe Standard, PeakServe
---	--

References

-  [Essity - A Leading Hygiene and Health Company | Global Corporate](#)
-  [torkglobal.com | Tork Global](#)