



TORO 07413LT Workman® GTX Lithium Utility Vehicle Instruction Manual

[Home](#) » [Toro](#) » TORO 07413LT Workman® GTX Lithium Utility Vehicle Instruction Manual 

Contents

- [1 TORO 07413LT Workman® GTX Lithium Utility Vehicle](#)
- [2 Ordering Replacement Parts](#)
- [3 Front Frame and Suspension Assembly](#)
- [4 Brake Assembly](#)
- [5 Hood and Fender Assembly](#)
- [6 Dash Assembly](#)
- [7 Controller and Charger Assembly](#)
- [8 Accelerator Pedal and Horn Assembly](#)
- [9 Battery Assembly No. 04070](#)
- [10 Attachments and Accessories](#)
- [11 Documents / Resources](#)
 - [11.1 References](#)
- [12 Related Posts](#)



TORO 07413LT Workman® GTX Lithium Utility Vehicle



Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers


Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustration and in parts lists.

Reference Numbers Indicating Quantity


In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

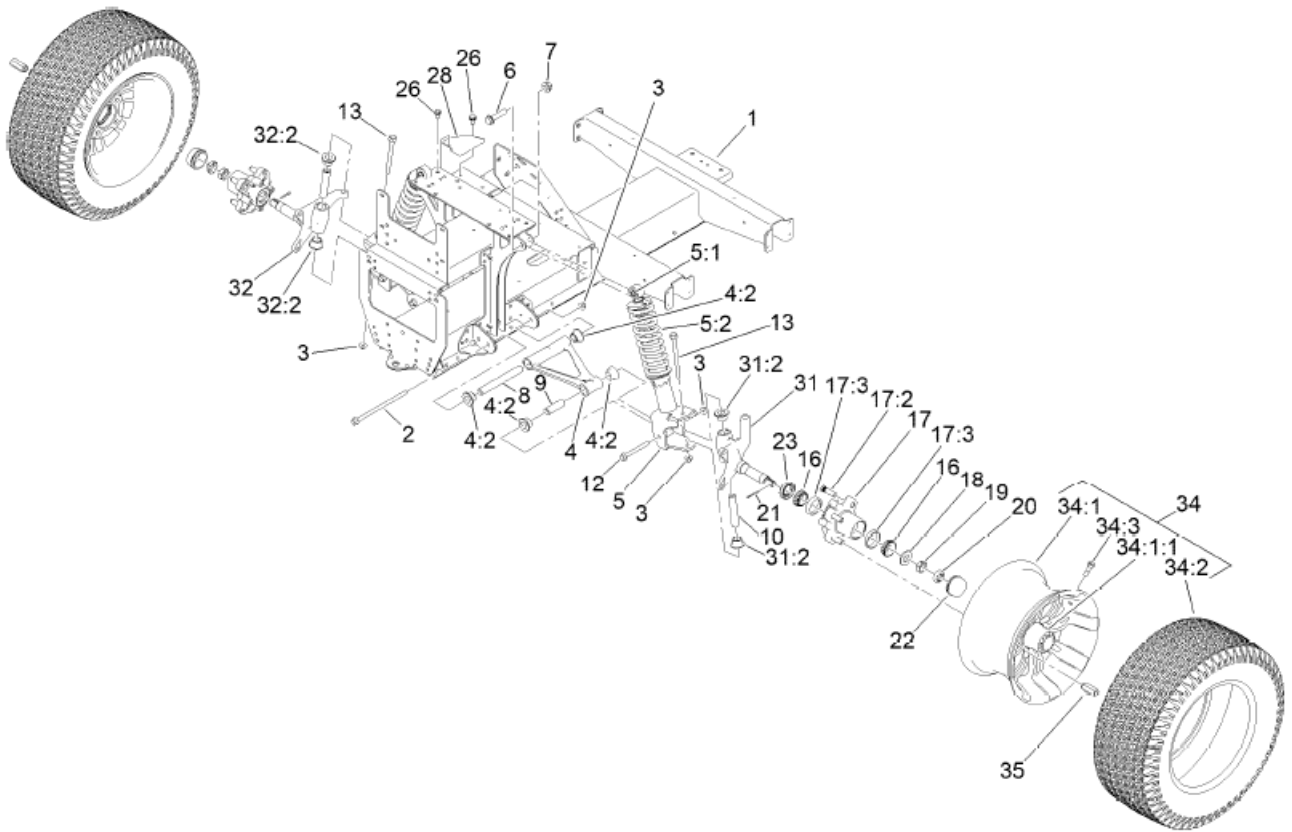


Front Frame and Suspension Assembly

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>		<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	127-7718-03	1	Frame-Front		18	93-0309	2	Washer-Tab
2	139-3360	2	Screw-HF		19	3220-7	2	Nut-Jam
3	139-3380	6	Nut-HF		20	93-0307	2	Nut-Lock, Retainer
4	144-2161	2	Control Arm ASM		21	3272-12	2	Pin-Cotter
4:2	140-4615	4	Bushing-Flange		22	241-119	2	Cap-Dust
5	139-4484	2	Strut ASM, 250 Lb (16.3 3"		23	112-1690	2	Seal-Oil
			EXT Length)		26	32144-70	2	Screw-HWHTF
5:1	131-8574	1	Isolator-Shock		28	131-8339-03	1	Reinforcement-Tower
5:2	137-6719	1	Spring-Compression, 25 0Lb		31	144-2164	1	Spindle ASM, LH
6	3234-46	2	Screw-HHF		31:2	140-4615	2	Bushing-Flange
7	99-5107	2	Nut-Lock		32	144-2165	1	Spindle ASM, RH
8	131-8581	2	Sleeve-Control Arm, Inner		32:2	140-4615	2	Bushing-Flange
9	131-8583	2	Sleeve-Control Arm, Outer		34	139-4649	2	Aluminum Whl And Tire
10	131-8582	2	Sleeve-Kingpin					ASM
12	139-3370	2	Screw-HF		34:1	139-4601	1	Wheel-Aluminum
13	139-3350	2	Screw-HF		34:1:1	140-4570	1	Cap-Aluminum Wheel
16	254-94	4	Bearing-Cone, Tapered		34:2	120-3271	1	Tire
17	127-8851	2	Front Hub ASM		34:3	232-27	1	Stem-Valve
17:2	10-6830	4	Stud-Type, Drive		35	139-3603	8	Nut-Lug
17:3	254-72	2	Bearing-Cup, Tapered					

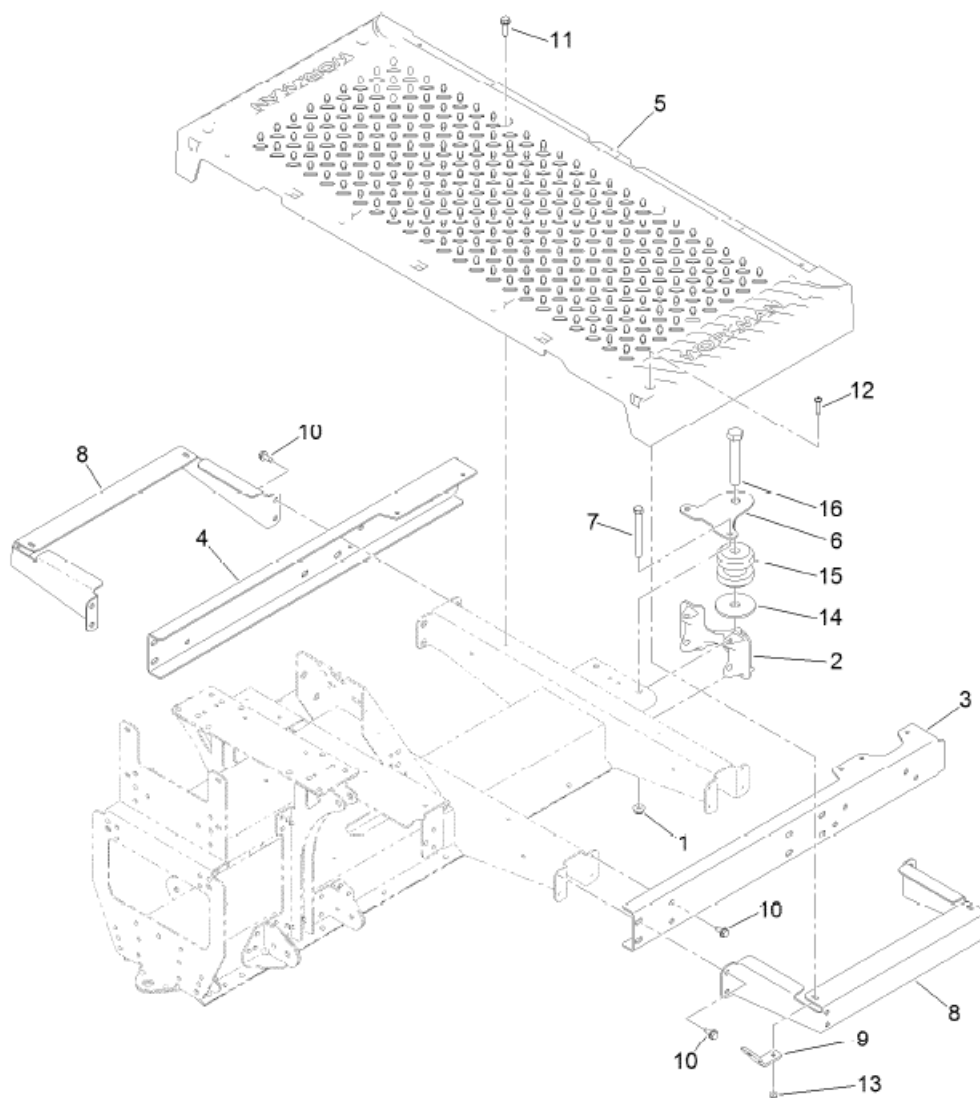


Floor Plate and Rear Suspension Mount Assembly

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>		<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	104-8301	2	Nut-HF, NI		9	127-7832	2	Bracket-Angle
2	131-8466	1	Mount-Suspension, Rear		10	32144-70	16	Screw-HWHTF
3	127-7820-03	1	Channel-Frame, Front (LH)		11	32144-49	4	Screw-HWHTF
4	127-7821-03	1	Channel-Frame, Front (RH)		12	132-6777	4	Screw-TTH
5	127-7829	1	Plate-Floor		13	104-7201	4	Nut-HF, NI
6	131-8597	1	Plate-Gimbal, Upper		14	110-4549	1	Washer-Snubbing
7	323-42	2	Screw-HH		15	131-8480	1	Isolator
8	127-7837-03	2	Bracket-Support, Floor Plate		16	104-5877	1	Screw-HH

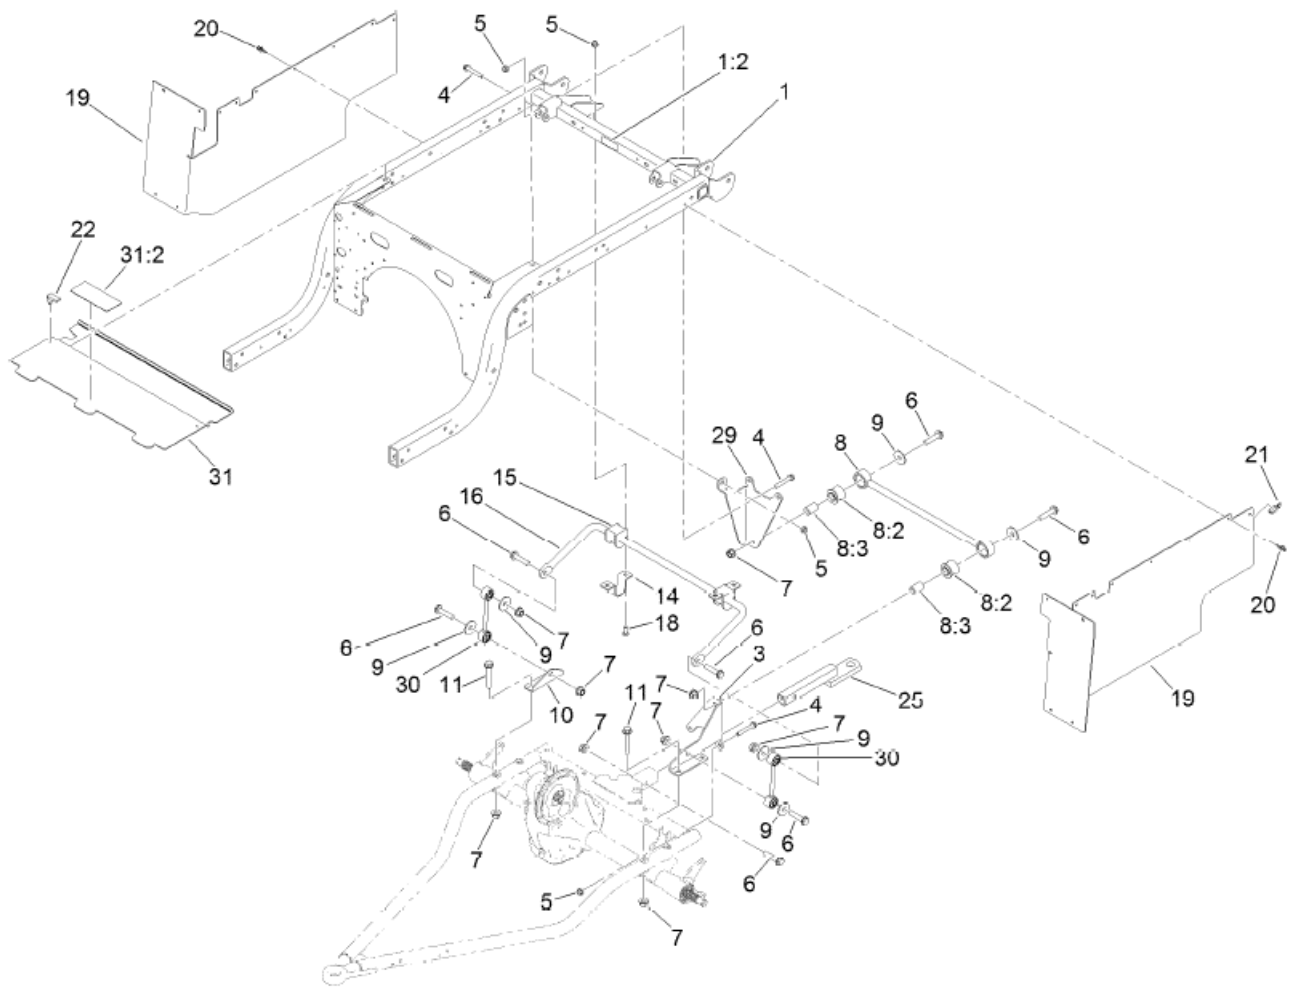


Rear Frame and Suspension Assembly

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>		<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	140-2498	1	Rear Frame ASM		14	139-4644	2	Clamp, Anti-Sway Bar
1:2	115-2047	1	Decal-Surface, Hot		15	87-3910	2	Bushing-Rubber
3	127-7411-03	1	Bracket-Bar, Stabilizer		16	131-8310-03	1	Bar-Sway, Anti
4	3234-39	5	Screw-HHF		18	3231-22	4	Screw-CARR
5	104-8301	9	Nut-HF, NI		19	131-8346	2	Panel-Side
6	3234-46	7	Screw-HHF		20	125-9622	20	Rivet-Blind
7	99-5107	11	Nut-Lock		21	3290-378	2	Tie-Cable
8	109-5013	1	Panhard Rod ASM		22	74-5950	2	Latch-Swell
8:2	109-5009	2	Bushing-Suspension,		25	137-6741	1	Ball Mount ASM
			Rubber		29	139-4648-03	1	Bracket-Stabilizer Bar
8:3	109-5010	2	Spacer					[black]
9	86-1990	6	Washer-Thrust		30	139-4606	2	Link ASM-Sway Bar
10	131-8315	1	Bracket-Link, Sway Bar		31	140-4573	1	Extended Panel-Cover
11	3234-40	4	Screw-HF		31:2	99-7345	1	Decal-Warning

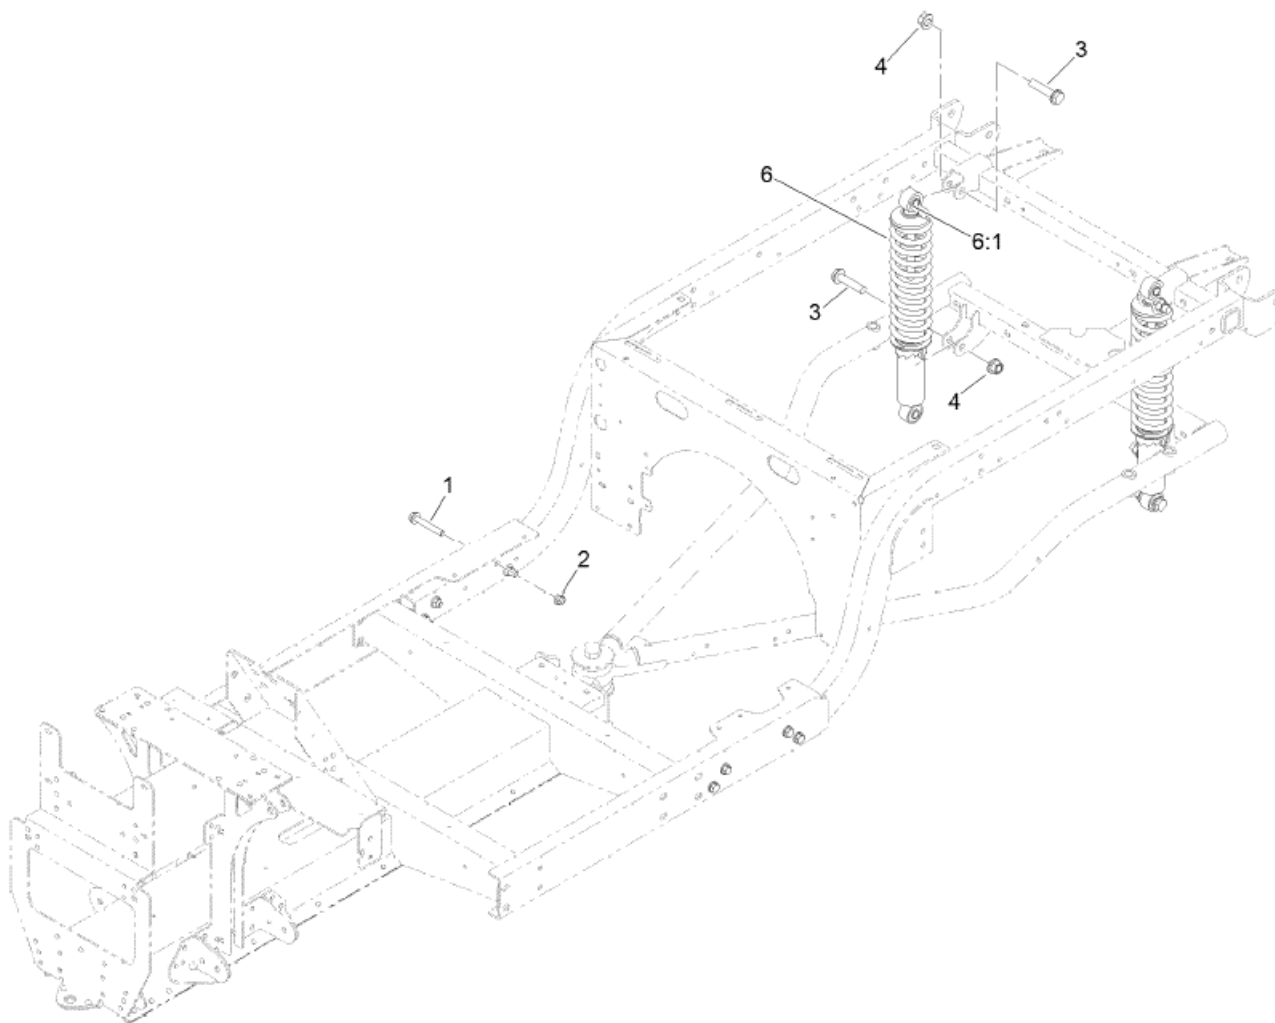


Frame Mount and Rear Shock/Spring Assembly

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	3234-39	8	Screw-HHF
2	104-8301	8	Nut-HF, NI
3	3234-46	4	Screw-HHF
4	99-5107	4	Nut-Lock
6	139-4608	2	Shock/Spring ASM
6:1	131-8574	2	Isolator-Shock

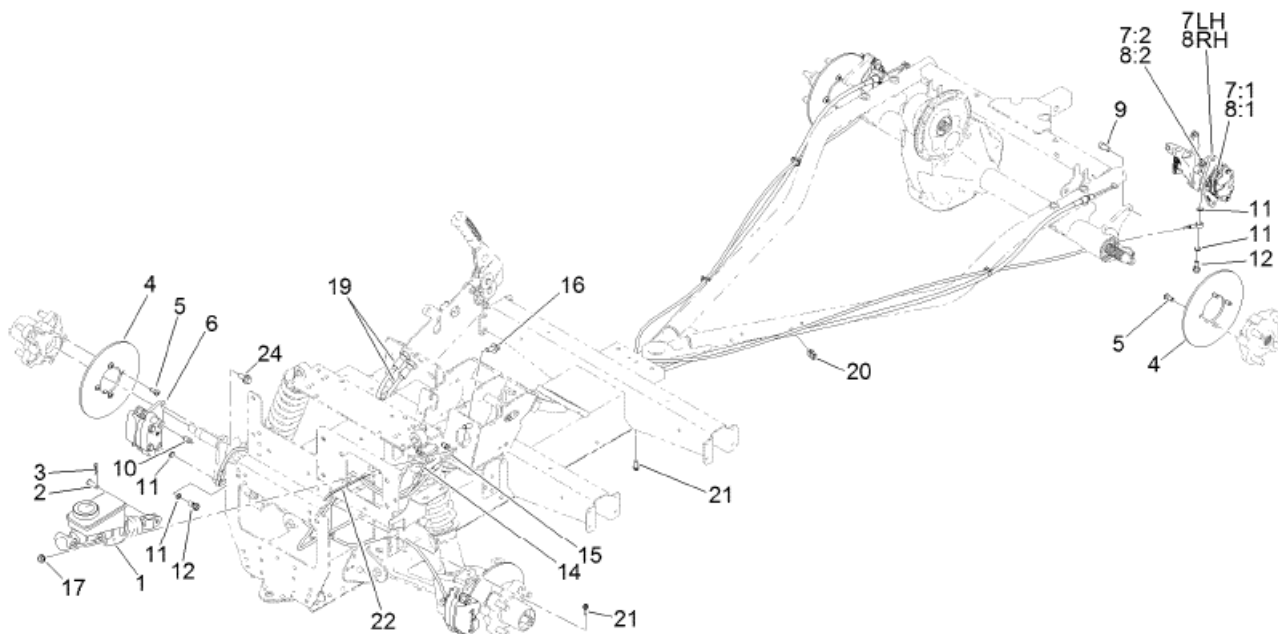


Brake Assembly

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>		<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	104-6782	1	Master Cylinder ASM		8:3	136-6328	2	Spring-Rattle, Anti ●
2	283-2	1	Pin-Clevis		9	131-8573	4	Screw-HSH
3	1-806003	1	Pin-Cotter		10	119-9509	2	Screw-Bleed
4	139-4474	4	Rotor-Brake		11	115-2341	8	Washer-Banjo
5	121-9671	16	Screw-HSBH		12	120-4875	4	Bolt-Flange, Banjo
6	140-2575	2	Brake Caliper ASM		14	127-7781	1	Brake Line-Front
7	140-2585	1	Brake Caliper ASM, LH		15	127-7782	1	Brake Line-Rear
7:1	140-2595	1	Brake Pad Service Kit (Rear,		16	3234-11	2	Screw-HHF
			Qty 4)		17	3290-357	2	Nut-HHF, Whiz
7:2	119-9509	1	Screw-Bleed		19	131-8406	2	Cable-Park Brake
7:3	136-6328	2	Spring-Rattle, Anti ●		20	32180-030	4	Clip-Tie
8	140-2590	1	Brake Caliper ASM, RH		21	49-2040	2	Screw-HWHTF
8:1	140-2595	1	Brake Pad Service Kit (Rear,		22	3290-378	1	Tie-Cable
			Qty 4)		24	3234-25	4	Screw-HHF
8:2	119-9509	1	Screw-Bleed					

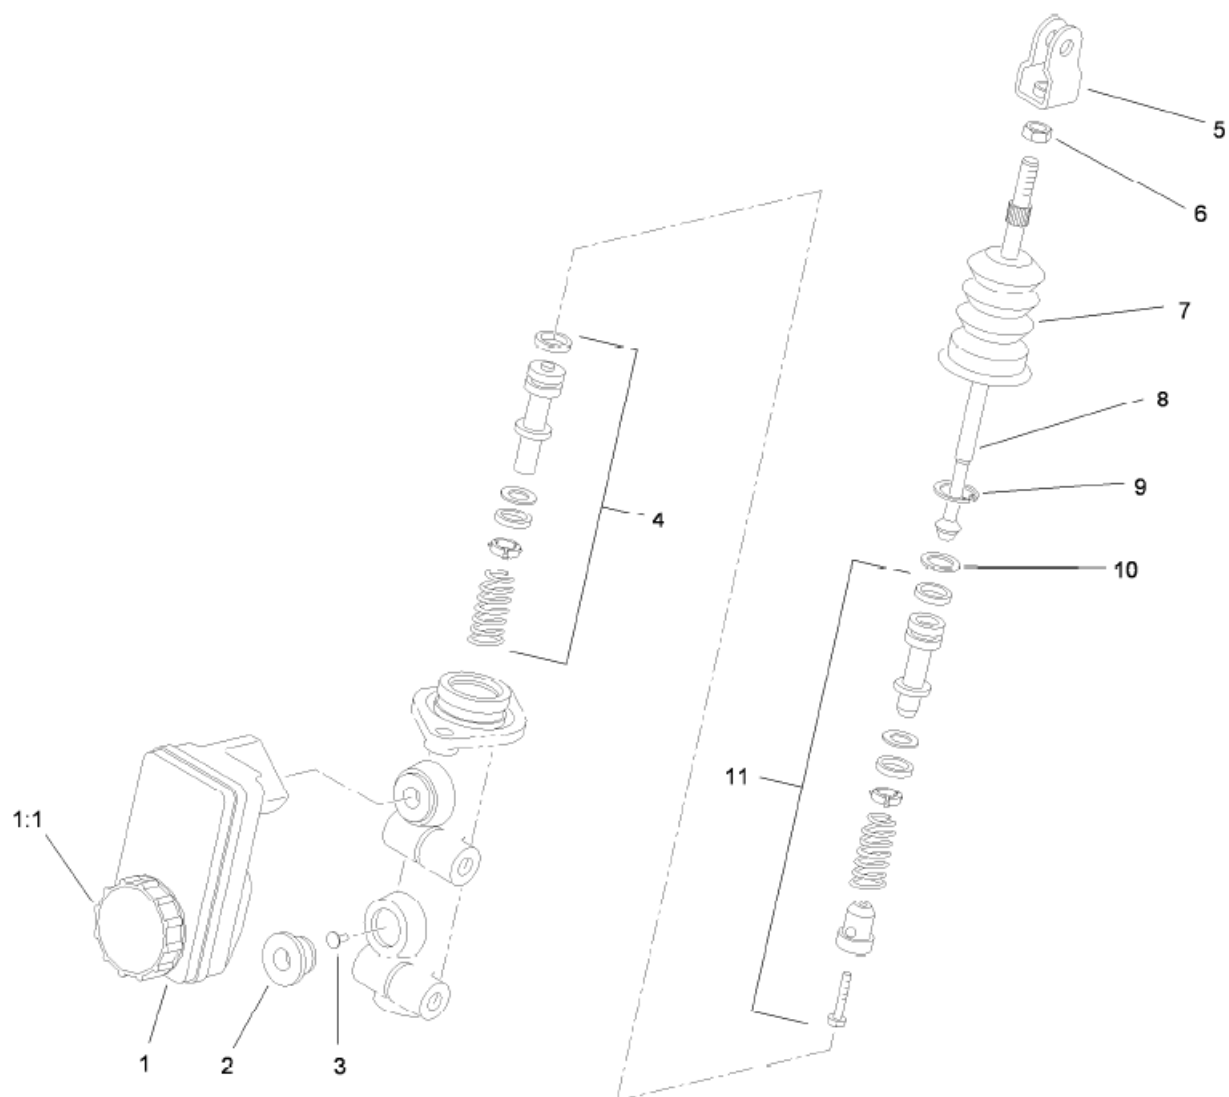


Master Cylinder Assembly No. 104-6782

Ref.	Part Number	Qty.	Description
1	104-6845	1	Reservoir ASM
1:1	92-4112	1	Cap ASM
2	93-8971	2	Seal-Port, Flange
3	92-4103	1	Pin-Stop
4	92-4102	1	Secondary Piston ASM
5	92-4110	1	Clevis
6	21-0360	1	Nut-Hex
7	94-5209	1	Cover-Dust
8	94-5210	1	Rod-Push
9	92-4109	1	Ring-Snap
10	92-4108	1	Retainer-Washer
11	92-4101	1	

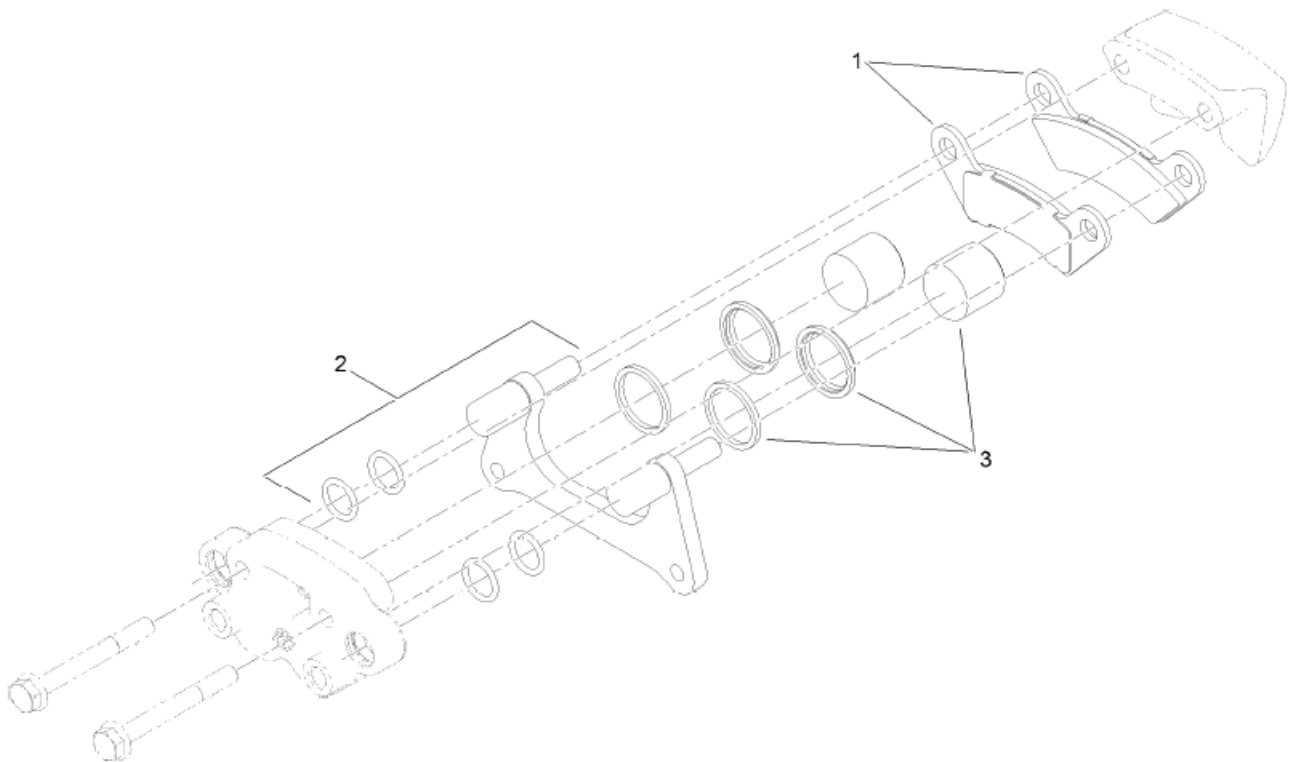


Brake Caliper Assembly No. 140-2575

Ref.	Part Number	Qty.	Description
1	140-2580	1	Brake Pad Service Kit (Front, Qty 4)
2	119-9511	1	Bracket Kit
3	133-0614	1	Piston Kit

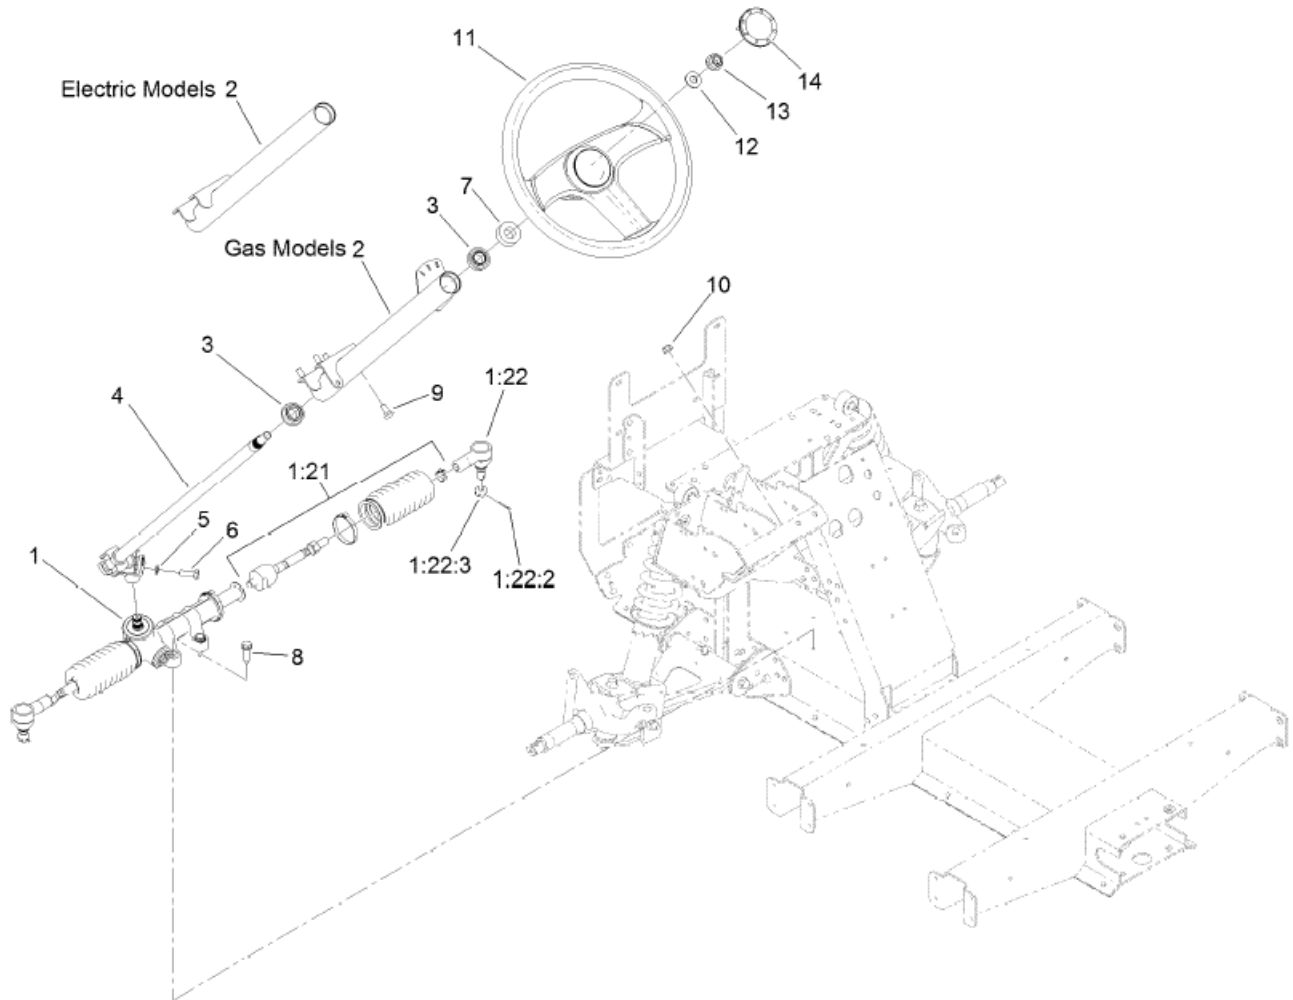


Steering Assembly

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>		<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	138-0114	1	Steering Rack ASM		6	116-3515	1	Screw-HH, Special
1:21	140-4591	1	Kit-Tie Rod ASM, Gtx		7	21-9260	1	Cover-Dust
1:22	140-4592	1	Kit-Rod End ASM		8	32144-49	4	Screw-HWHTF
1:22:2	3272-42	1	Pin-Cotter		9	3230-1	4	Bolt-CARR
1:22:3	140-2493	1	Nut-Hex, Slotted		10	104-8300	4	Nut-HF, NI
2	139-3343	1	Steering Column ASM		11	131-0957	1	Wheel-Steering
3	112-3262	2	Bearing		12	3256-26	1	Washer-Flat
4	127-8804	1	Shaft-Steering		13	99-5107	1	Nut-Lock
5	3253-4	1	Washer-Lock		14	131-3630	1	Cap-Wheel, Steering

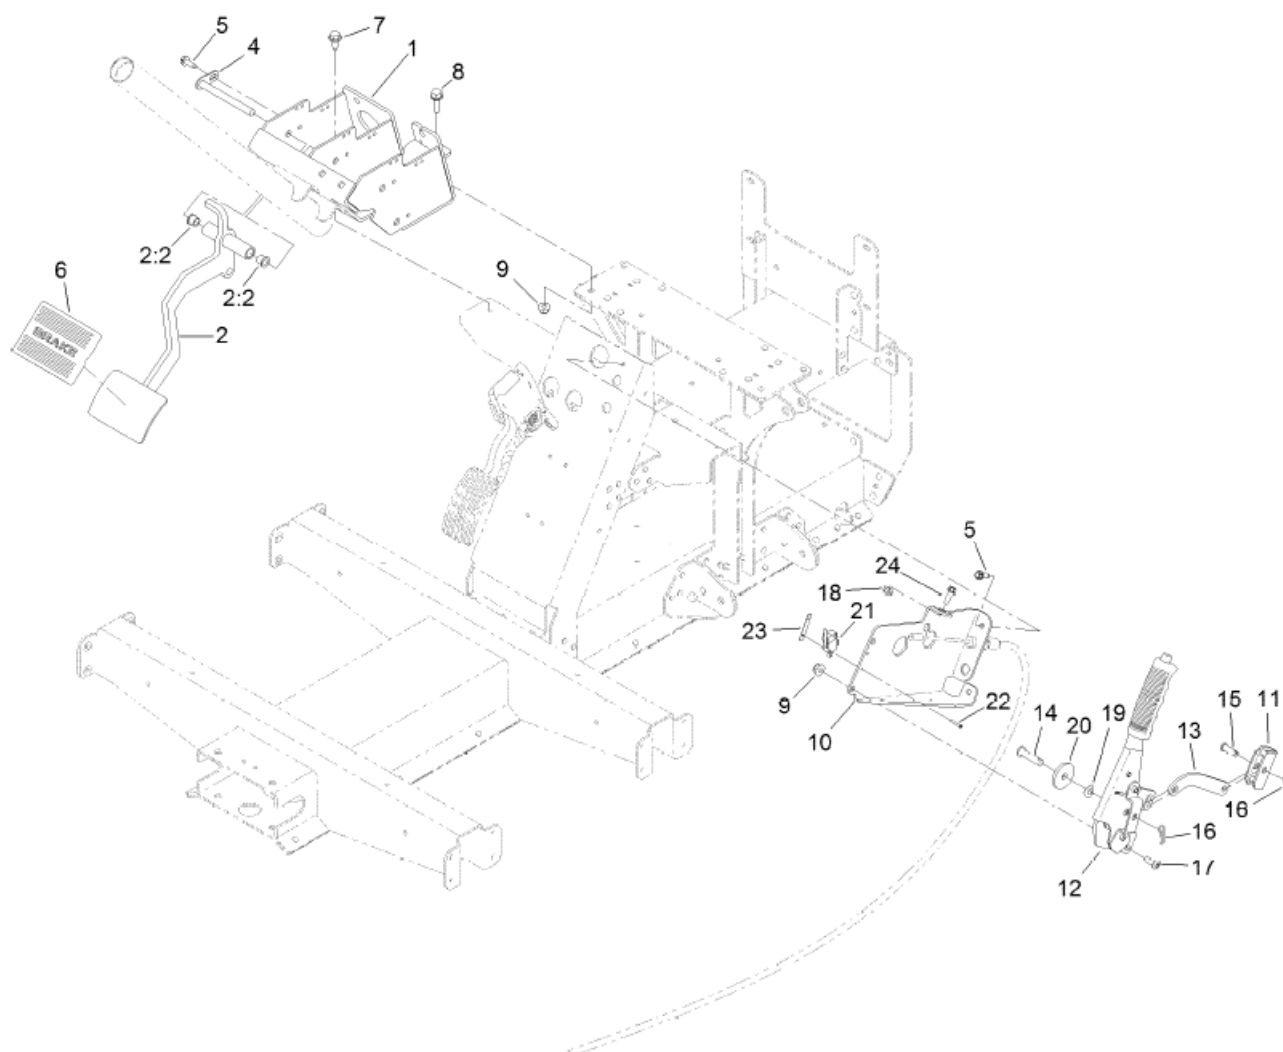


Pedal and Control Assembly

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>		<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	127-8817-03	1	Mount-Pedal		13	144-0516	1	Link-Park, Brake
2	138-9385	1	Brake Pedal ASM		14	283-10	1	Pin-Clevis
2:2	256-116	2	Bushing-Flange		15	1-808280	1	Pin-Clevis
4	131-8459	1	Shaft-Pivot		16	1-806003	2	Pin-Cotter
5	49-2040	3	Screw-HWHTF		17	3274-55	2	Screw-HSBH
6	7-3900	1	Pad-Brake		18	104-7201	1	Nut-HF, NI
7	32144-70	2	Screw-HWHTF		19	121-4605	1	Washer-Spring
8	3234-29	1	Screw-HHF		20	131-8496	1	Washer-Plain
9	104-8300	3	Nut-HF, NI		21	108-6496	1	Switch (W/Boot)
10	140-4836-03	1	Mount-Park Brake		22	3290-313	2	Screw-SPH
11	87-3480	1	Bracket-Equalizer, Cable		23	3290-354	1	Nut-Speed
12	131-8320	1	Lever-Brake, Park		24	115-5103	1	Screw-HHF

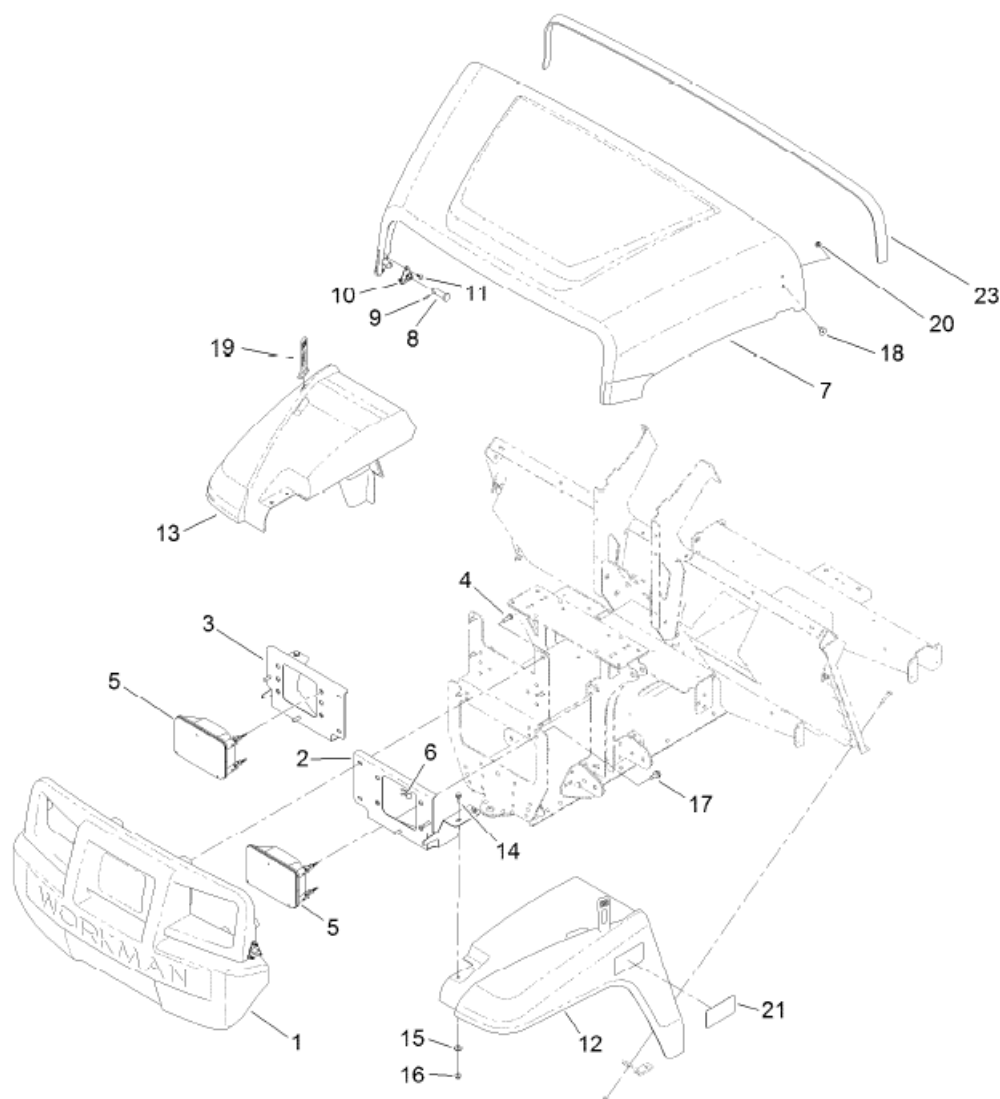


Hood and Fender Assembly

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>		<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	132-8530	1	Bumper		12	127-7771	1	Fender-Front, LH
2	131-8455-03	1	Bracket-Headlight, LH		13	127-7772	1	Fender-Front, RH
3	131-8456-03	1	Bracket-Headlight, RH		14	3234-33	4	Screw-HHF
4	46-8091	8	Screw-HWH		15	3256-2	4	Washer-Flat
5	138-9260	2	Headlight ASM		16	104-7201	4	Nut-HF, NI
6	115-2408	6	Clip-Speed		17	32144-70	2	Screw-HWHTF
7	136-6281	1	Hood		18	125-1122	2	Screw
8	117-5094	2	Pin-Clevis		19	131-8402	2	Strap-Down, Hold
9	32121-50	2	Pin-Spring		20	3296-56	2	Nut-Lock, NI
10	112-3308	2	Retainer-Pin		21	140-4585	2	Decal-Fender, Gtx, Lithium
11	121-9605	6	Screw-HWH		23	133-7210	1	Seal-Trim, Hood

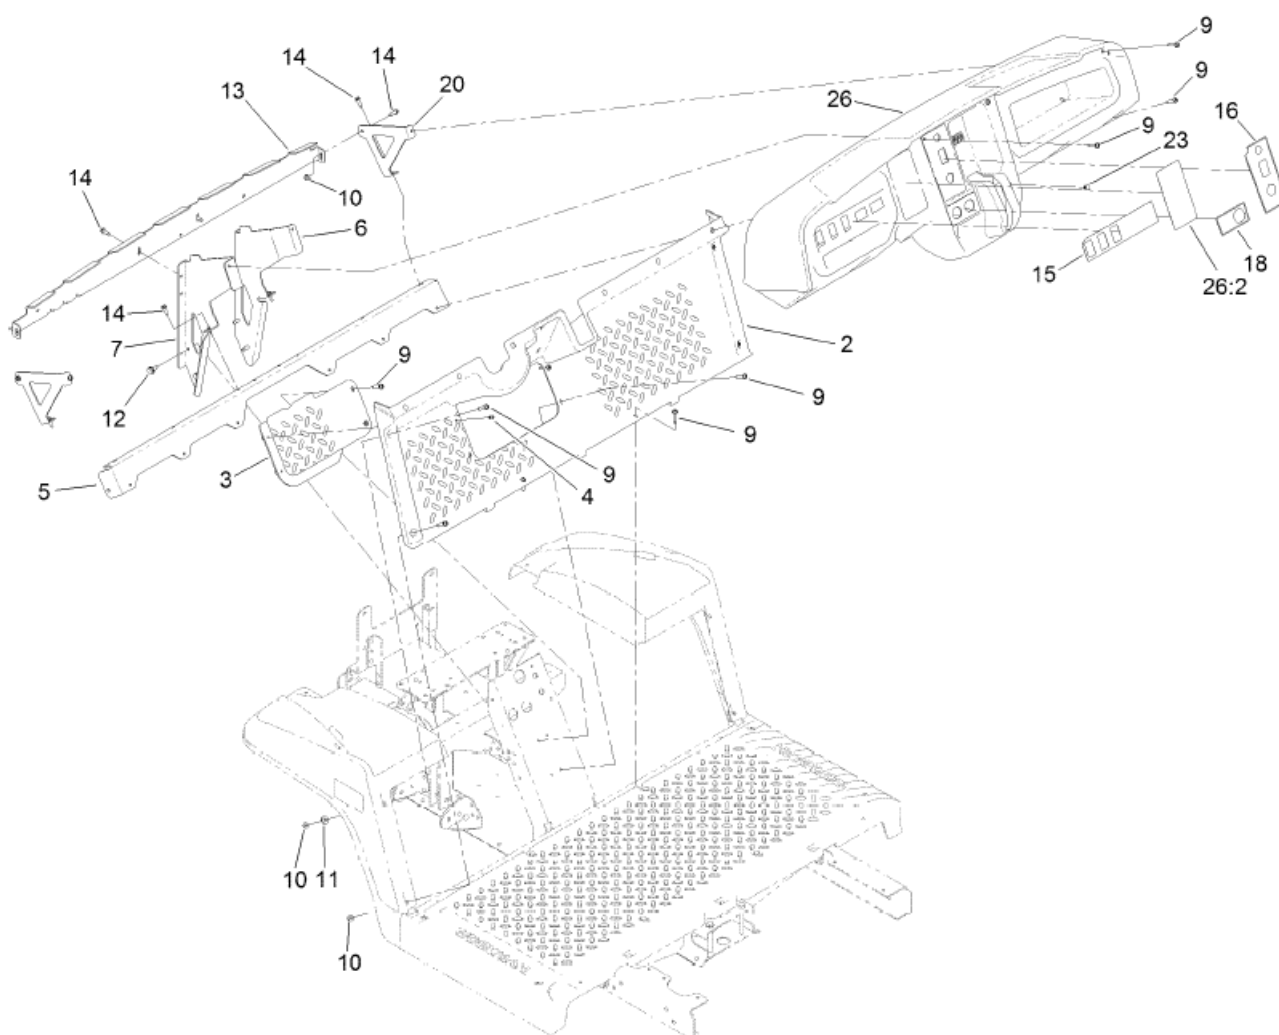


Dash Assembly

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>		<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
2	127-7846	1	Footboard		14	49-2040	8	Screw-HWHTF
3	127-7847	1	Cover-Footboard		15	140-4584	1	Decal-Dashboard,
4	107-7461	2	Screw-Plastite					Gtx-Lithium
5	127-7831-03	1	Angle		16	131-8412	1	Decal-Control Panel,
6	131-8336-03	1	Bracket-Dash, RH					Electric
7	131-8335-03	1	Bracket-Dash, LH		18	131-8493	1	Decal-USB
9	132-6777	20	Screw-TTH		20	131-8569-03	2	Bracket-Dash, Side
10	104-7201	6	Nut-HF, NI		23	104-9368	1	Plug-Dome
11	3256-2	2	Washer-Flat		26	140-2486	1	Dash-Gtx Lithium (Service)
12	32144-70	4	Screw-HWHTF		26:2	140-4584	1	Decal-Dashboard,
13	131-8568-03	1	Reinforcement-Dash					Gtx-Lithium

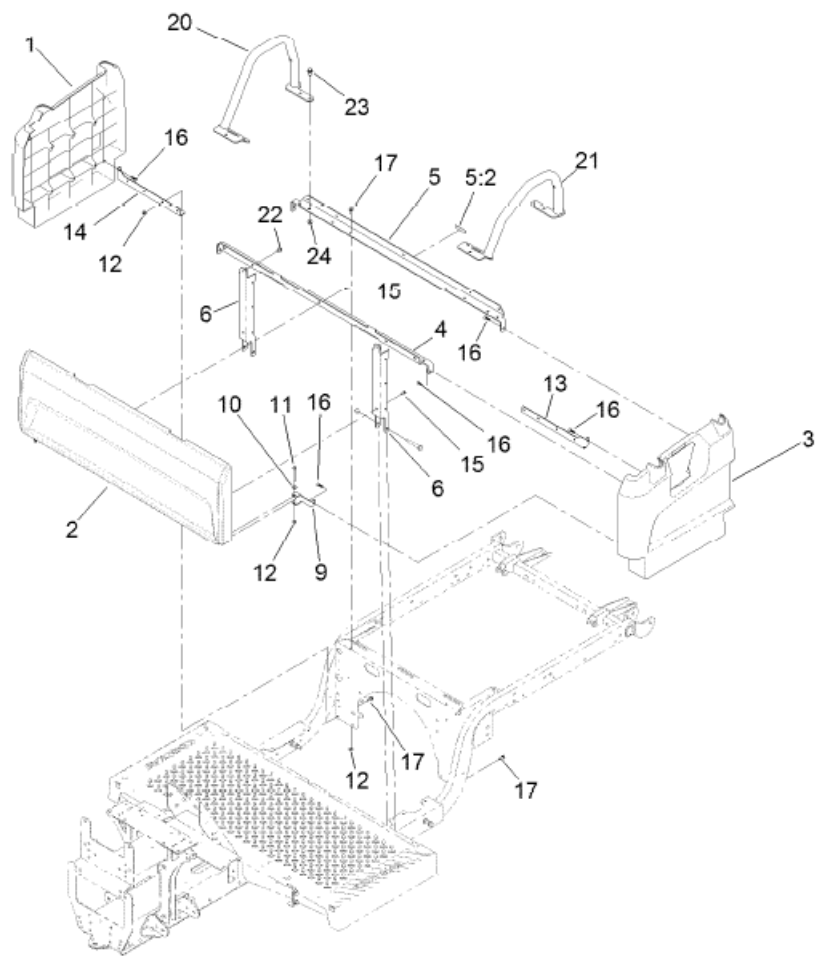


Seatbase Assembly

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>		<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	127-7805	1	Side-Base, Seat (RH)		13	127-7842-03	1	Bracket-Support, Side (LH)
2	133-7188	1	Panel-Base, Seat		14	127-7843-03	1	Bracket-Support, Side (RH)
3	127-7807	1	Side-Base, Seat (LH)		15	112-6349	5	Screw-HWH
4	133-7345-03	1	Support-Seat		16	120-2349	8	Screw
5	137-6991	1	Seat Support ASM		17	3234-33	6	Screw-HHF
5:2	120-9570	1	Decal-Warning		20	131-8352-05	1	Restraint-Hip, RH
6	127-7841-03	2	Channel-Support, Seat		21	131-8353-05	1	Restraint-Hip, LH
9	127-7844-03	2	Clamp-Plate, Floor		22	46-6810	2	Screw And Washer ASM
10	3256-22	2	Washer-Flat		23	32144-70	6	Screw-HWHTF
11	321-18	2	Screw-HH		24	104-8300	6	Nut-HF, NI
12	104-7201	8	Nut-HF, NI					

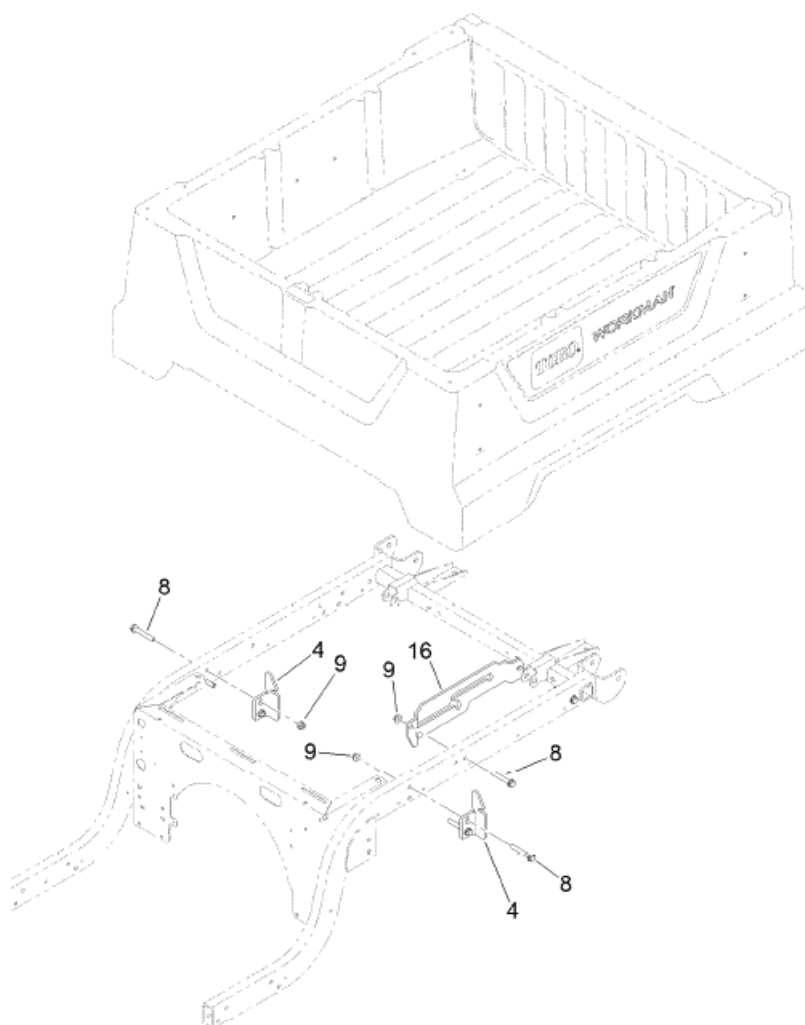


Cargo Bed Assembly

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
4	127-7428-03	2	Striker-Latch, Bed
8	3234-39	6	Screw-HHF
9	104-8301	6	Nut-HF, NI
16	132-8518	1	Bracket-Rod, Prop

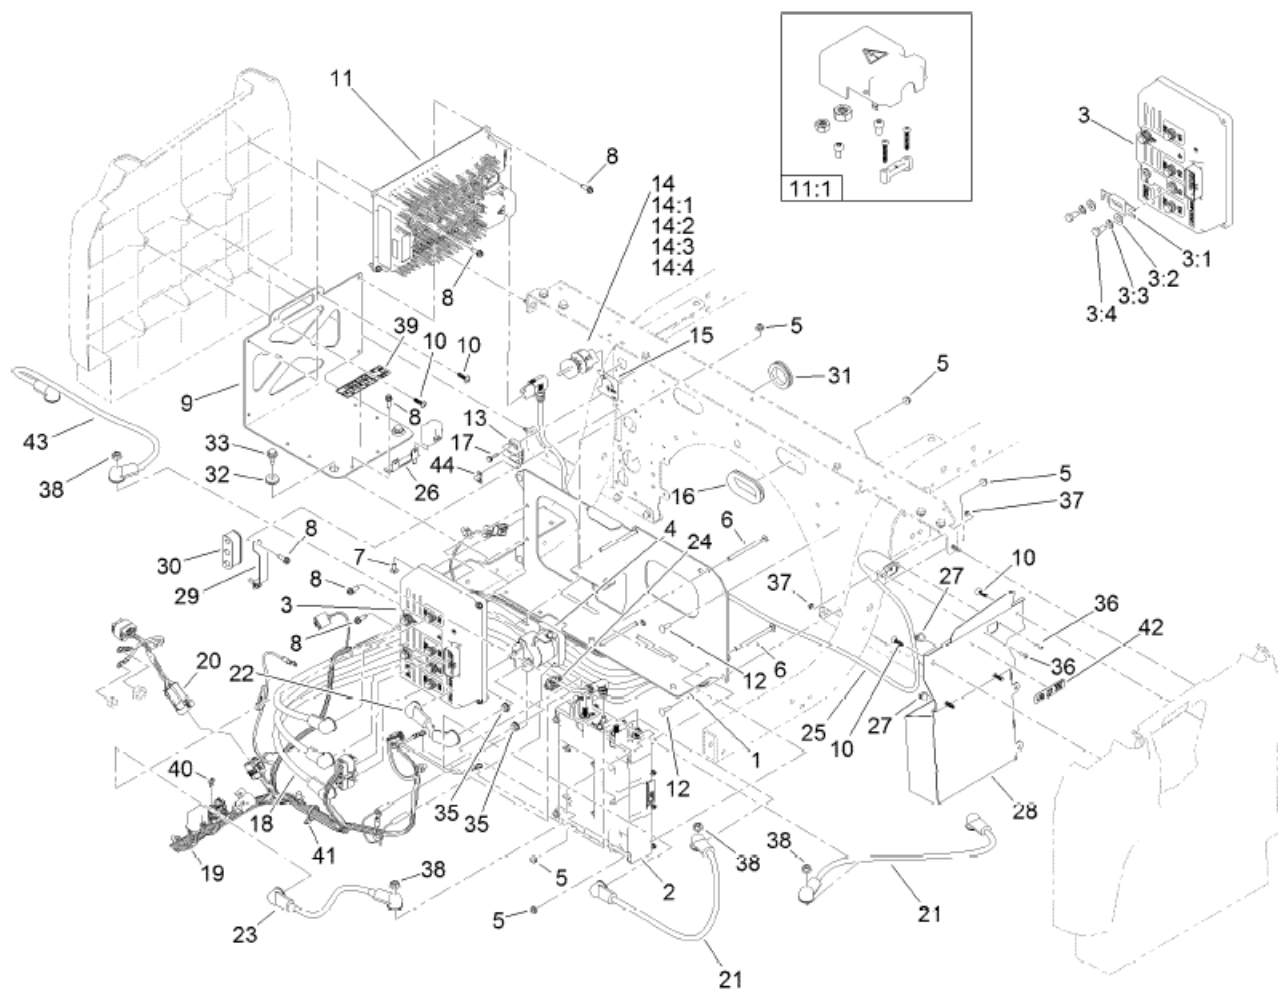


Controller and Charger Assembly

Ref.	Part Number	Qty.	Description		Ref.	Part Number	Qty.	Description
1	139-4639-03	1	Bracket-Controller, Lithium		14	110-2580	1	Switch-Key, Supervisor
2	137-9651	1	Controller		14:1		1	Switch-Key ●
3	139-4600	1	Controller-Sevcon		14:2	108-8660	1	Nut-Mounting
3:1	131-8494	1	Fuse-425 Amp		14:3	110-5221	1	Set-Key, Supervisor
3:2	33094-00	6	Washer-Plain		14:4	108-8659	1	Washer-Backup
3:3	3253-4	6	Washer-Lock		15	131-8527	1	Decal-Mode
3:4	33114-016	6	Screw-HH		16	240-12	1	Grommet-Rubber
4	104-7136	1	Contactor-Trombetta		17	100-4351	2	Screw-HWH
5	104-7201	10	Nut-HF, NI		18	122-1718	3	Battery-Cable, Positive ASM
6	139-4633	4	Screw-Carriage		19	122-1663	1	Harness-Wire, Gtx-Li
7	3229-11	2	Screw-CARR		20	122-1918	1	Harness-Wire, Gtx-Li
8	49-2040	12	Screw-HWHTF					Charger Interface
9	139-4629-03	1	Bracket-Charger, Lithium		21	122-1741	2	Cable-Battery, Positive ASM
10	120-2349	6	Screw		22	122-1743	1	Cable-Battery, Positive ASM
11	139-4645	1	Charger-48V Onboard		23	122-1745	1	Cable-Battery, Negative
11:1	140-2494	1	Charger Kit-Service					ASM
12	1-807512	4	Bolt-CARR		24	122-1667	1	Harness-Wire,
13	42862	1	Block-Terminal, Ground					Interface(System)

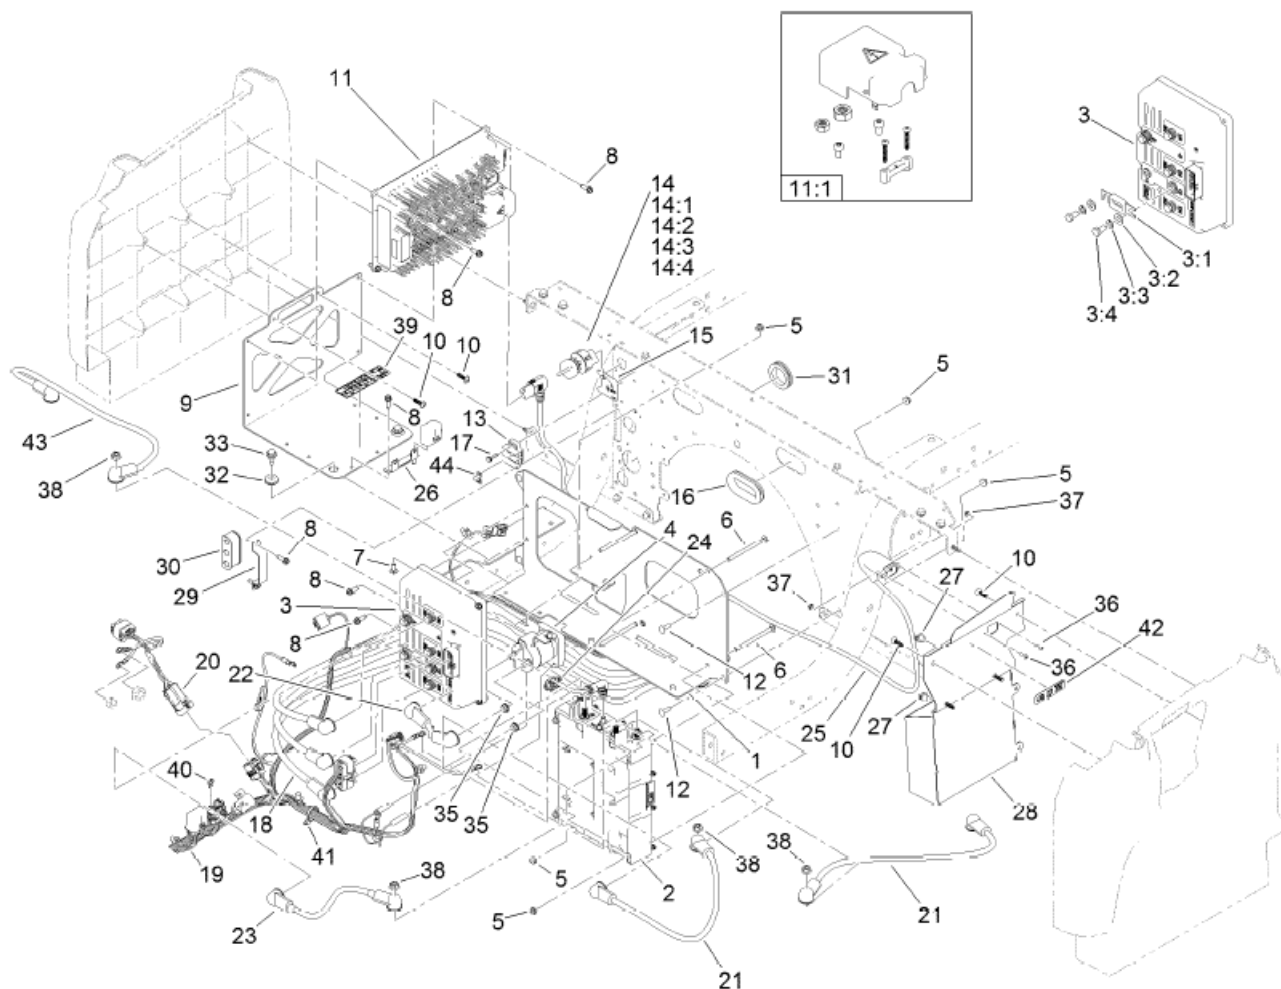


c	Part Number	Qty.	Description	Ref.	Part Number	Qty.	Description
25	140-4628	1	Cordset W/Filter	36	3250-26	2	Screw-PPH
26	138-9299	1	Bracket-Fuse Block	37	3296-54	2	Nut-Lock
27	32180-030	4	Clip-Tie	38	140-2488	4	Nut-HF
28	140-2496-05	1	Bracket-Charger Outlet	39	140-2487	1	Decal-Fuse Block, 48V
			ASM [blk	40	121-8884	1	Fuse-Mini Blade, 30 Amp
29	140-4579	1	Retainer-Isolator	41	3290-378	1	Tie-Cable
30	131-8420	1	Isolator-Clamp	42	140-4590	1	Decal-Charger Input Lithium
31	240-7	1	Grommet-Rubber	43	122-1744	1	Cable-Battery, Negative
32	1-633630	2	Grommet				ASM
33	99-5105	2	Screw-Shoulder	44	42863	1	Strip-Jumper
35	107-0380	2	Nut-HHF				

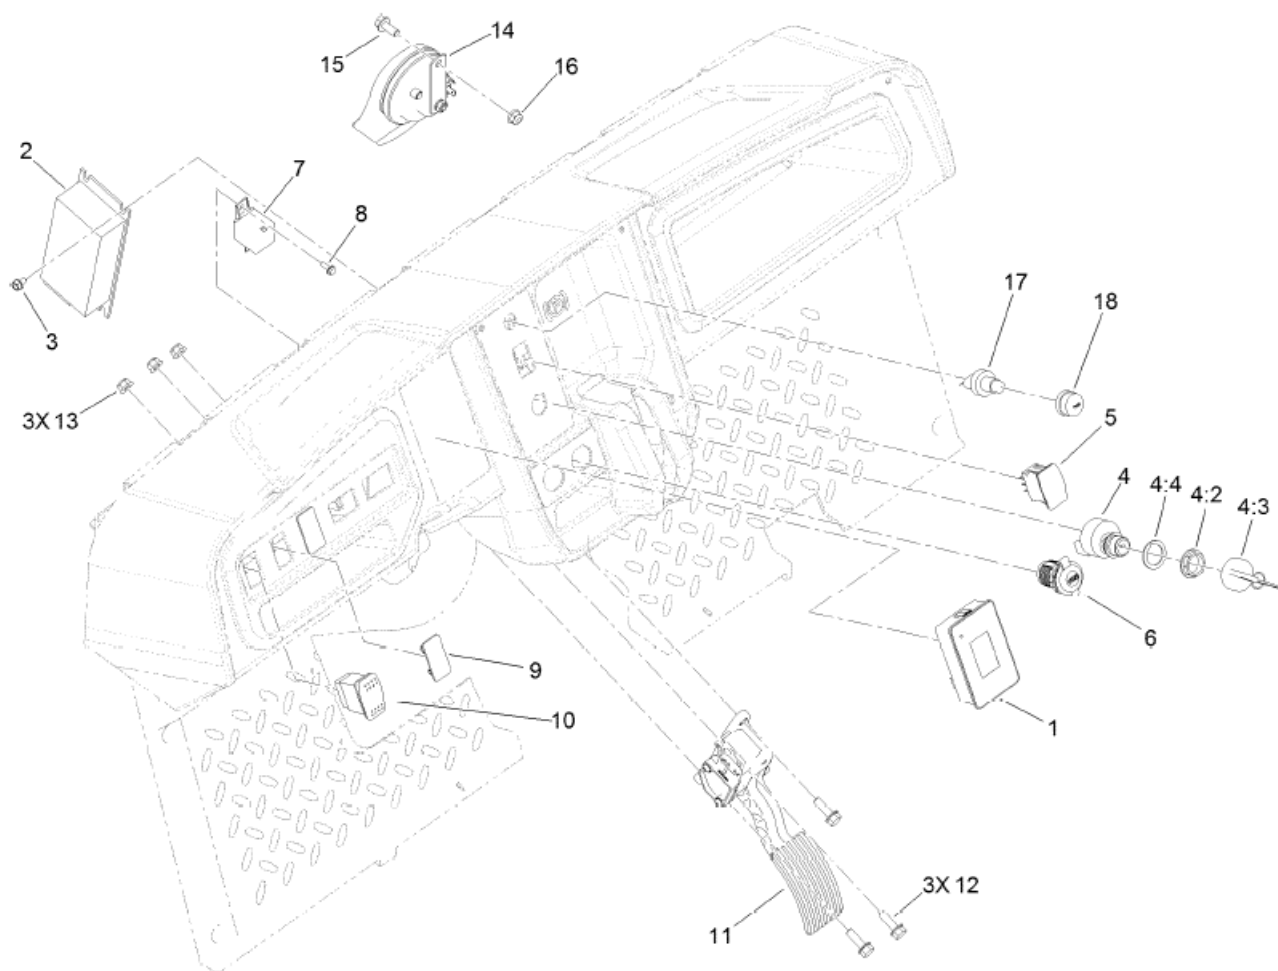


Accelerator Pedal and Horn Assembly


<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>		<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	122-2152	1	Controller, Tdm-1601		9	99-7420	2	Plug-Hole
2	137-7952	1	Converter-DC-DC		10	95-8999	1	Switch
3	99-8445	2	Screw-HWH		11	121-9675	1	Pedal-Accelerator
4	106-5269	1	Ignition Switch ASM		12	3234-29	3	Screw-HHF
4:2	108-8660	1	Nut-Mounting		13	104-8300	3	Nut-HF, NI
4:3	106-5270	1	Ignition Key Set		14	107-0358	1	Horn
4:4	108-8659	1	Washer-Backup		15	3234-5	1	Screw-HHF
5	122-0784	1	Switch-Rocker, On-Off-On		16	104-8300	1	Nut-HF, NI
6	131-8388	1	Socket-USB		17	112-3324	1	Switch-Horn
7	122-1488	1	Relay		18	112-3313	1	Nut-Weatherproof
8	32144-1	1	Screw-Taptite					

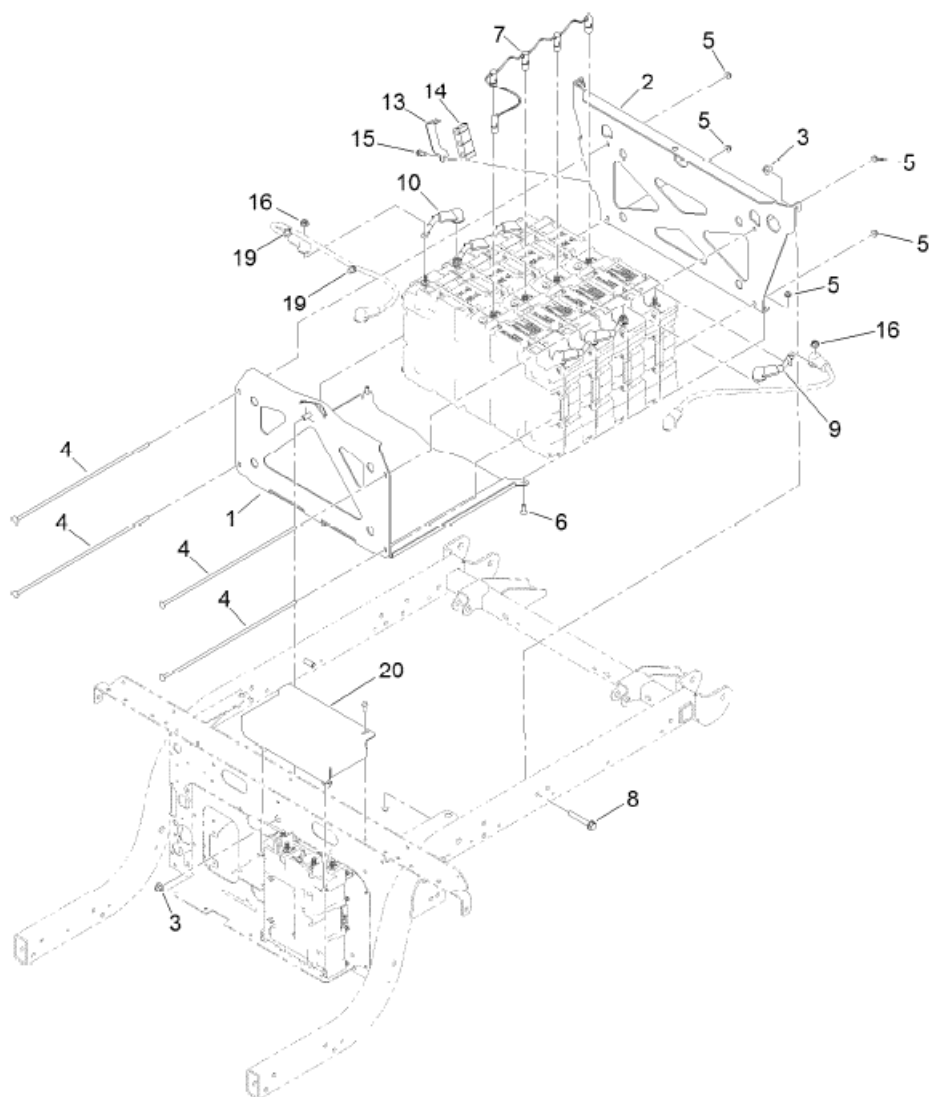

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>		<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	139-4609-03	1	Front Bracket ASM [black]		10	122-1697	3	Cable-Battery, Negative
2	139-4636-03	1	Bracket-Rear, Lithium		13	131-8482	1	Retainer-Isolator
3	104-8301	3	Nut-HF, NI		14	131-8420	1	Isolator-Clamp
4	139-4628	4	Screw-CARR		15	49-2040	1	Screw-HWHTF
5	104-7201	6	Nut-HF, NI		16	140-2488	8	Nut-HF
6	1-807512	2	Bolt-CARR		17	107-0384	1	Powercord-AC ●
7	122-1716	1	Cable-Data, Samsung M/S		19	32180-030	2	Clip-Tie
8	3234-39	2	Screw-HHF		20	140-4799-03	1	Bracket-Shield, Bms
9	122-1696	3	Cable-Battery, Positive					

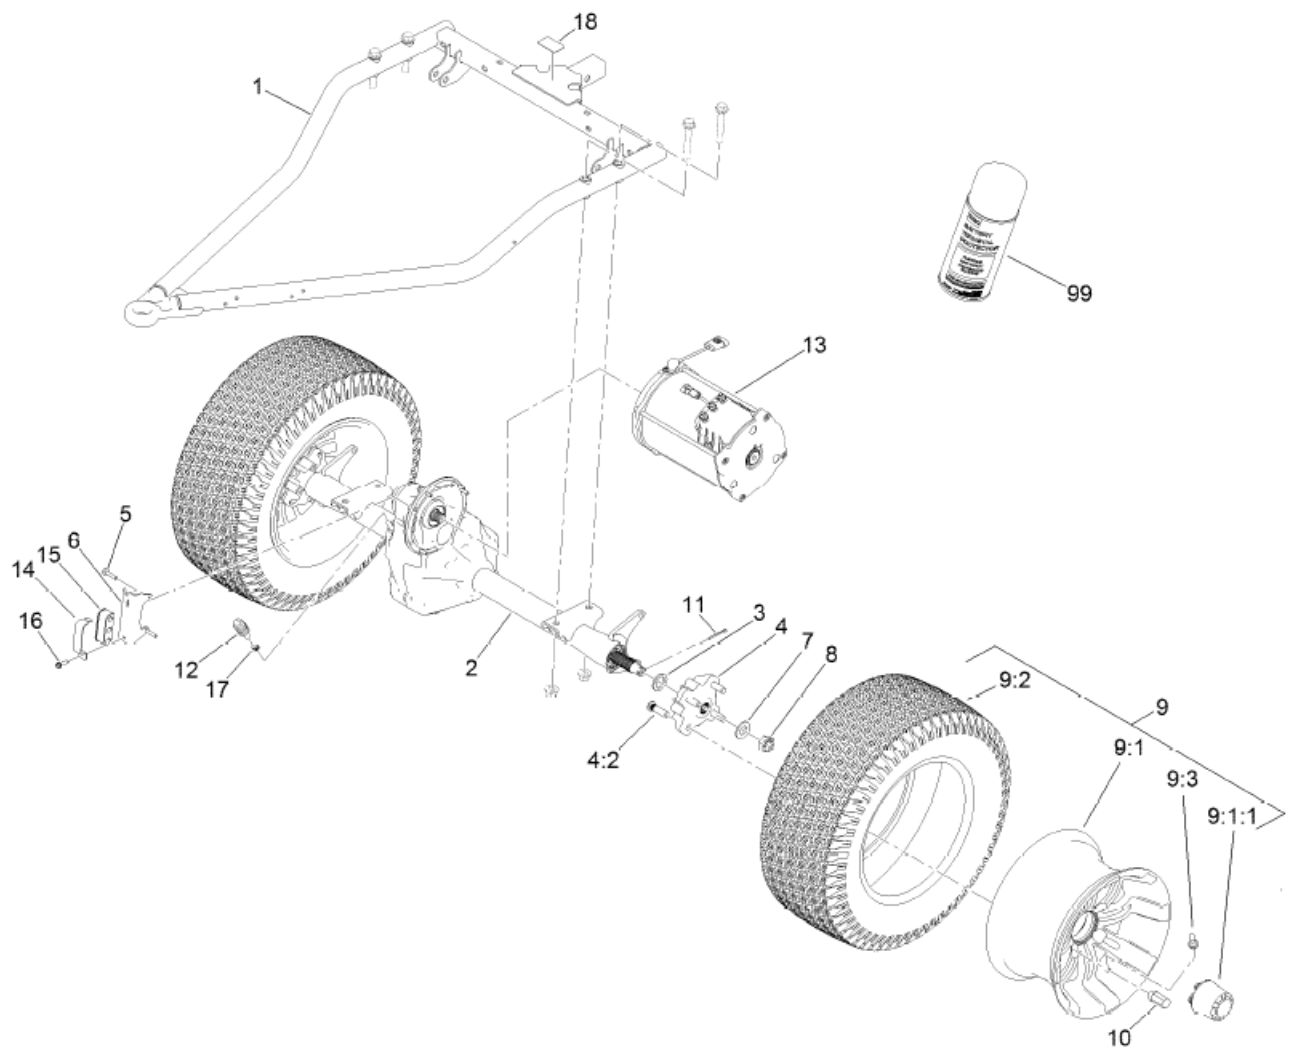


<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>		<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	133-2447	1	Housing-Axle		15	133-2461	1	Differential ASM
2	133-2448	4	Bolt-Cap, Bearing		16	133-2462	4	Bolt-HHF
3	133-2485	1	Gear-Input		17	133-2463	4	Nut-Lock
4	133-2450	3	Ring-Retaining		18	133-2487	1	Input Gear Kit
5	133-2451	3	O-Ring		19	136-6341	1	Plate-Cover
6	133-2452	1	Bearing-Ball		20	133-2466	1	Plug-HH
7	133-2453	1	Bearing-Ball		21	133-2467	10	Screw-Tapping
8	133-2454	1	Seal-Oil		22	133-2468	1	Elbow-Hose
9	133-2455	2	Plug-Cap, End		23	133-2469	1	Shaft-Axle, LH
10	133-2456	2	Bearing-Ball		24	133-2470	1	Shaft-Axle, RH
11	133-2486	1	Intermediate Gear ASM		25	112-3140	2	Seal-Oil
12	133-2458	2	O-Ring		26	133-2472	4	Ring-Retaining
13	133-2459	1	Gear-Drive, Final		27	108-2425	2	Bearing-Ball
14	133-2460	2	Bearing-Ball		28	108-2409	1	Internal Gear Kit

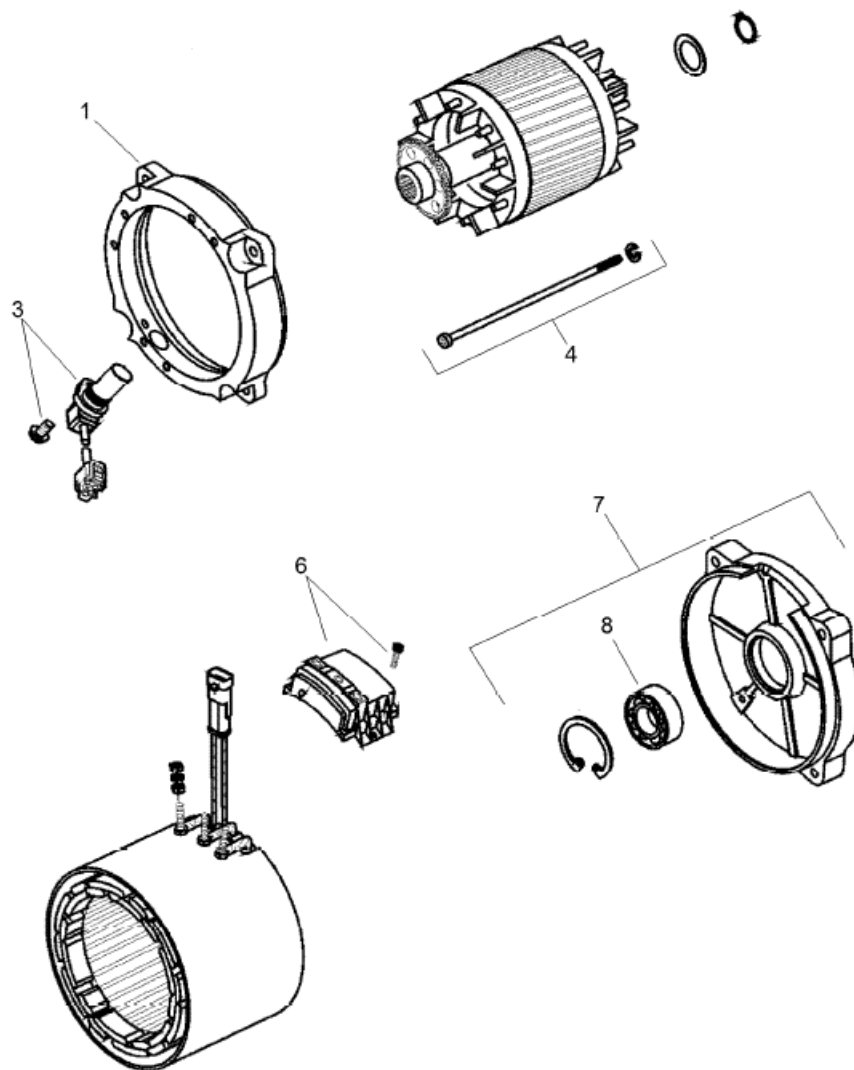

Electric Motor Assembly No. 137-6936

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	132-4924	1	Bracket-End, Drive
3	132-4925	1	Sensor
4	132-4926	1	Screw
6	132-4927	1	Plate-Connection
7	132-4928	1	Bracket-End, Rear
8	132-4929	1	Bearing

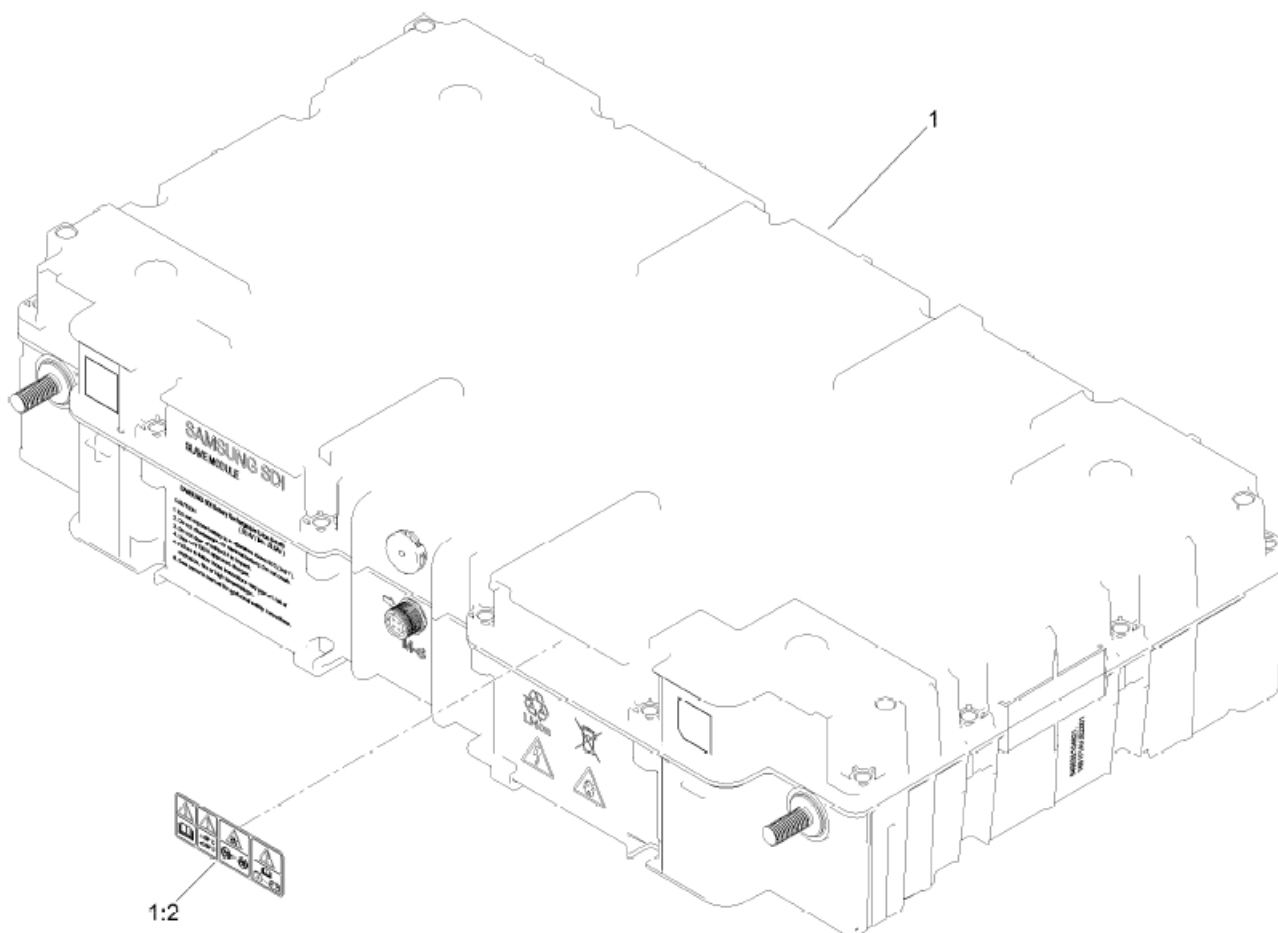

Battery Assembly No. 04070

Ref. Part Number Qty. Description

1 1 Battery Service ASM ●

1:2 137-9712 1 Decal-Safety

Attachments and Accessories

For 07413LT Workman GTX Lithium Utility Vehicle

Product Name Model/Part


- Workman GTX 2-Person Canopy 07921
- 48V Electric Lift
Kit..... 07143
- Door Mount Mirror
Kit..... 136-1997
- Brush Guard Kit
..... 07145
- Front Hitch Kit, Workman GTX Series Utility Vehicles with Brush Guard
07146
- Small Seat
Cover..... 131-6690

- Front Hitch Kit, Workman GTX or MDX Series Utility Vehicles without Brush Guard
07147
- Steel Flat Bed Kit
..... 07148
- Storage Box
Kit..... 07156
- Brake and Signal Light Kit.....
132-8579
- Walk Spreader Mounting Kit
..... 07029
- 6in L-Track
Kit.....
07158
- 2in L-Track
Kit.....
07159
- Hose Reel Mounting Kit
..... 07027
- Horn
Kit.....
133-3017
- Beacon Kit
..... 130-
5484
- Reverse Alarm
Kit..... 131-8549
- Power Point Kit
..... 131-8550
- Exterior Mirror
Kit..... 130-5448
- Power Converter
Kit..... 133-0959
- Trash Can Mounting Kit
..... 07028
- Bed Rack Kit
..... 07031
- Cab
Kit.....
07142
- Mount-Ball
.....133-
7116
- Road Light and Homologation Kit

133-7128	
• 48V 6 Foot Bed Electric Lift Kit.....	07168
• Cab Mount Kit, Workman GTX Utility Vehicle with Extended Flatbed	133-7198
• Service Hood ASM	133-7209
• ROPS Kit	07032
• Cargo Bed Kit	07046
• Bench Seat Base Kit.....	07047
• Bucket Seat Base Kit	07048
• Small Bedrack Mount Grip Kit	136-6311
• Large Bedrack Mount Grip Kit.....	136-6312
• Plate-Skid	137-2887-03
• Ignition Switch ASM (Key1)	138-3505
• Ignition Switch ASM (Key2)	138-3506
• Ignition Switch ASM (Key3)	138-3507
• Ignition Switch ASM (Key4)	138-3508
• Ignition Switch ASM (Key5)	138-3509
• Glove Box Cover Kit	137-2883
• Folding Windshield Kit, Workman GTX Utility Vehicle with Canopy.....	07923
• Work Light Kit	130-5485
• Interior Mirror Kit	130-5449
• Windshield Washer Fluid Kit, 2015 and after Workman MD/HD Series Utility Vehicle	130-5615
• Wide Angle Mirror Kit	133-1009

- Wide Angle Mirror Kit 133-1038
- Bracket-Mount, Radio..... 133-7111-03
- Wireless Hourmeter Finish Kit 139-4627
- GTX Ball Cage ROPS, Certified..... 07161
- Canopy W/ ROPS..... 07169
- Canopy Mount Kit, Workman GTX Utility Vehicle with Extended Flatbed 07199

Documents / Resources

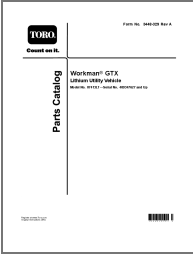	TORO 07413LT Workman® GTX Lithium Utility Vehicle [pdf] Instruction Manual 07413LT Workman GTX Lithium Utility Vehicle, 07413LT, Workman GTX Lithium Utility Vehicle, GTX Lithium Utility Vehicle, Utility Vehicle, Vehicle
--	--

References