



TORO 39901 Flex Force Power System 60V MAX Snowthrower User Manual

[Home](#) » [Toro](#) » TORO 39901 Flex Force Power System 60V MAX Snowthrower User Manual 

Contents

- [1 TORO 39901 Flex Force Power System 60V MAX Snowthrower User Manual](#)
- [2 Ordering Replacement Parts](#)
- [3 Understanding Reference Numbers](#)
- [4 Service Assembly Reference Numbers](#)
- [5 Reference Numbers Indicating Quantity](#)
- [6 Frame Assembly](#)
- [7 Frame Assembly \(continued\)](#)
- [8 Drive Belt Assembly](#)
- [9 Drive Belt Assembly \(continued\)](#)
- [10 Chute Assembly](#)
- [11 Chute Assembly \(continued\)](#)
- [12 Handle Assembly](#)
- [13 Handle Assembly \(continued\)](#)
- [14 Electrical Assembly](#)
- [15 Electrical Assembly \(continued\)](#)
- [16 Read More About This Manual & Download PDF:](#)
- [17 Documents / Resources](#)
 - [17.1 References](#)
- [18 Related Posts](#)

TORO 39901 Flex Force Power System 60V MAX Snowthrower User Manual



Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.


For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustration and in parts lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.


Frame Assembly

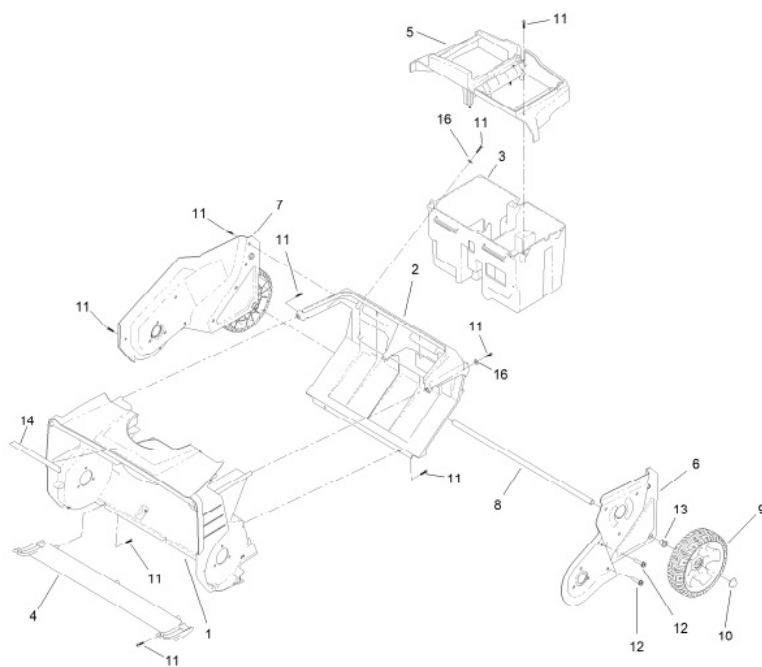

Frame Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>		<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	137-2276	1	Housing		9	137-9428	2	Wheel ASM
2	137-2280	1	Bulkhead		10	32112-14	2	Nut-Push
3	137-9425	1	Container-Battery		11	94-4496	25	Screw-PPH
4	137-2277	1	Scraper		12	137-3101	4	Screw-Plastic, HWH
5	137-9426	1	Skirt-Container, Battery		13	256-257	2	Bushing-Nyliner
6	137-9391	1	Plate-Frame Assembly, LH		14	137-2333	1	Decal-Power Edge
7	137-9393	1	Plate-Frame Assembly, RH		16	137-3073	6	Washer-Plain
8	137-2256-03	1	Axle		16	3256-77	6	Washer-Flat


Drive Belt Assembly

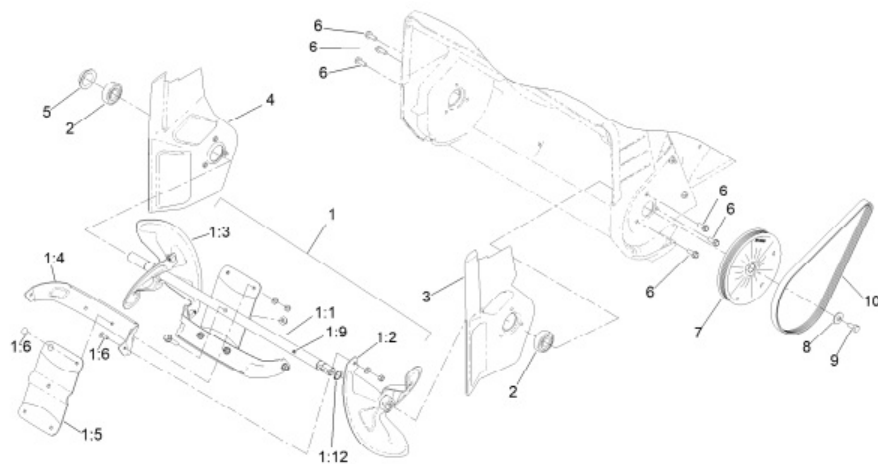

Drive Belt Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>		<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	137-9385	1	Rotor ASM		3	137-9389	1	Extension-LH
1:1	132-9198	1	Shaft-Rotor		4	137-9388	1	Extension-RH
1:2	132-9161	1	LH Rotor Blade ASM		5	117-7720	1	Cap-Sideplate, RH
1:3	132-9162	1	RH Rotor Blade ASM		6	32144-85	6	Screw-HWH
1:4	137-9386	2	Rotor-Center		7	137-2320	1	Rotor Pulley ASM (6
1:5	137-9387	2	Paddle-Center					Groove)
1:6	137-9471	8	Screw-CARR		8	3290-456	1	Washer-Belleville
1:9	132-9169	2	Pin-Spiral		9	110-9381	1	Screw-HH
1:12	137-9468	1	Ring-Snap, External		9	137-3014	1	Screw-HH Lock
2	38-7820	2	Bearing-Ball		10	137-9427	1	Belt-V, Ribbed


Chute Assembly

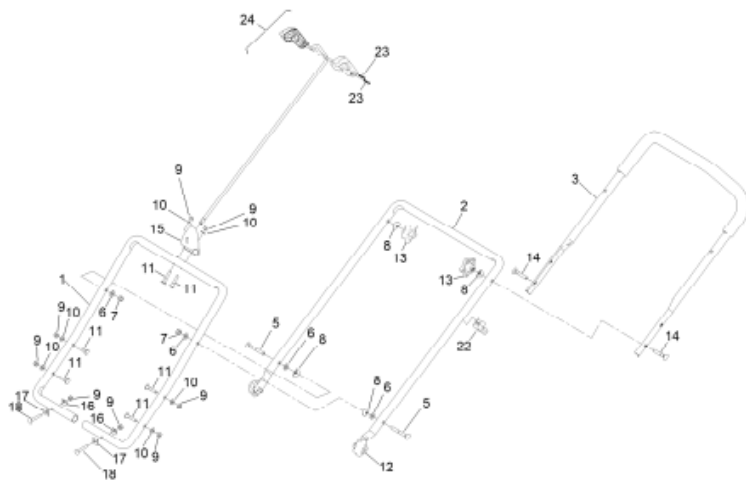

Chute Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>		<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	137-2278	1	Chute-Rear		8	137-2279	1	Shroud
2	139-5239	1	Chute		9	137-9431	1	Cover-Belt
2:2	114-9035	1	Decal-Danger, Discharge		10	139-5238	1	Cover-Battery
3	139-5240	1	Deflector-Chute		11	137-2283	1	Cover-Controller
3:2	114-9034	1	Decal-Danger		12	94-4496	14	Screw-PPH
3:3	117-2314	1	Trigger-Deflector		13	110-3143	1	Screw-Plastic, PPH
3:4	136-7136	2	Spring-Compression		15	137-2332	1	Decal-Battery, 60V Snow
5	137-2271	1	Gear-Chute		18	139-5229	1	Clip-Handle
6	137-2270	1	Bracket-Gear		19	144-3097	1	Decal-Brushless
7	139-5234	1	Gear-Sector					


Handle Assembly

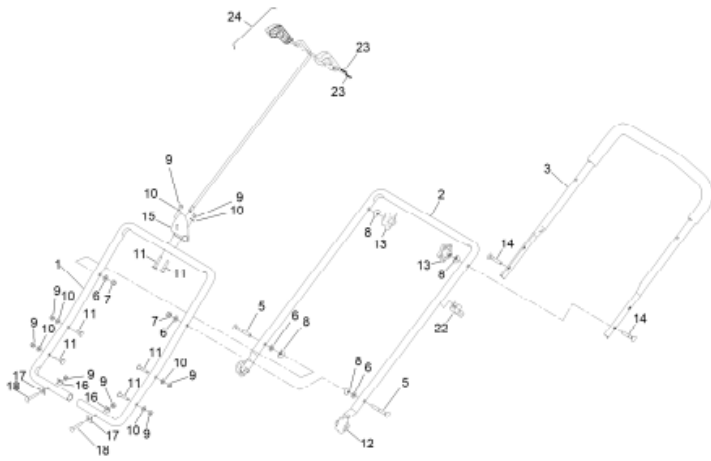

Handle Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>		<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	132-9183	1	Handle-Lower		11	117-7737	6	Screw-Handle
2	132-9184	1	Handle-Middle		12	137-9390	2	Knob-Handle
3	137-2326	1	Upper Handle ASM		13	117-5976	2	Knob-Handle
5	137-9479	2	Screw-Handle		14	137-3107	2	Screw-Handle
6	120-9683	4	Washer-Plain		14	92-2260	2	Screw-Handle
6	3256-70	4	Washer-Flat		15	137-9303	1	Guide-Rod, Chute
7	137-3093	2	Nut-Hex		16	3-7501	2	Washer
7	3296-72	2	Nut-Lock, NI		17	75-9040	2	Washer-Square
8	107-3844	4	Washer		18	120-9698	2	Bolt-CARR
8	137-3009	4	Washer-Cup		18	3229-5	2	Screw-CARR
9	137-3094	8	Nut-Hex		22	114-7988	1	Guide-Cable
9	3296-73	8	Nut-Lock, NI		23	94-4496	2	Screw-PPH
10	139-1699	6	Washer-Flat		24	139-5244	1	Handle ASM
10	3256-1	6	Washer-Flat					

Electrical Assembly

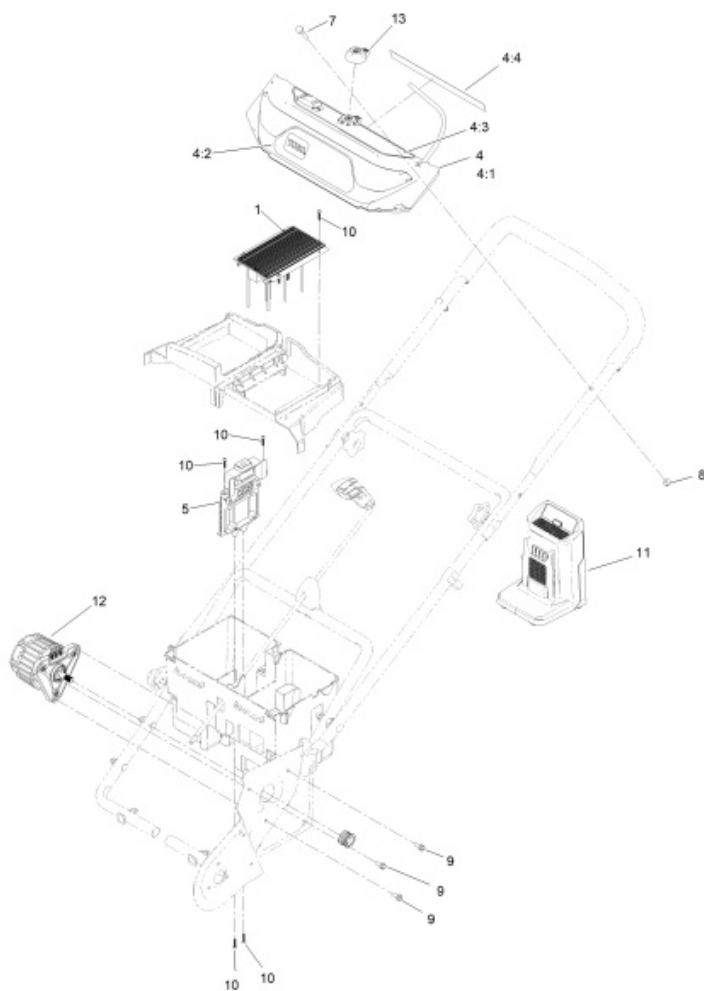

Electrical Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>		<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	137-9424	1	Motor-Driver, Snow (60V)		7	117-7737	4	Screw-Handle
4	137-2347	1	Dash Panel ASM W/Decals		8	104-7201	4	Nut-HF, NI
4:1	137-2346	1	Dash Panel ASM		9	32144-85	3	Screw-HWH
4:2	137-2259	1	Decal-Power Clear		10	94-4496	8	Screw-PPH
4:3	137-2258	1	Decal-Operation		11	137-9439	1	Charger-60V (2A)
4:4	137-2257	1	Decal-Caution		12	139-5245	1	Motor ASM
5	137-9404	1	Battery Track ASM		13	139-5255	1	Key-Bail
6	137-9449	1	60V Battery, 3P 7.5Ah ●					



Count on it.

Read More About This Manual & Download PDF:

Documents / Resources

 The thumbnail shows the front cover of the user manual. It features the TORO logo at the top left, the text 'Flex Force Power System™ 60V MAX Snowthrower' in the center, and 'Parts Catalog' written vertically on the left side. A barcode is visible at the bottom right.	TORO 39901 Flex Force Power System 60V MAX Snowthrower [pdf] User Manual 39901 Flex Force Power System 60V MAX Snowthrower, 39901, Flex Force Power System 60 V MAX Snowthrower, 60V MAX Snowthrower, Snowthrower
--	--

References

[Manuals+.](#)