



## Torqeedo 1976-00 Throttle with Colour Display User Manual

[Home](#) » [torqeedo](#) » Torqeedo 1976-00 Throttle with Colour Display User Manual 

# *Torqeedo*

### Contents

- [1 Operating manual](#)
- [2 Firmware update TorqLink throttle 1976-00](#)
- [3 1. Safety instructions](#)
- [4 2. Controls](#)
- [5 5. Check firmware version](#)
- [6 6. Install firmware](#)
- [7 7. Disposal](#)
- [8 8. Warranty conditions](#)
- [9 Torqeedo branches](#)
- [10 Torqeedo Service Centre](#)
- [11 Documents / Resources](#)
  - [11.1 References](#)
- [12 Related Posts](#)

Operating manual

Firmware update TorqLink throttle 1976-00



mit Farbdisplay


### NOTE!

Valid for firmware updates from version 1.0.9

## 1. Safety instructions


- Check your product regularly for available firmware updates and install them.
- Firmware updates can contain important security functions. Make sure you always have the latest version installed and do not install any previous versions.
- CAUTION! Danger due to unmaneuverable boat. Medium or severe physical injuries can result. Only perform the firmware update when the boat is securely fastened or on land.
- Observe the safety instructions in the operating instructions for the TorqLink throttle.

## 2. Controls

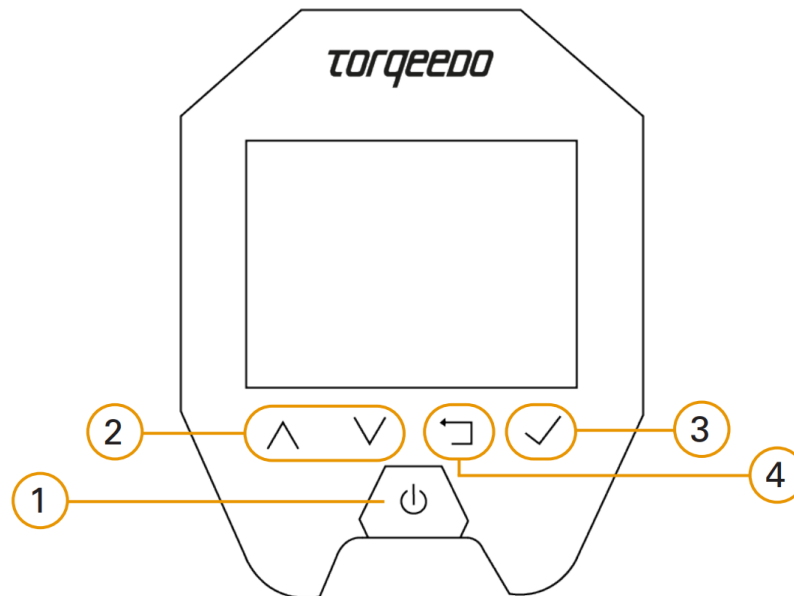


- 1 Turn on / Turn off      2 Scroll in menu  
3 Select / Confirm      4 Return / Up in menu

## 5. Check firmware version

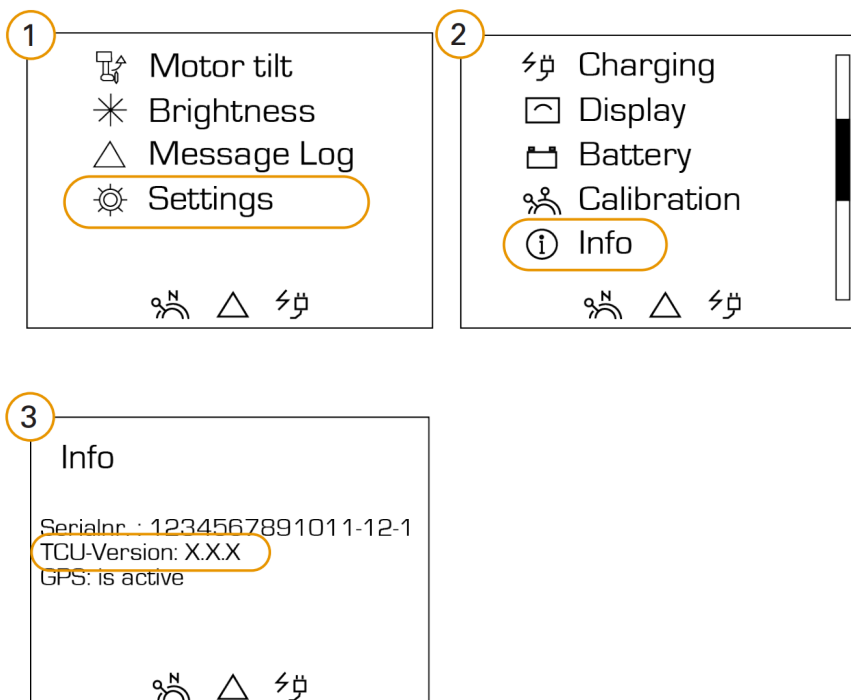

## 6. Install firmware

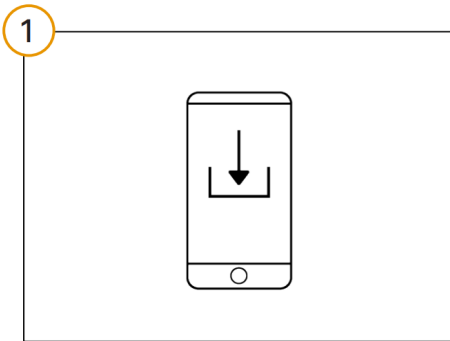



Download firmware update

[www.torqeedo.com](http://www.torqeedo.com)



oder: [TorqLink Throttle 1976](#)

You can find the firmware file in the download area of the throttle

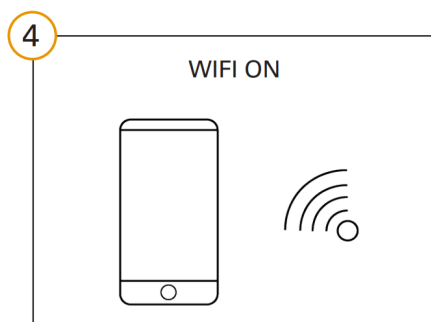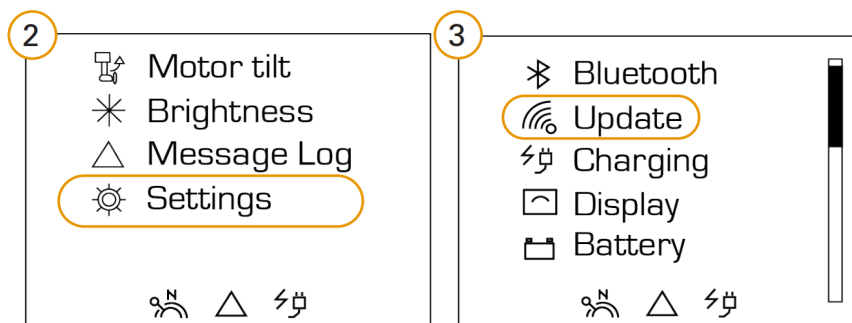


5

Remote access  
connect WIFI to  
SSID: TQTCUXXXX  
PASS: 12345678

WIFI password

6

Connect WIFI  
WIFI name: TQTCUxxxx

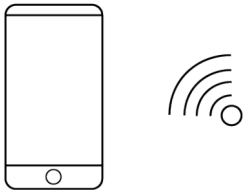

Connect your device to the throttle via WIFI


7


Remote access  
open your Browser  
<http://192.168.2.1>

Open URL in browser

8

Remote access  
Update prepare

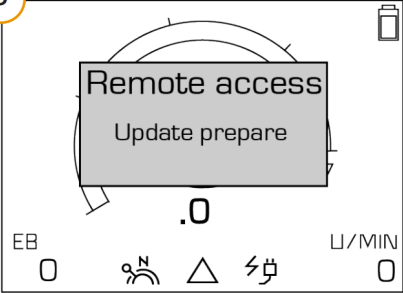


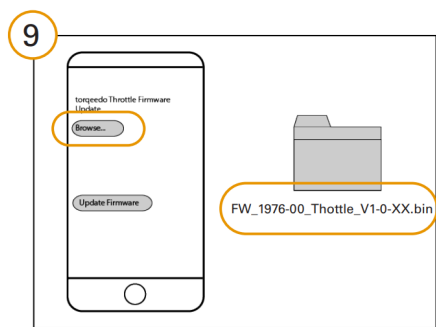


Open firmware update file



Install firmware update

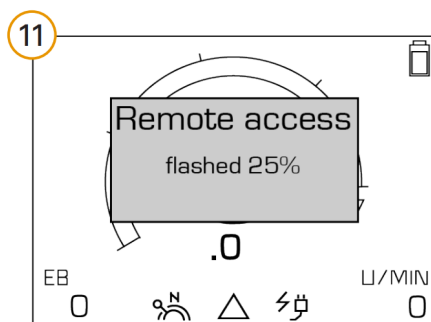

System switches off after installation

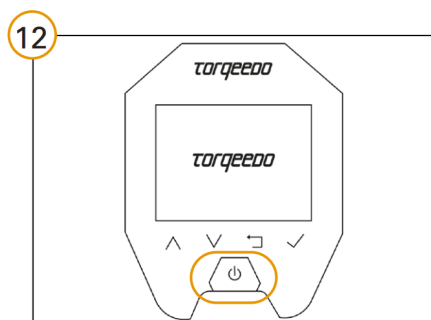

Restart system

13

## Info

Serialnr. : 1234567891011-12-1  
 TCU-Version: X.X.X  
 GPS: is active



Check firmware update

## 7. Disposal

Disposal according to EU Directive 2012 / 19 / EU (WEEE), as well as national laws. Do not dispose of with household waste.



## 8. Warranty conditions

Warranty conditions and warranty certificate available at [www.torqueedo.com](http://www.torqueedo.com)

### Torqueedo branches

#### Torqueedo GmbH

Friedrichshafener Straße 4a  
 82205 Gilching, Germany  
[info@torqueedo.com](mailto:info@torqueedo.com)  
 Phone: +49 8153 9215-100

#### Torqueedo Inc.

171 Erick Street, Unit D-2  
 Crystal Lake, IL 60014, USA  
[usa@torqueedo.com](mailto:usa@torqueedo.com)  
 Phone: +1 815 444 8806

### Torqueedo Service Centre

#### Torqueedo GmbH

– Service Center –  
 Friedrichshafener Straße 4a  
 82205 Gilching, Germany  
[service@torqueedo.com](mailto:service@torqueedo.com)  
 Phone: +49 8153 9215-126

#### Torqueedo Inc.

171 Erick Street, Unit D-2  
 Crystal Lake, IL 60014, USA  
[service\\_usa@torqueedo.com](mailto:service_usa@torqueedo.com)  
 Phone: +1 815 444 8806

### All other countries

Contact details of service centres are available under [www.torqueedo.com](http://www.torqueedo.com) in the “Service Center” section.

## Documents / Resources

## References

- Electric Boat Drives | Torqeedo