Home » Support » A2004NS repeater setting

A2004NS repeater setting

Contents 1 A2004NS repeater setting 2 DOWNLOAD 3 Related Posts


A2004NS repeater setting

It is suitable for: A1004 / A2004NS / A5004NS / A6004NS


Application introduction: Solution about how to set repeater mode on TOTOLINK products.

STEP-1: Connect your computer to the router

1-1. Connect your computer to the router by cable or wireless, then login the router by entering http://192.168.1.1 into the address bar of your browser.

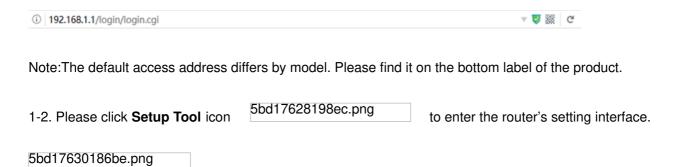

1-3. Please login to the Web Setup interface (the default user name and password is admin).

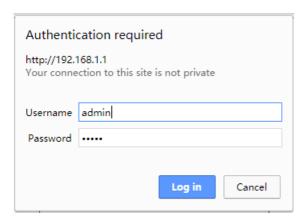

STEP-2: Wireless(2.4GHz) repeater setting

Please go to Advance Setup -> Wireless (2.4GHz)-> Wireless Multibridge, and check which you have selected.

Select Use Wireless Bridge and WPAPSK/WPA2PSK+TKIP/AES in Encryption, then Click AP Scan.

5bd1764af05ca.png


Then select the host router's SSID and way of Encryption ,then input password of the host router's SSID and Click **Apply**.

5bd1765adfc08.png

STEP-3: Wireless(5GHz) repeater setting

Please go to Advance Setup ->Wireless(5GHz) ->Wireless Multibridge, and check which you have selected.

Select Use Wireless Bridge in Mode and WPAPSK/WPA2PSK+TKIP/AES in Encryption, then Click AP Scan.

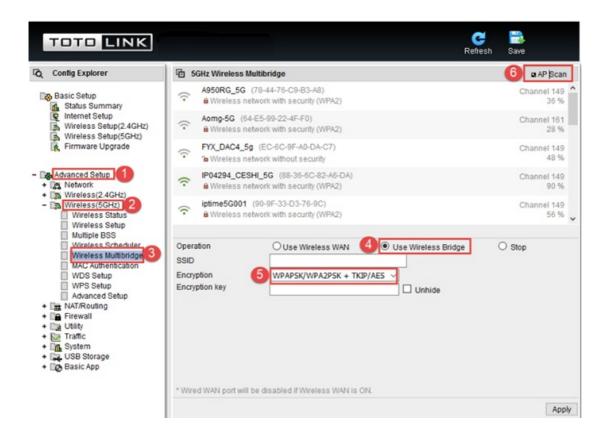

Then select the **host router's SSID** and way of **Encryption** ,then input password of the **host router's SSID** and Click **Apply**.

5bd176737f30d.png

PS: After completing the above operation, please re-connect your SSID after 1 minute or so. if the Internet is available it means thatthe settings are successful. Otherwise, please re-set the settings again

DOWNLOAD

Manuals+,				