Home » Support » A3002RU Change the WIFI password setting

# A3002RU Change the WIFI password setting

# Contents 1 A3002RU Change the WIFI password setting 2 DOWNLOAD 3 Related Posts

### A3002RU Change the WIFI password setting

It is suitable for: N100RE, N150RH, N150RT, N151RT, N200RE, N210RE, N300RT, N301RT, N300RH, N302R Plus, A702R, A850R, A3002RU

**Application introduction:** Solution about how to change the wireless name and password on the TOTOLINK products

#### STEP-1:

Connect your computer to the router by cable or wireless, then login the router by entering http://192.168.0.1 into the address bar of your browser.




Note: The default access address varies depending on the actual situation. Please find it on the bottom label of the product.

#### STEP-2:


User Name and Password are required, by default both are admin in lowercase letter. Click LOGIN.

# **USER LOGIN**

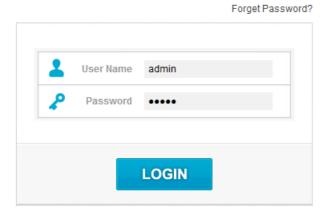


#### STEP-3: Modify in Easy Setup page

The Easy Setup page will turn up for basic and quick setting Input your own **Wireless Network Name** and **Password**, then Click **Apply**.

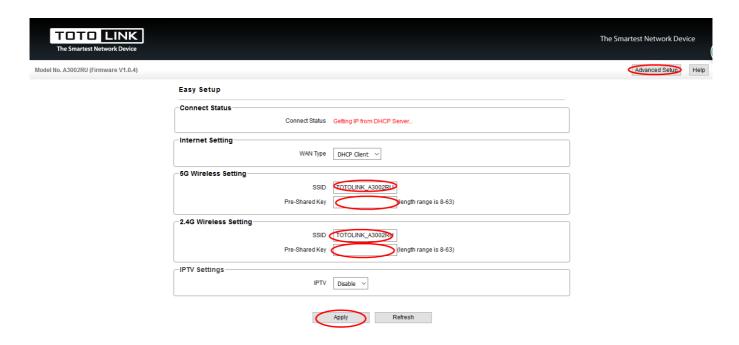

STEP-4: Modify In the Advanced Setup

Please go to Wireless ->Basic Setting page, and check which you have select. Select WPA-PSK/WPA2-PSK, then Input your own Wireless Network Name and Password, then Click Apply.

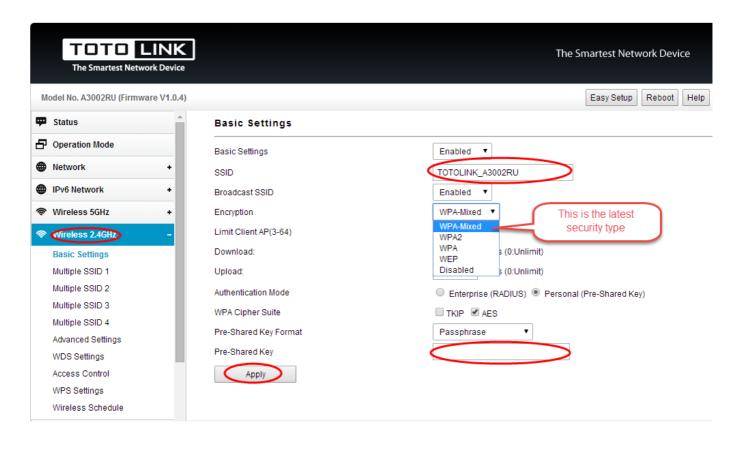

# **DOWNLOAD**

A3002RU Change the WIFI password setting – [Download PDF]

Manuals+,