Home » Support » A3002RU PPPoE DHCP static IP settings 12

A3002RU PPPoE DHCP static IP settings

Contents

- 1 A3002RU PPPoE DHCP static IP settings
- 2 DOWNLOAD
- **3 Related Posts**

A3002RU PPPoE DHCP static IP settings

It is suitable for: N100RE, N150RH, N150RT, N151RT, N200RE, N210RE, N300RT, N301RT, N300RH, N302R Plus, A702R, A850R, A3002RU

Application introduction: Solution about how to configure Internet mode with PPPoE ,Static IP and DHCP for TOTOLINK products

STEP-1:

Connect your computer to the router by cable or wireless, then login the router by entering http://192.168.0.1 into the address bar of your browser.


5bda672157b4b.png

Note: The default access address varies depending on the actual situation. Please find it on the bottom label of the product.

STEP-2:


User Name and Password are required, by default both are admin in lowercase letter. Click LOGIN.

USER LOGIN

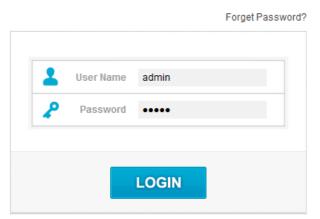

STEP-3.1.1: Easy Setup DHCP setting


The Easy Setup page will turn up for basic and quick setting Select **DHCP Client** as **WANConnection Type**, then Click **Apply**.

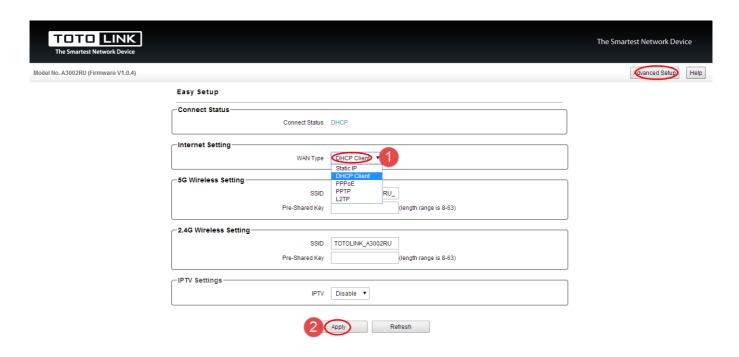

STEP-3.1.2: Advanced Setup DHCP setting


Please go to **Network ->WAN Setting** page, and check which you have selected.

Select DHCP Client as WAN Type, then Click Apply.

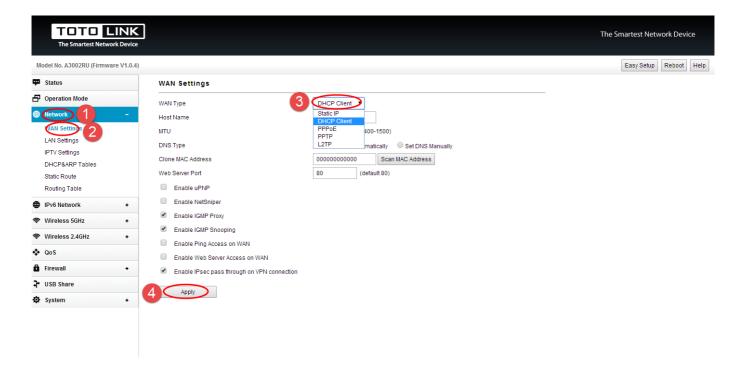

STEP-3.2.1: Easy Setup PPPOE setting


The **Easy Setup** page will turn up for basic and quick setting ,Select **PPPoE** as **WAN Type** and input your PPPoE username and password which are provided by your ISP. Then Click **Apply**

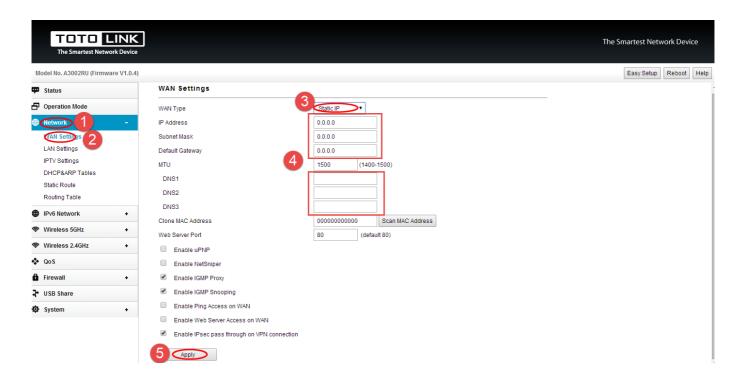

STEP-3.2.2: Advanced Setup PPPOE setting


Please go to **Network -> WAN Setting** page, and check which you have selected.

Select **PPPoE** as **WAN Type** and input your PPPoE username and password which are provided by your ISP. Then Click **Apply**

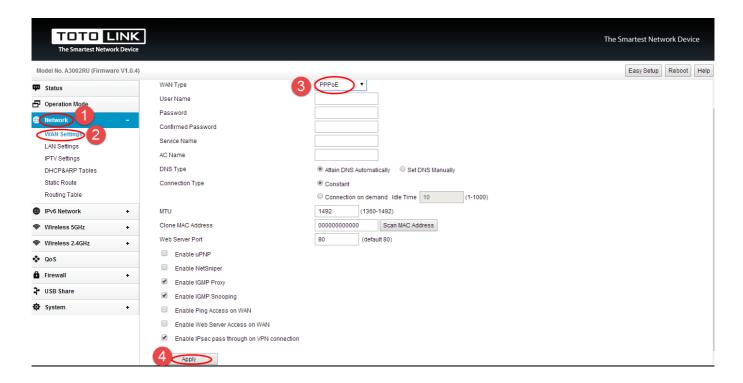

STEP-3.3.1: Easy Setup Static IP setting


The **Easy Setup** page will turn up for basic and quick setting Selecting **Static IP** as **WAN Connection Type** and input your information about **Static IP** which you want to fill in .Then Click **Apply**

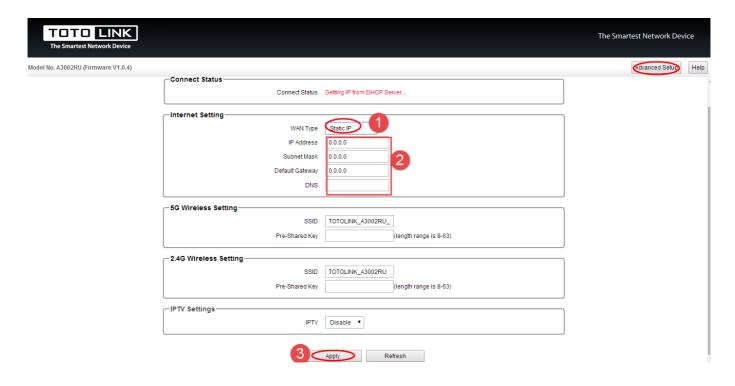

STEP-3.3.2: Advanced Setup Static IP setting

Please go to Network -> WAN Setting page, and check which you have selected.

Select **Static IP** as **WAN Type** and input your information about **Static IP** which you want to fill in .Then Click **Apply**

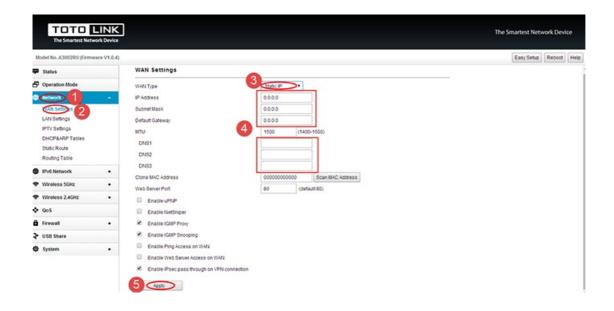

DOWNLOAD

A3002RU PPPoE DHCP static IP settings – [Download PDF]

Manuals+,