Home » Support » A3002RU Repeater Settings 🖫

A3002RU Repeater Settings

Contents

1 A3002RU Repeater

Settings

- 2 Application introduction:
- 3 Settings
- 4 DOWNLOAD
- **5 Related Posts**

A3002RU Repeater Settings

It is suitable for: A702R, A850R, A3002RU

Application introduction:

Solution about how to set repeater mode on TOTOLINK products.

Settings

STEP-1:

Connect your computer to the router by cable or wireless, then login the router by entering http://192.168.0.1 into the address bar of your browser.




Note:The default access address varies depending on the actual situation. Please find it on the bottom label of the product.

STEP-2:


User Name and Password are required, by default both are admin in lowercase letter. Click LOGIN.

USER LOGIN

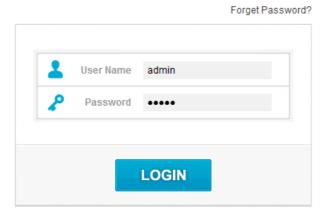


STEP-3:

Please go to Operation Mode -> Repteater Mode-> wlan 2.4GHz or wlan 5GHz then Click Apply.

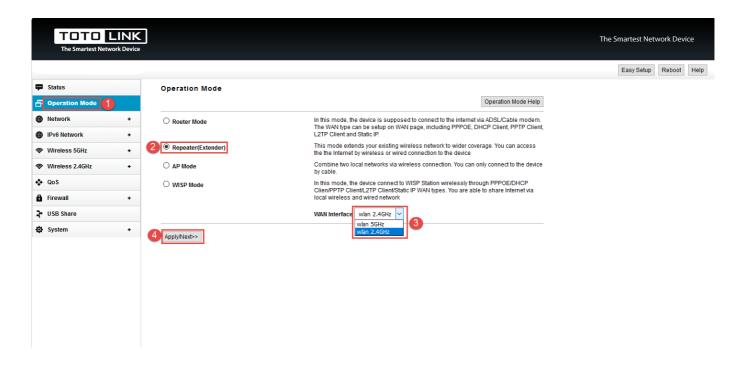


STEP-4:

Firstly select **Scan**, then select host router's SSID and input **Password** of the **host router's SSID**, then select **Change SSID and Possword** to input **SSID** and **Possword** you want to fill in,then Click **Next**.

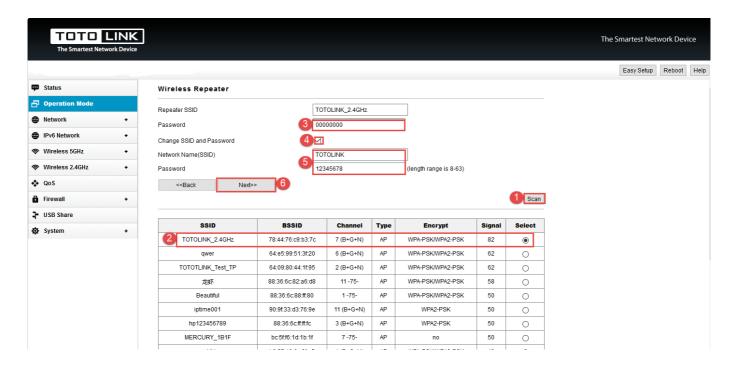

STEP-5:

Then you can change Repeater **SSID** in **5GHz**. As below steps input **SSID** and **Possword** you want to fill in to 5GHz,then Click **Connect**.

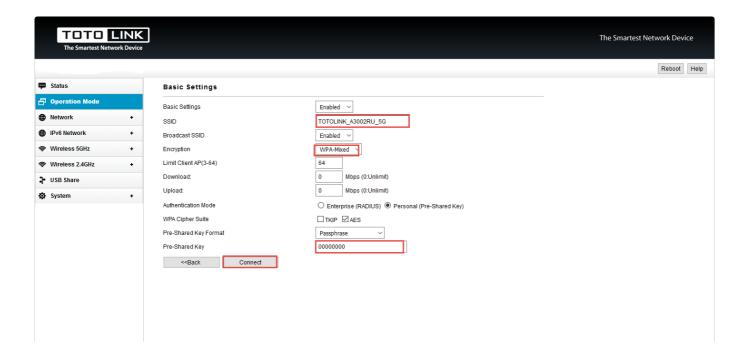

PS: After completing the above operation, please re-connect your SSID after 1 minute or so.if the Internet is available it means that the settings are successful. Otherwise, please re-set the settings again

DOWNLOAD

A3002RU Repeater Settings – [Download PDF]

Manuals+,