

A3002RU Reset settings

Contents

- [1 A3002RU Reset settings](#)
- [2 DOWNLOAD](#)
- [3 Related Posts](#)

A3002RU Reset settings

It is suitable for: **N100RE, N150RH, N150RT, N151RT, N200RE, N210RE, N300RT, N301RT , N300RH, N302R Plus, A702R, A850R, A3002RU**

Application introduction: Solution about how to reset TOTOLINK products to factory defaults.

STEP-1:

Connect your computer to the router by cable or wireless, then login the router by entering http://192.168.0.1 into the address bar of your browser.




Note:The default access address varies depending on the actual situation. Please find it on the bottom label of the product.

STEP-2:

User Name and Password are required, by default both are **admin** in lowercase letter. Click **LOGIN**.


USER LOGIN

[Forget Password?](#)

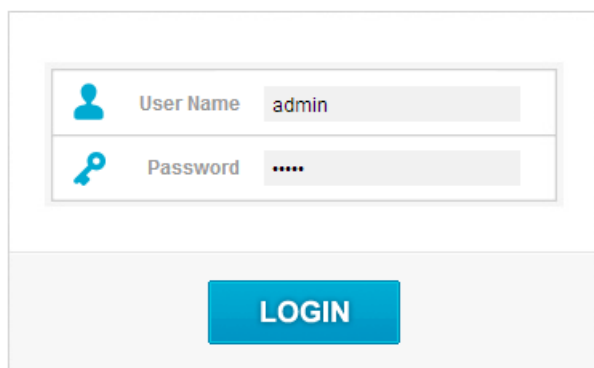A user login form with a light gray background. It contains two input fields: "User Name" with a person icon and "Password" with a key icon. The "User Name" field contains the text "admin" and the "Password" field contains six dots. Below the fields is a blue button with the text "LOGIN" in white. A link "Forget Password?" is located above the form.

STEP-3: Login page reset

Please go to **System**->Save/Reload Settings page, and check which you have selected. then Click **Reset**.

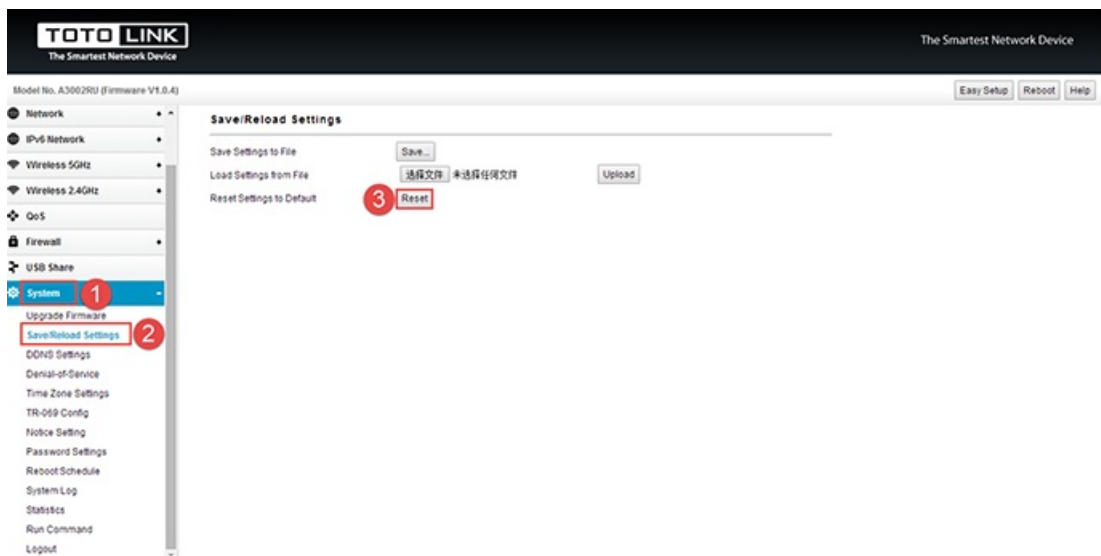

STEP-4: RST Button reset

Please make sure your router's power is on regularly, then press the RST button for about 5~8s.

Loosen the button until your router's LED lights all flashing, then you have reset your router to default settings.



DOWNLOAD

A3002RU Reset settings – [[Download PDF](#)]

[Manuals+](#).