

A3002RU TR069 Configuration

Contents

- [1 A3002RU TR069 Configuration](#)
- [2 Application introduction:](#)
- [3 R069 – Connection Information](#)
- [4 DOWNLOAD](#)
- [5 Related Posts](#)

A3002RU TR069 Configuration


It is suitable for: **N100RE**, **N150RT** , **N200RE**, **N210RE**, **N300RT**, **N302R Plus**, **A702R**, **A3002RU**

Application introduction:

This tutorial will show you how to configure TR069 feature on TOTOLINK Router devices.

STEP-1: Install router as the following diagram

The router WAN IP and TR069 server IP must be on the same network segment or can access each other; TR069 server needs to turn off the firewall and other functions.

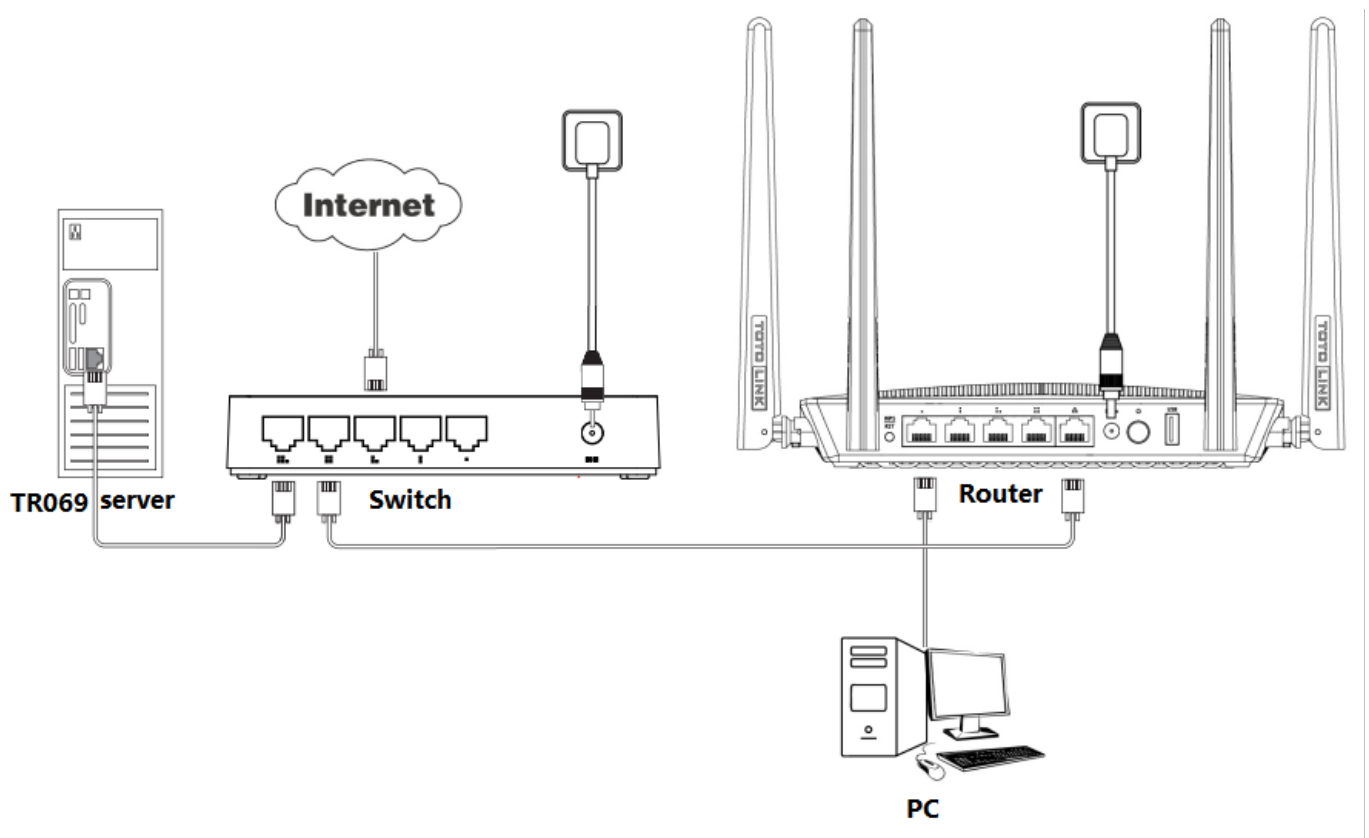

STEP-2: Login router

Access Login page (Default IP: 192.168.0.1) and then you need enter the Administrator information (Default ID and Password is admin).

TOTO LINK
The Smartest Network Device

The Smartest Network Device

USER LOGIN

Forget Password?

User Name

admin

Password

.....

Verification Code

1JRP



Login



Waiting for 192.168.0.1...

Copyright(C)2019 TOTOLINK Ltd. All Rights Reserved

STEP-3: WAN settings

Go to the Advanced Setting page, setup the WAN information.

Status

Network

WAN Settings

LAN Settings

IPTV Settings

DHCP&ARP Tables

Static Route

Routing Table

IPv6 Network

Wireless 5GHz

Wireless 2.4GHz

QoS

Firewall

USB Functional

System

WAN Settings

Wan Type: PPPoE/Dual WAN Access PPPoE

User Name: LRWDMYMR

Password:

Confirm Password:

Service Name:

WAN DHCP Type: ☐ Dynamic IP (DHCP) ☐ Static IP ☒ Normal PPPoE

WAN Access Type: Continuous

Idle Time: 5 (1-1000 minutes)

MTU Size: 1492 (1360-1492 bytes)

DNS Type: ☒ Attain DNS Automatically ☐ Set DNS Manually

Clone MAC Address: 000000000000

Web Server Port: 8080 (default 8080)

☐ Enable uPNP

☐ Enable NetSniper

☒ Enable IGMP Proxy

☒ Enable IGMP Snooping

☐ Enable Ping Access on WAN

☐ Enable Web Server Access on WAN

☒ Enable IPsec pass through on VPN connection

Apply

STEP-4: TR069 settings

Next, setup the TR069 information.

Status

Network

IPv6 Network

Wireless 5GHz

Wireless 2.4GHz

QoS

Firewall

USB Functional

System

Upgrade Firmware

Save/Reload Settings

Time Zone Settings

DDNS

Denial of Service

TR-069 Config

Password Settings

Reboot Schedule

System Log

Statistics

Run Command

TR-069 Configuration

TR069: ☐ Disabled ☒ Enabled

ACS: http://113.138.202.109:90

User Name: admin

Password: admin

Periodic Inform: ☐ Disabled ☒ Enabled

Periodic Inform Interval: 60 seconds

Connection Request: ☐ Disabled ☒ Enabled

User Name: acstr069

Password: acstr069

Path: /tr069

Port: 80

Apply

R069 – Connection Information

Information	Description	
ACS	URL	Server ACS IP address.
	User Name	Account used to access the ACS server.
	Password	
	Periodic Inform	Notify the signal to connect between ACS server and Router periodically.
	Periodic Inform Interval	Signal notification interval to connect between ACS server and Router
Connection Request	User Name	Account for ACS server access the Router.
	Password	
	Path	Path to TR069 feature on Router.
	Port	Port access on Router.

DOWNLOAD

A3002RU TR069 Configuration – [[Download PDF](#)]
