

EX200 Reset settings

Contents


- [1 EX200 Reset settings](#)
- [2 Diagram](#)
- [3 Set up steps](#)
- [4 FAQs](#)
- [5 Q1 Unable to login the management page when I want to configure the extender to repeat other router's signal, how to do](#)
- [6 Q2 LED indicator introduction](#)
- [7 DOWNLOAD](#)
- [8 Related Posts](#)

EX200 Reset settings

It is suitable for: **EX200**

Diagram



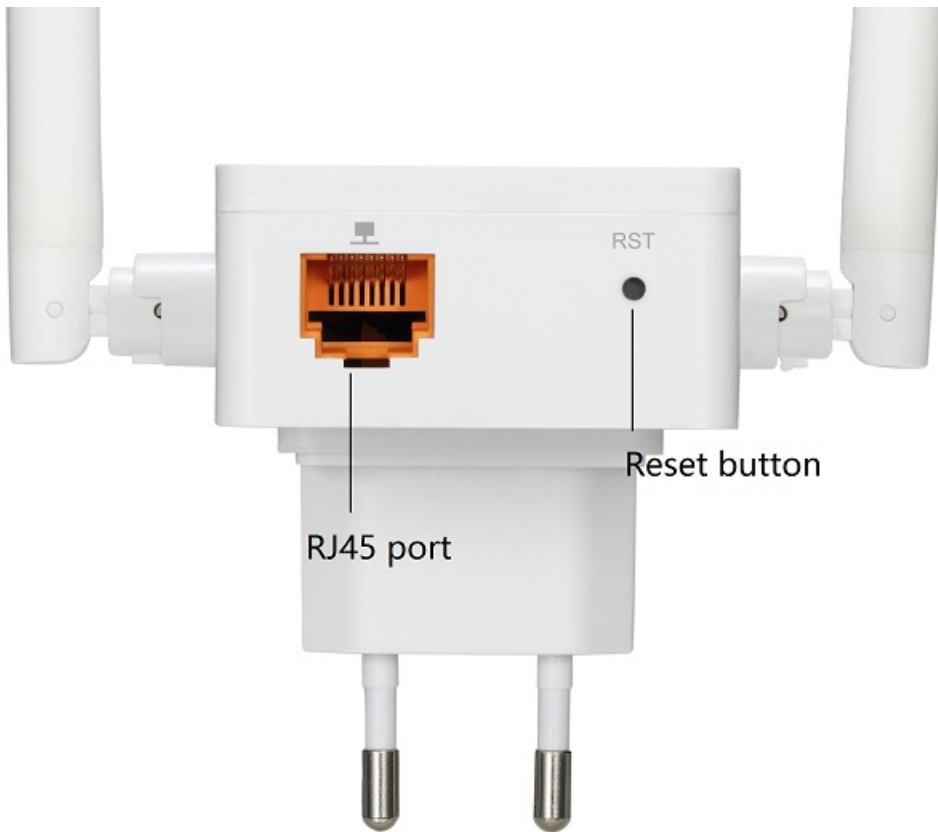


Set up steps

Keep the extender power on, use a pin to press the RST button on the bottom of device. When System LED blink, release the button. The device will restore to factory default settings.

RST button diagram



System LED diagram:

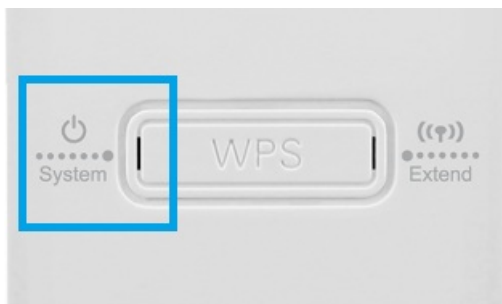

FAQs

Q1 Unable to login the management page when I want to configure the extender to repeat other router's signal, how to do

Reset the extender and then login the default gateway to configure the extender again.

Q2 LED indicator introduction

LED light introduction					
System LED	Power On	System started	Press WPS	Extended successfully	Press "RST" button for 5s
	Blue	Blinking Blue (1s : 1s=On : Off)	Blue lights for 2min	Blinking Blue (1s : 1s=On : Off)	Blinking Blue (100ms : 100ms=On : Off)
Ext LED	Power On	System started (no extension) /extension fails		extended successfully	Data transmitting
	Orange	Off		On	On
1. System LED keeps blinking when pressing the "RST" button until releasing 2. System LED stays the current status when the system crashes.					

DOWNLOAD

EX200 Reset settings – [[Download PDF](#)]
