Home » Support » How do I disable SSID broadcast

How do I disable SSID broadcast

Contents

- 1 How do I disable SSID
- broadcast?
- 2 DOWNLOAD
- **3 Related Posts**

How do I disable SSID broadcast?

It is suitable for: N100RE, N150RH, N150RT, N151RT, N200RE, N210RE, N300RT, N300RH, N300RU, N301RT, N302R Plus, N600R, A702R, A850R, A800R, A810R, A3002RU, A3100R, T10, A950RG, A3000RU

Application introduction: In order to improve network security, you can disable SSID broadcast in the web-configuration interface. After disabled SSID broadcast, other devices can find and connect to the SSID again.

STEP-1: Connect your computer to the router

Connect your computer to the router by cable or wireless, then login the router by entering http://192.168.0.1 into the address bar of your browser.




Note:The default access address varies depending on the actual situation. Please find it on the bottom label of the product.

STEP-2:

User Name and Password are required, by default both are admin in lowercase letter. Click LOGIN.


USER LOGIN

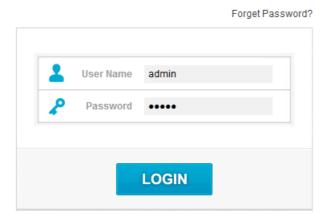

Now you have logged into the web interface of the router.

STEP-3: Disabled SSID broadcast

Click Wireless-> Basic Settings.On this page, you could change the SSID Broadcast status.

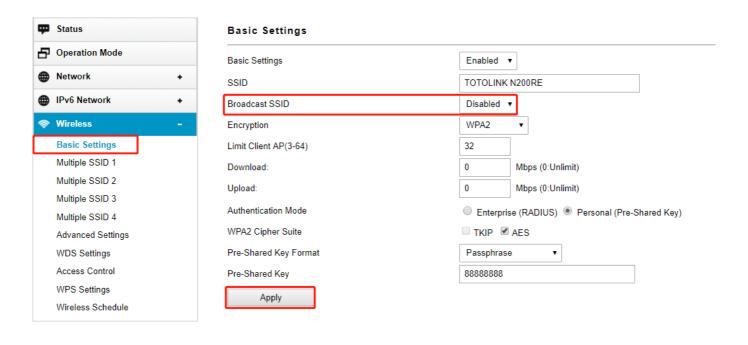

DOWNLOAD

How do I disable SSID broadcast – [Download PDF]

Manuals+,