

How to change LAN IP address

Contents

- [1 How to change LAN IP address?](#)
- [2 Application introduction:](#)
- [3 DOWNLOAD](#)
- [4 Related Posts](#)

How to change LAN IP address?

It is suitable for: **N600R, A800R, A810R, A3100R, T10, A950RG, A3000RU**

Application introduction:

IP conflict may happen while there are two routers in series connection or other reasons, which may cause false connection. Change LAN IP by follow steps can help you avoid of IP conflict.

STEP-1:

Connect your computer to the router by cable or wireless, then login the router by entering http://192.168.0.1 into the address bar of your browser.




Note: The default access address varies depending on the actual situation. Please find it on the bottom label of the product.


STEP-2:

User Name and Password are required, by default both are **admin** in lowercase letter. Click **LOGIN**.

USER LOGIN

[Forget Password?](#)

 User Name

 Password

LOGIN

STEP-3:

Click **Network->LAN Settings** on the navigation bar on the left. In this interface you can change the IP address (e.g. 192.168.2.1), and click Apply button for saving settings.

System Status +

Operation Mode

Network -

WAN Setting

LAN Setting

Static DHCP Setting

Wireless +

QoS

Firewall +

Management +

LAN Setting

This page is used to configure the parameters for local area network which connects to the LAN port of your device. Here you may change the setting for IP address, Mask.

IP Address

Subnet Mask

DHCP Server

Start IP Address

End IP Address

Lease Time

192

168

2

1

255

255

255

0

Enable

192

168

2

2

192

168

2

254

1 day

5

Apply

DOWNLOAD

How to change LAN IP address – [[Download PDF](#)]

Manuals+.