Home » Support » How to change or hide the SSID 12

How to change or hide the SSID

Contents 1 How to change or hide the SSID? 2 DOWNLOAD 3 Related Posts

How to change or hide the SSID?

It is suitable for: N100RE, N150RH, N150RT, N151RT, N200RE, N210RE, N300RT, N300RH, N300RH, N300RU, N301RT, N302R Plus, N600R, A702R, A850R, A800R, A810R, A3002RU, A3100R, T10, A950RG, A3000RU

Application introduction: If you want to alter the SSID of the router, please follow the steps below.

STEP-1:

Connect your computer to the router by cable or wireless, then login the router by entering http://192.168.0.1 into the address bar of your browser.




Note:The default access address varies depending on the actual situation. Please find it on the bottom label of the product.

STEP-2:


User Name and Password are required, by default both are admin in lowercase letter. Click LOGIN.

USER LOGIN

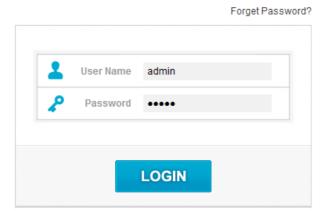

STEP-3:

Click **Wireless->Basic Settings** on the navigation bar on the left. To change the SSID, you can input the new SSID to replace the original SSID. If you want to hide the SSID, choose "Disable" in the SSID broadcast bar. Then click "Apply" in the lower right corner.

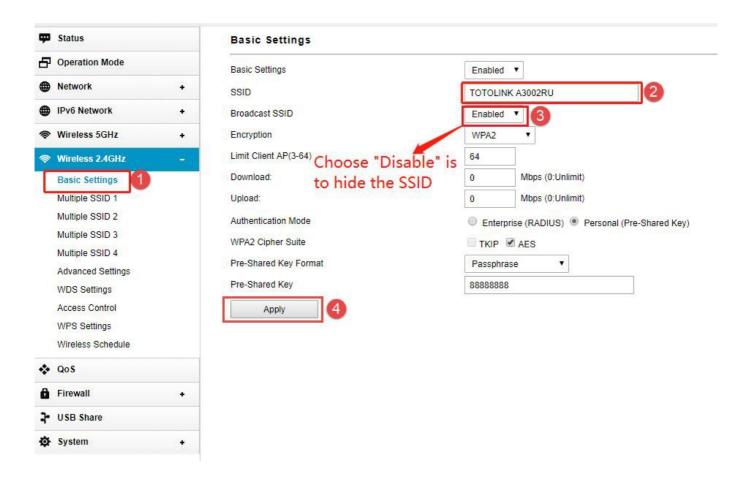

DOWNLOAD

How to change or hide the SSID - [Download PDF]

Manuals+,