

# How to change SSID of the router?

## Contents

- [1 How to change SSID of the router?](#)
- [2 STEP-1:](#)
- [3 STEP-2:](#)
- [4 STEP-3:](#)
- [5 Related Posts](#)

 
## How to change SSID of the router?

It is suitable for: **iPuppy,iPuppy3**

### STEP-1:

Login the router web-configuration interface.

1-1. If you turn the button to the Router side, you should connect your computer to the router wirelessly, then login the router by entering `http://192.168.1.1` into the address bar of your browser.



1-2. Please login to the Web Setup interface (the default user name and password is admin).



### STEP-2:

Click Wireless Settings->Wireless Setup.



### STEP-3:

In wireless setup interface, you can change the SSID now. You can also change the encryption method here.

5bd805436607c.png



[Manuals+](#).