Home » Support » How to change the login password 12

How to change the login password

Contents 1 How to change the login password? 2 DOWNLOAD 3 Related Posts

How to change the login password?

It is suitable for: N600R, A800R, A810R, A3100R, T10, A950RG, A3000RU

Application introduction: If you want to reset the router's User Name and Password, please follow the steps below.

STEP-1:

Connect your computer to the router by cable or wireless, then login the router by entering http://192.168.0.1 into the address bar of your browser.




Note: The default access address varies depending on the actual situation. Please find it on the bottom label of the product.

STEP-2:


User Name and Password are required, by default both are admin in lowercase letter. Click LOGIN.

USER LOGIN

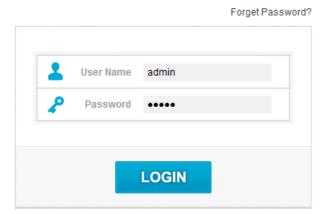

STEP-3:

Click **Management**->**Administrator Setting** on the navigation bar on the left. In this interface, you can change the password after entering the old password. The default user name and password is **admin**.

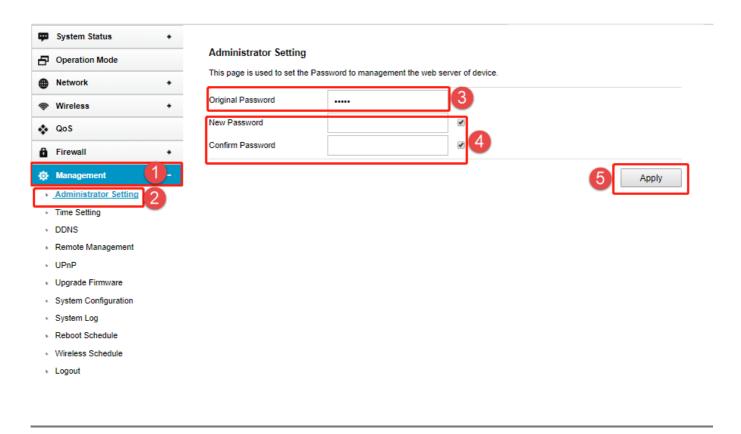

DOWNLOAD

How to change the login password – [**Download PDF**]

Manuals+,