5bd96612a5255.png

Home » Support » How to change the SSID of N100RE & N200RE 🔁

How to change the SSID of N100RE & N200RE

Contents	
1 How to change the SSID of N100RE &	
N200RE?	
2 DOWNLOAD 3 Related Posts	
3 neialeu rosis	
How to change the SSID of N100RE & N200RE?	
It is suitable for: N100RE, N150RT, N200RE, N210RE, N	300RT, N302R Plus, A3002RU
ake N200RE-V3 as an example.	
STEP-1:	
Connect your computer to the router by cable or wireless the address bar of your browser.	, then login the router by entering http://192.168.0.1 into
5bd965da67b3a.png	
Note:The default access address varies depending on th product.	e actual situation. Please find it on the bottom label of the
STEP-2:	
User Name and Password are required, by default both a	re admin in lowercase letter. Click LOGIN.
5bd965e131417.png	
STEP-3:	
First, the Easy Setup page will turn up for basic and quid	k settings, click Advanced Setup .
5bd965e835124.png	
STEP-4:	
Click Wireless >Basic Settings on the left navigation ba	ır.
Click wireless >Basic Settings on the left havigation ba	r.

STEP-5:
Enable Wireless function. Then input the new SSID, set a password for it and click Apply.
5bd9661846cb3.png
STEP-6:
After changing the SSID, you have to re-search for the new SSID and enter right password to connect the Router.
DOWNLOAD
How to change the SSID of N100RE & N200RE – [Download PDF]

Manuals+,