

How to check the current gateway IP address

Contents

- [1 How to check the current gateway IP address](#)
- [2 Method One](#)
- [3 Method Two](#)
- [4 DOWNLOAD](#)
- [5 Related Posts](#)

How to check the current gateway IP address

It is suitable for: **All TOTOLINK routers**

Application introduction:

This article describes the Windows operating system computer connected to the router (or other network device) by wireless or wired, view the gateway IP address of the current router.

Method One


For Windows W10:

STEP-1. TOTOLINK Router LAN Port Connects the PC Or wirelessly connect to TOTOLINK Router WIFI.


STEP-2. Right-click the Network Connections icon, click on "Network & Internet settings".




STEP-3. Pop up the Network & Internet Center interface, click on "**Network and Sharing Centre**" under Related settings.

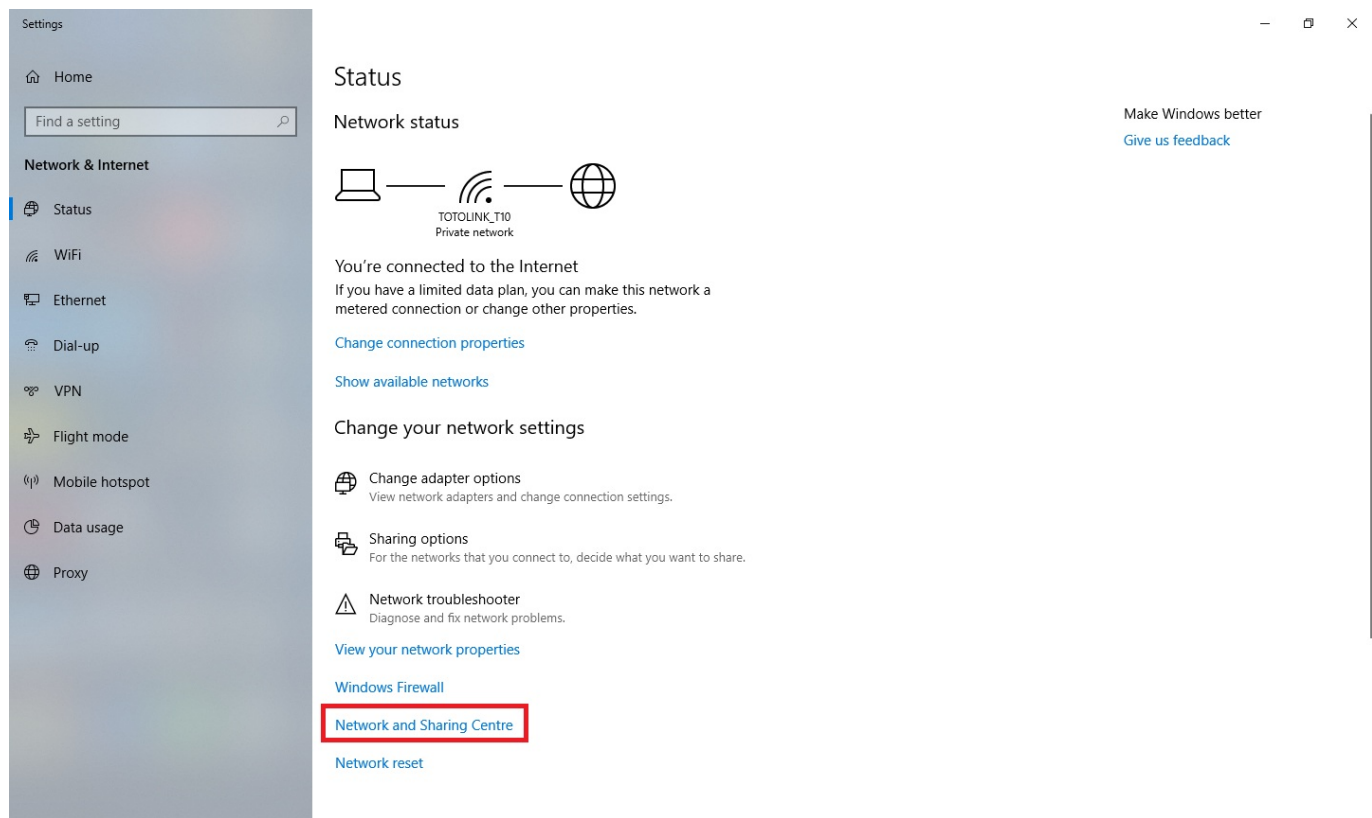


STEP-4. Click connections target

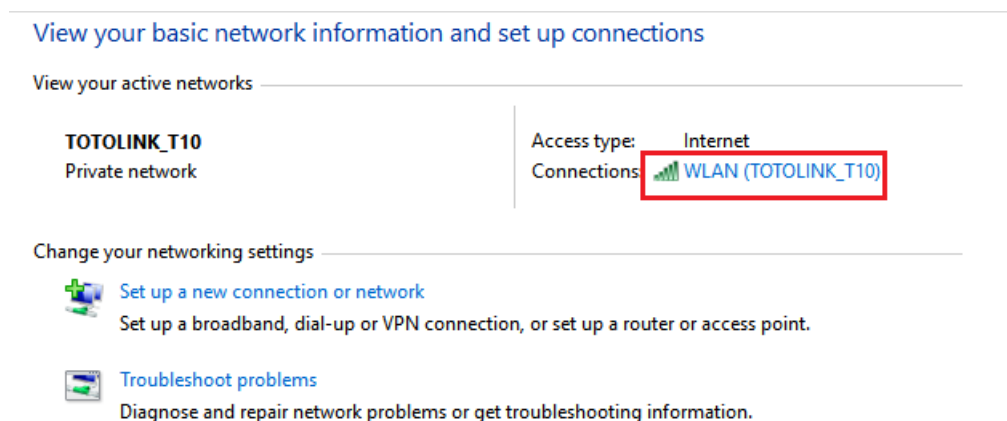

STEP-5. Click **Details...**

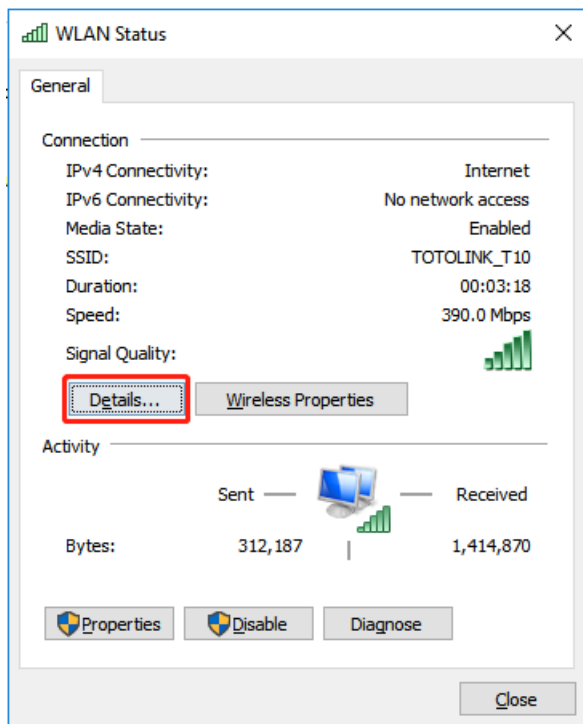

STEP-6. Find to **IPv4 Default Gateway**, This is the current gateway address of your router.

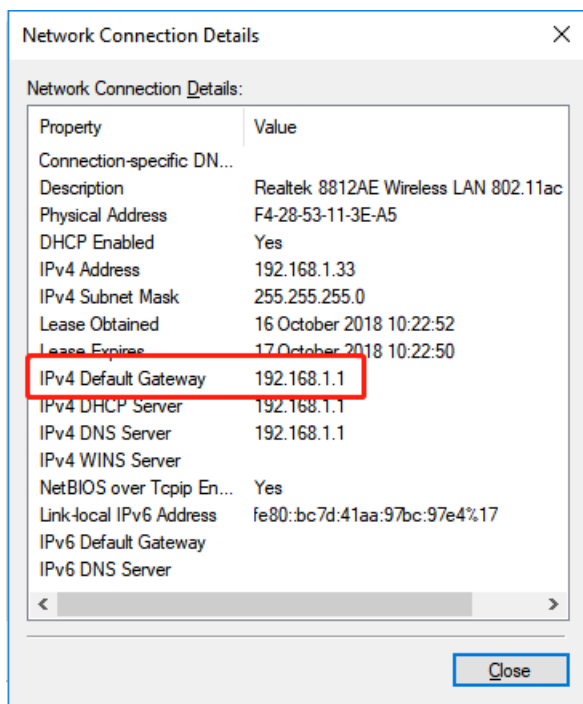

Method Two


For Windows 7 8, 8.1 and 10:

STEP-1. Click on windows key+ R key on the keyboard at the same time.



'R'

STEP-2. Enter **cmd** in the field and click OK button.

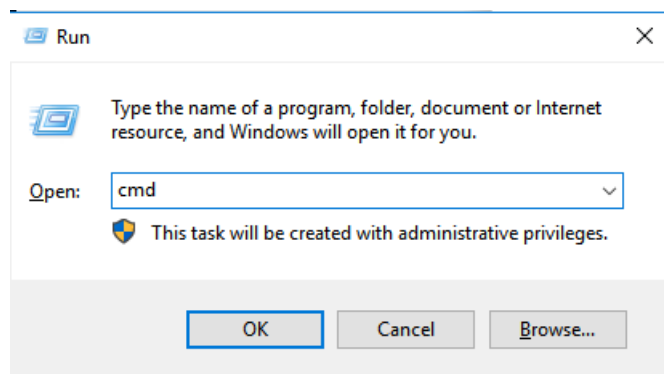

STEP-3. Type in **ipconfig** and click enter key. Find to IPv4 Default Gateway, This is the current gateway address of your router.

```
Administrator: C:\Windows\system32\cmd.exe
C:\Users\Administrator>ipconfig

Windows IP Configuration

Ethernet adapter 以太网:

    Media State . . . . . : Media disconnected
    Connection-specific DNS Suffix  . :
Wireless LAN adapter 本地连接* 1:

    Media State . . . . . : Media disconnected
    Connection-specific DNS Suffix  . :
Wireless LAN adapter WLAN:

    Connection-specific DNS Suffix  . :
    Link-local IPv6 Address . . . . . : fe80::91cd:9fd7:848f:16c2%5
    IPv4 Address. . . . . : 192.168.1.34
    Subnet Mask . . . . . : 255.255.255.0
    Default Gateway . . . . . : 192.168.1.1
Ethernet adapter 蓝牙网络连接:

    Media State . . . . . : Media disconnected
    Connection-specific DNS Suffix  . :
Tunnel adapter Teredo Tunneling Pseudo-Interface:

    Connection-specific DNS Suffix  . :
    IPv6 Address. . . . . : 2001:0:9d38:953c:e5:2af:3f57:fedd
    Link-local IPv6 Address . . . . . : fe80::e5:2af:3f57:fedd%38
    Default Gateway . . . . . : ::

C:\Users\Administrator>aa_
```

DOWNLOAD

How to check the current gateway IP address – [[Download PDF](#)]

Manuals+