

# How to configure Basic Setting of ADSL Modem Router

## Contents

- [1 How to configure Basic Setting of ADSL Modem Router?](#)
- [2 DOWNLOAD](#)
- [3 Related Posts](#)

## How to configure Basic Setting of ADSL Modem Router?

It is suitable for: **ND150, ND300**

### STEP-1:

Connect your computer to the router by cable, enter `http://192.168.1.1`.



### STEP-2:

User Name and Password are required, by default both are admin in lowercase letter. Click **Login**.

5bd7bc104d612.jpg

### STEP-3:

First, the **Easy Setup** page will turn up for basic and quick settings, choose one language, click **NEXT**.

5bd7bc2043e1c.jpg

### STEP-4:

Choose your country and the ISP you cooperates, enter **User Name, Password** provided by your ISP, click **NEXT**.

5bd7bc276add8.jpg

### STEP-5:

By default, the SSID is TOTOLINK ND300, you can change it as you like. Then select **WPA2 Mixed** (Recommended) for **Encryption**. Enter password, click **APPLY** to make all settings work.

5bd7bc346ec7a.jpg

---

## DOWNLOAD

How to configure Basic Setting of ADSL Modem Router – [ [Download PDF](#) ]

---

