

How to configure for sending system records automatically

Contents

- [1 How to configure for sending system records automatically](#)
- [2 DOWNLOAD](#)
- [3 Related Posts](#)

 
How to configure for sending system records automatically

It is suitable for: **N150RA, N300R Plus, N300RA, N300RB, N300RG, N301RA, N302R Plus, N303RB, N303RBU, N303RT Plus, N500RD, N500RDG, N505RDU, N600RD, A1004, A2004NS, A5004NS, A6004NS**


Application introduction: All series routers of TOTOLINK provide E-Mail report function, which can deliver the router's system status to specific mailbox.


STEP-1: Connect your computer to the router

1-1. Connect your computer to the router by cable or wireless, then login the router by entering `http://192.168.1.1` into the address bar of your browse




 Note: The default IP address of TOTOLINK router is 192.168.1.1, the default Subnet Mask is 255.255.255.0. If you can't log in, Please restore factory settings.

 1-2. Please click **Setup Tool** icon  to enter the router's setting interface.




 1-3. Please login to the Web Setup interface (the default user name and password is **admin**).



STEP-2:

 Click **System->Admin Setup** on the navigation bar on the left to enter the admin setup interface.



STEP-3:

Enter the E-mail of receiver and sender, otherwise, you can use authentication for security. Next to click Apply button for saving settings.

–**E-Mail:** reciever’s E-Mail.

–**Mail Server(SMTP):** the server’ s mail

–**E-mail for sender:** sender’s E-Mail

5bced4b435ccd.png

DOWNLOAD

How to configure for sending system records automatically – [[Download PDF](#)]
