Home » TOTOLINK » How to configure the access control on ADSL Modem Router

How to configure the access control on ADSL Modem Router

0			۱.		١.
C	n	nı	œ	n	IS

- 1 How to configure the access control on ADSL Modem Router?
- 2 DOWNLOAD
- **3 Related Posts**

How to configure the access control on ADSL Modem Router'

It is suitable for: ND150, ND300

Application introduction: Access control list (ACL) is used to allow or deny a specific group of IP to send or receive traffic from your network into another network.

STEP-1:

Login the ADSL Router's web-configuration interface at first, and then click Access Management.

STEP-2:

In this interface, click **Firewall>ACL**. Active the ACL function firstly, and then you can create the ACL rule for better access control.

5bd7b337745b2.png

DOWNLOAD

How to configure the access control on ADSL Modem Router – [**Download PDF**]

Manuals+,