

# How to judge the T10 status by State LED?


## Contents

- [1 How to judge the T10 status by State LED?](#)
- [2 DOWNLOAD](#)
- [3 Related Posts](#)

## How to judge the T10 status by State LED?

It is suitable for: **T10**


### STEP-1: T10 status LED position

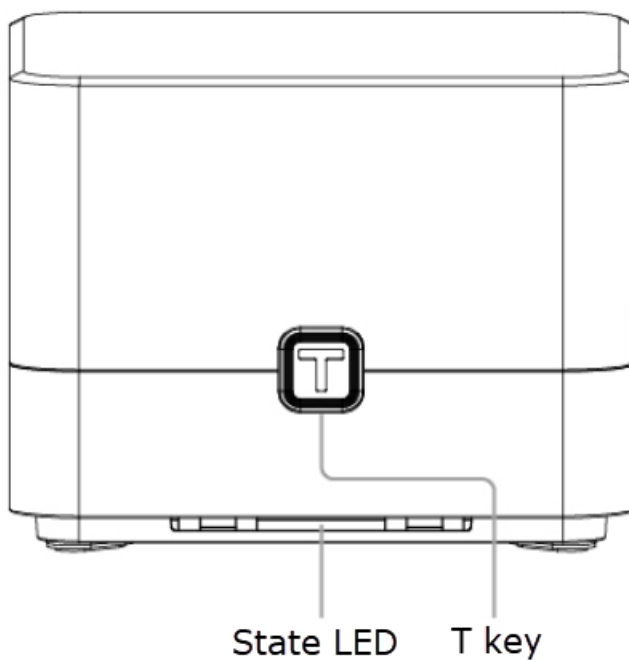

### STEP-2:

After the MESH network is set, if the setting is successful, the slave T10 will be in a state of steady green or orange light.

2-1. Green light indicates excellent signal quality

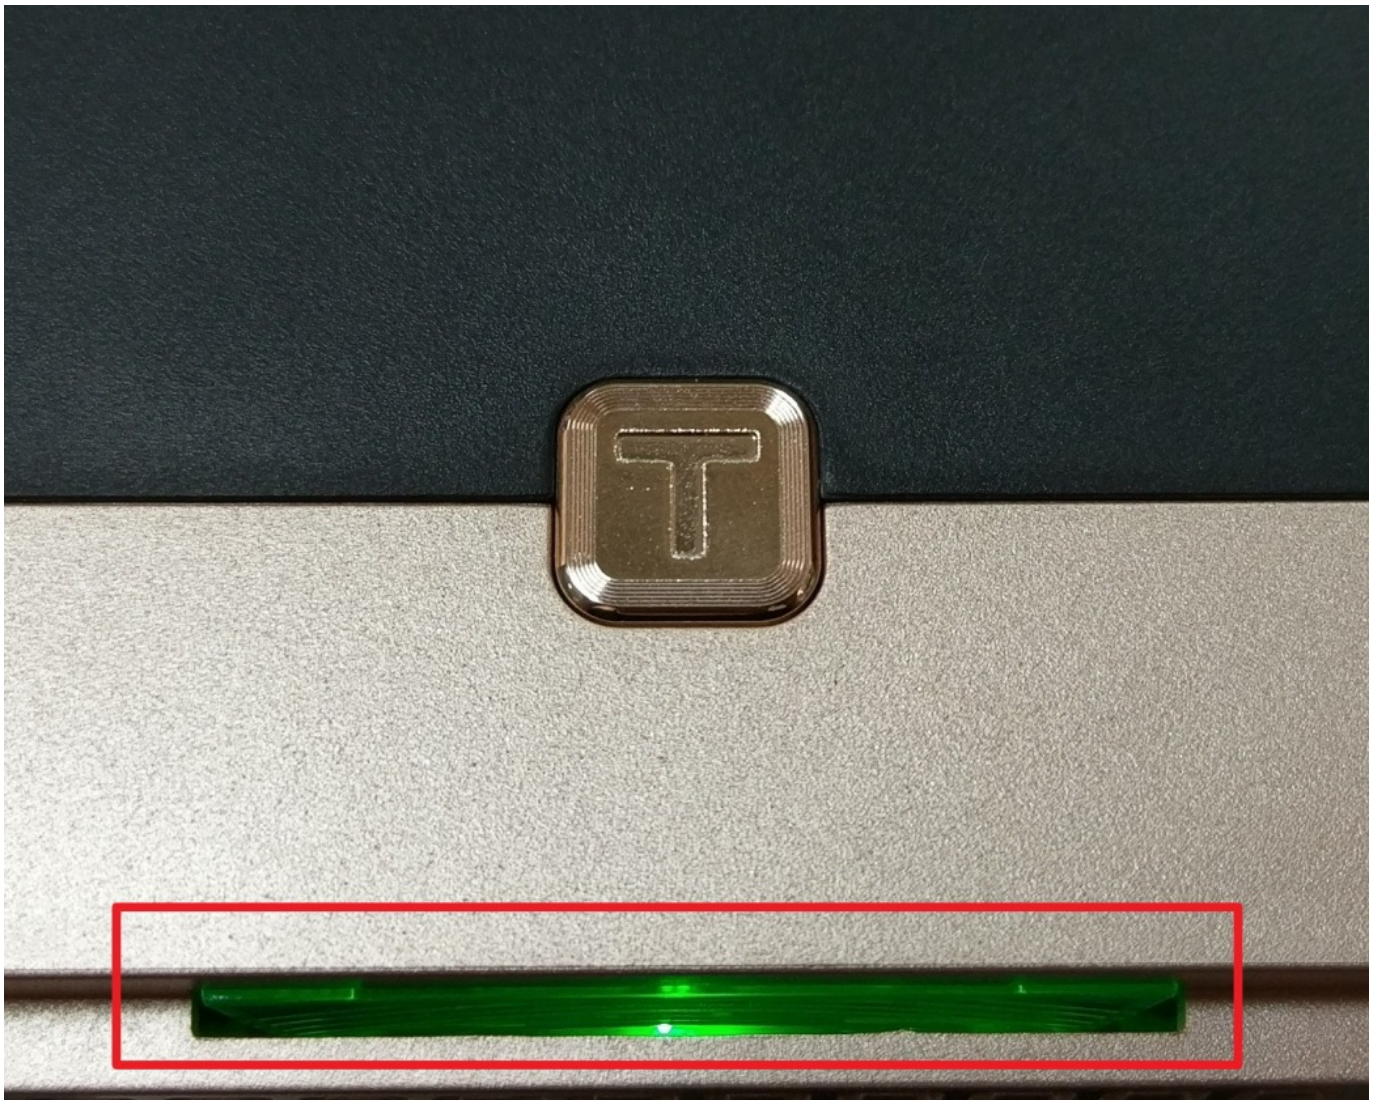

2-2. Orange light indicates that the signal quality is normal

**Noet:** In order to get a better experience, it is recommended to install the T10 to a position where the green light can be displayed.



**STEP-3:**

**After the MESH network is set, if the setting fails, the slave T10 will be in a steady red state.**

3-1. Red light indicates that MESH networking failed

**Noet:** It is recommended that you place the T10 next to the main T10 and try the MESH networking pairing again.





**STEP-4: The light shows the status description table**

LED Name	LED Activity	Description
State LED (Recessed)	Solid green	<p>★ The router is booting. The process finishes until the state LED blinks green.</p> <p>It may take about 40 seconds; please wait.</p> <p>★ It means the Satellite is synced to the Master successfully, and the connection between them is strong.</p>
	Blinking green	<p>★ The router finishes the booting process and is working normally.</p> <p>★ It means the Master is synced to the Satellite successfully.</p>
	Blinking alternately between red and orange	The sync is being processed between the Master and Satellite.
	Solid red (Satellite)	<p>★ The Master and Satellite failed to sync.</p> <p>★ The connection between the Master and Satellite is poor. Consider moving the Satellite closer to the Master.</p>
	Solid orange (Satellite)	The Satellite is synced successfully to the Master, and the connection between them is good.
	Blinking red	While the reset process is being proceeded.
Button/Ports	Description	
T Button	<p>★ <b>Reset Router to factory defaults:</b></p> <p>when the router is powered on, press this button and hold it for 5 seconds until the state LED blinks red.</p> <p>★ <b>Sync Master to Satellites:</b></p> <p>press and hold this button on a router for about 3 seconds until the state LED blinks alternately between red and orange. This way, this router is set as the Master to sync to the surrounding Satellites</p>	

---

## DOWNLOAD

How to judge the T10 status by State LED-[ [Download PDF](#) ]

---

---

Manuals+.