

# How to log in the Web-configuration interface

## Contents

 
- [1 How to log in the Web-configuration interface?](#)
- [2 DOWNLOAD](#)
- [3 Related Posts](#)

## How to log in the Web-configuration interface?

It is suitable for: **N100RE, N150RH, N150RT, N151RT, N200RE, N210RE, N300RT, N300RH, N300RU, N301RT, N302R Plus, N600R, A702R, A850R, A800R, A810R, A3002RU, A3100R, T10, A950RG, A3000RU**

### STEP-1:


Connect your computer to the router by cable or wireless, then login the router by entering `http://192.168.0.1` into the address bar of your browser.



**Note: The default access address varies depending on the actual situation. Please find it on the bottom label of the product.**

### STEP-2:

 User Name and Password are required, by default both are **admin** in lowercase letter. Click **LOGIN**.




### STEP-3:

If don't want to restore the router to the factory settings, please follow the introduction below.

3-1. Connect your computer to the router by cable or wireless

3-2. Setup you PC to get the IP automatically (Here I take system W10 for example)

 3-3. Click on  at the bottom right corner on the screen



3-4. Click [ **Properties** ] button in the lower left corner

5bd91a27b684a.png

3-5. Double click on “Internet Protocol (TCP/IP)”.

5bd91a388065f.png

#### **STEP-4:**

**Now you have two ways to configure the TCP/IP protocol below:**

##### **4-1. Assigned by DHCP Sever**

**[1]** Select Obtain an IP address automatically and Obtain DNS Server address automatically, as shown in the figure below. These may be selected by default. Then click OK to save setting.

5bd91bc35dff9.png

**[2]** Check the IP address you get automatically

5bdacd601639f.png

**The IP address is 192.168.0.2, it means the network segment of your PC is 0, you should enter http://192.168.0.1 into the address bar of your browser.**

**Enter the router’s setting interface similarly and do some settings.**

##### **4-2. Assigned manually**

Using the following IP Address, as shown in the following figure.

**[1]** If the router’s LAN IP address is 192.168.1.1, please type in IP address 192.168.1.x “x” range from 2 to 254 , the Subnet Mask is 255.255.255.0 and Gateway is 192.168.1.1.

5bdacd71dac7f.png

Then enter http://192.168.1.1 to log in to the router.

5bdacd7a774f4.png

**[2]** If the router’s LAN IP address is 192.168.0.1, please type in IP address 192.168.0.x “x” range from 2 to 254 , the Subnet Mask is 255.255.255.0 and Gateway is 192.168.0.1.

5bdacd8587bf3.png

Then enter http://192.168.0.1 to log in to the router.

5bdacd9056369.png

**Note: After the router is successfully set up, your computer must choose to obtain an IP address automatically to access the network.**

---

## DOWNLOAD

How to log in the Web-configuration interface – [[Download PDF](#)]

---