

How to login the extender's setting interface

Contents

- [1 How to login the extender's setting interface?](#)
- [2 DOWNLOAD](#)
- [3 Related Posts](#)

How to login the extender's setting interface?

It is suitable for : **EX150, EX300**


1-1. Connect to the extender by typing 192.168.1.254 in the address field of Web Browser. Then press **Enter** key.

5bd6d478df7f4.png

1-2. It will show up the following page:



1-3. Click **Setup Tool** in the middle to enter the extender's setting interface. Then it will require you to enter valid User Name and Password.

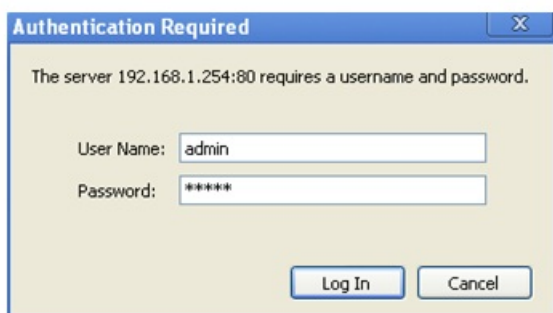

1-4. Enter **admin** for User Name and Password, both in lower case letters. Then click **Log In** button or press **Enter** key.

5bd6d48c77a13.png

DOWNLOAD

How to login the extender's setting interface – [[Download PDF](#)]

