

How to login to extender by manually configuring IP

Contents

- [1 How to login to extender by manually configuring IP?](#)
- [2 Set up steps](#)
- [3 DOWNLOAD](#)
- [4 Related Posts](#)

How to login to extender by manually configuring IP?

It is suitable for: **All TOTOLINK Extender**


Set up steps

STEP-1: Connect your computer

Connect to the extender's LAN port with a network cable from a computer network port (or to search for and connect the extender's wireless signal).

STEP-2: Assigned manually IP Address

TOTOLINK extender's LAN IP address is 192.168.0.254, please type in IP address 192.168.0.x "x" range from 2 to 250 , the Subnet Mask is 255.255.255.0 and Gateway is 192.168.0.254.

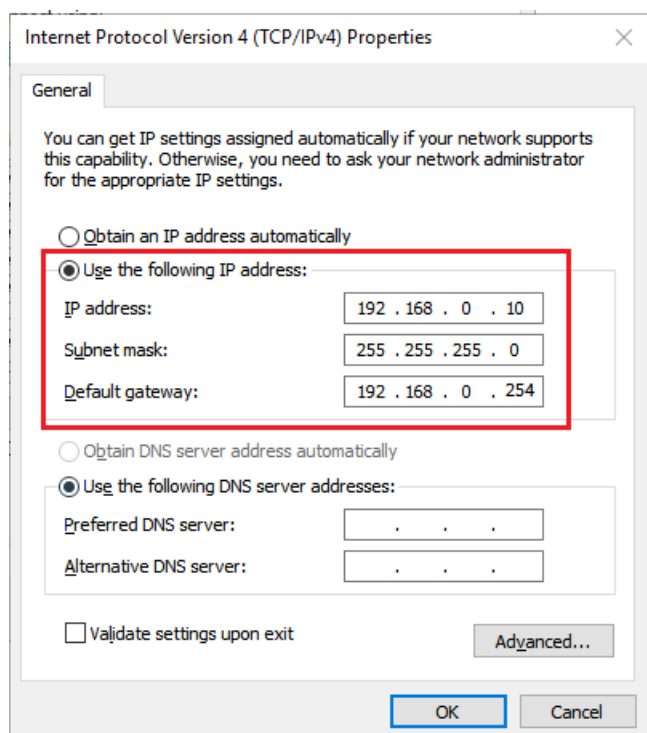

Internet Protocol Version 4 (TCP/IPv4) Properties

General

You can get IP settings assigned automatically if your network supports this capability. Otherwise, you need to ask your network administrator for the appropriate IP settings.

☐ Obtain an IP address automatically

☒ Use the following IP address:

IP address: 192 . 168 . 0 . 10

Subnet mask: 255 . 255 . 255 . 0

Default gateway: 192 . 168 . 0 . 254

☐ Obtain DNS server address automatically

☒ Use the following DNS server addresses:

Preferred DNS server: . . .

Alternative DNS server: . . .

☐ Validate settings upon exit

Advanced...

OK Cancel

STEP-3:

Enter 192.168.0.254 into the TOTOLINK extension in your browser. Take the EX200 as an example.

TOTOLINK
The Smartest Network Device

EX200 (Firmware V5.2.3c.6137)

Language Help

System Status

Extender Setting

Management

System Status

This page shows the current status and extender settings of the AP.

System Status	
Up Time	0day, 0hour, 20minutes, 21seconds
Customer URL	www.totolink.net
Firmware	V5.2.3c.6137
Build Time	2018-05-15 11:42:04

Wireless Status	
Network Name(SSID)	TOTOLINK_EX200
Channel	2
Security Mode	None
MAC Address	00:E0:4C:81:96:C1

Extender Status	
-----------------	--

Copyright © 2018 TOTOLINK Ltd., All Rights Reserved

STEP-4:

Internet Protocol Version 4 (TCP/IPv4) Properties

General Alternative Configuration

You can get IP settings assigned automatically if your network supports this capability. Otherwise, you need to ask your network administrator for the appropriate IP settings.

☒ Obtain an IP address automatically

☐ Use the following IP address:

IP address: . . .

Subnet mask: . . .

Default gateway: . . .

☒ Obtain DNS server address automatically

☐ Use the following DNS server addresses:

Preferred DNS server: . . .

Alternative DNS server: . . .

☐ Validate settings upon exit

Advanced...

OK Cancel

After setting up the extender successfully, please select Obtain an IP address automatically and Obtain DNS Server address automatically.

Note: Your terminal device must choose to obtain an IP address automatically to access the network.

DOWNLOAD

How to login to extender by manually configuring IP – [[Download PDF](#)]
