Home » Support » How to reset the router to factory defaults 🖫

How to reset the router to factory defaults

Contents

- 1 How to reset the router to factory defaults?
- 2 Application introduction:
- 3 Method 1:
- 4 Method 2
- **5 DOWNLOAD**
- **6 Related Posts**

How to reset the router to factory defaults?

It is suitable for: N600R, A800R, A810R, A3100R, T10, A950RG, A3000RU

Application introduction:

If you can't access the router's setup interface or simply forgot the router's password, you may reset the current configuration to factory default. There are two ways to.

Method 1:

STEP-1:

Connect your computer to the router by cable or wireless, then login the router by entering http://192.168.0.1 into the address bar of your browser.




Note: The default access address varies depending on the actual situation. Please find it on the bottom label of the product.

STEP-2:

User Name and Password are required, by default both are admin in lowercase letter. Click LOGIN.


USER LOGIN

Forget Password?

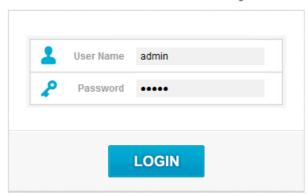

STEP-3:

Click Management->System Configuration on the navigation bar on the left.

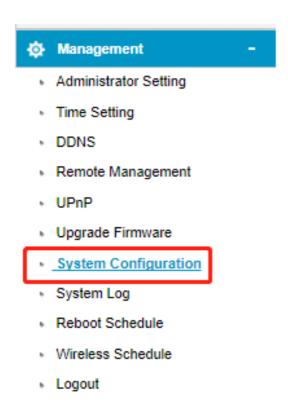


STEP-4:

Click **Restore Factory Default** to reset the router's configuration.


System Configuration

 This page allows you save current settings to a file or reload the settings from the file which was saved previously. Besides, you could reset the current configuration to factory default or reboot the device.



STEP-5:

Click OK and wait for few seconds to finish resetting.

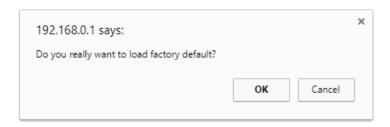

Method 2

Only by one click on the RST/WPS button

STEP-1:

Press and hold the RST/WPS button for about 10 seconds, until the CPU led blink quickly.

STEP-2:

After nearly 30 seconds, resetting is finished.

DOWNLOAD

How to reset the router to factory defaults – [Download PDF]