

How to retrieve the wireless password

Contents

- [1 How to retrieve the wireless password?](#)
- [2 DOWNLOAD](#)
- [3 Related Posts](#)

 
How to retrieve the wireless password?

It is suitable for: **N100RE, N150RH, N150RT, N151RT, N200RE, N210RE, N300RT, N300RH, N300RH, N300RU, N301RT, N302R Plus, N600R, A702R, A850R, A800R, A810R, A3002RU, A3100R, T10, A950RG, A3000RU**

Application introduction: Password can ensure your security of your wireless network. Follow these steps if you forgot about it.

STEP-1:

Connect your computer to the router by cable or wireless, then login the router by entering `http://192.168.0.1` into the address bar of your browser.




Note: The default access address varies depending on the actual situation. Please find it on the bottom label of the product.


STEP-2:

User Name and Password are required, by default both are **admin** in lowercase letter. Click **LOGIN**.

USER LOGIN

[Forget Password?](#)

 User Name

 Password

LOGIN

STEP-3:

Click **Wireless->Basic Settings** on the navigation bar on the left. In this interface, you can see the password you ever setup and change it if necessary.

Basic Settings

Basic Settings: Enabled

SSID: TOTOLINK A3002RU

Broadcast SSID: Enabled

Encryption: WPA2

Limit Client AP(3-64): 64

Download: 0 Mbps (0:Unlimit)

Upload: 0 Mbps (0:Unlimit)

Authentication Mode: ☐ Enterprise (RADIUS) ☒ Personal (Pre-Shared Key)

WPA2 Cipher Suite: ☐ TKIP ☒ AES

Pre-Shared Key Format: Passphrase

Pre-Shared Key: 88888888

Apply

DOWNLOAD

How to retrieve the wireless password – [[Download PDF](#)]