

How to set the wireless parameters of dual-band wireless router?

Contents

- [1 How to set the wireless parameters of dual-band wireless router?](#)
- [2 DOWNLOAD](#)
- [3 Related Posts](#)

 
How to set the wireless parameters of dual-band wireless router?

It is suitable for: **A1004, A2004NS, A5004NS, A6004NS**


Application introduction: If you want to set the wireless parameters of dual-band wireless router, please follow the steps below.


STEP-1: Connect your computer to the router

1-1. Connect your computer to the router by cable or wireless, then login the router by entering http://192.168.1.1 into the address bar of your browser.




Note: The default access address differs by model. Please find it on the bottom label of the product.

 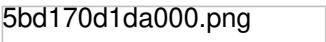1-2. Please click **Setup Tool**  to enter the setup interface



 
1-3. Please login to the Web Setup interface (the default user name and password is admin).



1-4. Now you can log in the interface to set up.

STEP-2: Parameters setting

 2-1. Choose Advanced Setup->Wireless (2.4GHz)->Wireless Setup.



From the option, you can setup wireless parameters of 2.4GHz band

5bd17100cb20e.png

2-2. Choose Advanced Setup->Wireless(5GHz)->Wireless Setup.

5bd171076b671.png

From the option, you can setup wireless parameters of 5GHz band

5bd1710d6a650.png

Note: You must select Start in the Operation bar firstly, after configuring the parameters, don't forget to click Apply.

DOWNLOAD

How to set the wireless parameters of dual-band wireless router -[[Download PDF](#)]
