Home » Support » How to set up static DHCP The

How to set up static DHCP

Contents 1 How to set up static DHCP? 2 DOWNLOAD 3 Related Posts

How to set up static DHCP?

It is suitable for: N150RH, N150RT, N151RT, N200RE, N210RE, N300RT, N301RT, N300RH, N302R Plus, A702R, A850R, A3002RU

STEP-1: Connect your computer

Connect your computer to the router by cable or wireless, then login the router by entering http://192.168.0.1 into the address bar of your browser.




Note:

The default access address varies depending on the actual situation. Please find it on the bottom label of the product.

STEP-2:


User Name and Password are required, by default both are admin in lowercase letter. Click LOGIN.

USER LOGIN

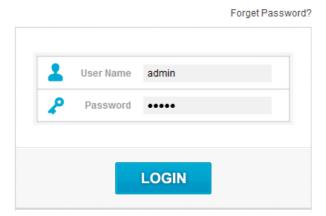


STEP-3:

Enter advanced settings to select the LAN settings in Network, click the Set Static DHCP.

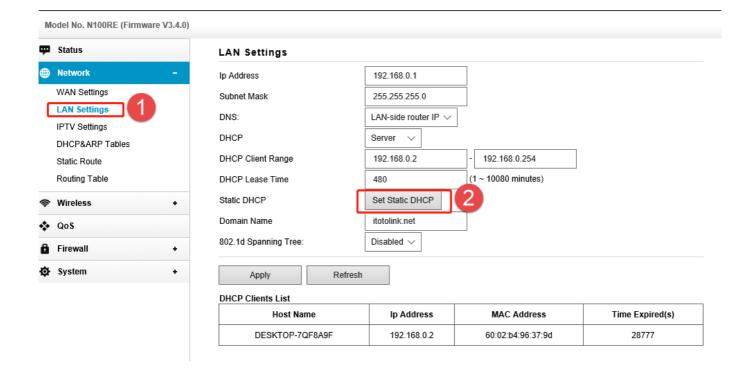

STEP-4:

Checklist the Enable Static DHCP to open the setting, input IP Address, MAC Address and Comment. After click Apply, we can see the information in the static DHCP List.

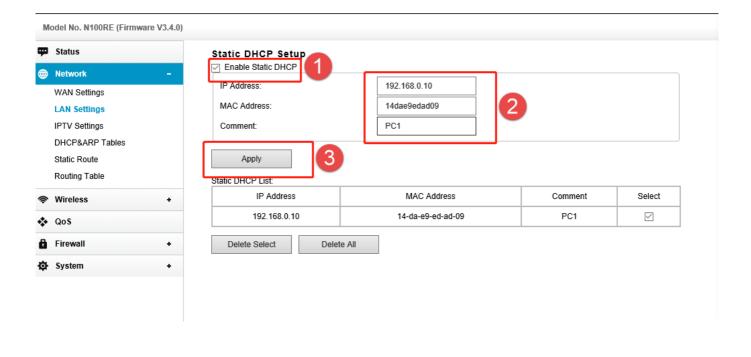

DOWNLOAD

How to set up static DHCP - [Download PDF]

Manuals+,