

How to setup AP Client mode

Contents

- [1 How to setup AP Client mode](#)
- [2 DOWNLOAD](#)
- [3 Related Posts](#)

 
How to setup AP Client mode

It is suitable for: **N150RA, N300R Plus, N300RA, N300RB, N300RG, N301RA, N302R Plus, N303RB, N303RBU, N303RT Plus, N500RD, N500RDG, N505RDU, N600RD, A1004, A2004NS, A5004NS, A6004NS**

 
Application introduction: AP Client mode allows users with laptop to surf Internet by wireless connection. It's designed to add wireless function for existed wired Router.

STEP-1: Connect your computer to the router

1-1. Connect your computer to the router by cable or wireless, then login the router by entering `http://192.168.1.1` into the address bar of your browser.



Note: The default IP address of TOTOLINK router is 192.168.1.1, the default Subnet Mask is 255.255.255.0. If you can't log in, Please restore factory settings.

1-2. Please click Setup Tool icon  to enter the router's setting interface.

 


1-3. Please login to the Web Setup interface (the default user name and password is **admin**).



STEP-2:

Click **Advanced Setup->Wireless->Wireless Mutibridge** on the navigation bar on the left.



STEP-3:

Finished the settings on the page as below, Click Add button after setting.

5bcfd9fe4b75a.png

–**Operation:** Start

–**Wireless Mode:** Use Wireless WAN

–**SSID:** Scan the router' AP

–**Authentication & Encryption:** choose encryption type and enter the password.

STEP-4:

After click Search AP, it will pop up the page. Choose the AP by double click and then click Select AP button.

5bcfda0fec44d.png

STEP-5:

Click Advanced Setup->Network->LAN/DHCP Server on the navigation bar on the left.

5bcfda1b5e004.png

STEP-6:

Change the third column of the LAN IP (LAN segment should not be the same with the primary router). Generally, enter 2 if there's no particular requirement. Then click Apply& Restart button.

5bcfda21f2e80.png

STEP-7:

Wait for 40 seconds, and then it will pop up a window prompts you to reconnect the website as the LAN IP has changed.

5bcfda2f12135.png

STEP-8:


Login the router's setting interface, and check the Internet status.

5bcfda34d79db.png

5bcfda3abfb48.png

DOWNLOAD

How to setup AP Client mode – [[Download PDF](#)]



Manuals+.