

How to setup Multiple SSIDs

Contents

- [1 How to setup Multiple SSIDs?](#)
- [2 DOWNLOAD](#)
- [3 Related Posts](#)

How to setup Multiple SSIDs?

It is suitable for: **N600R, A800R, A810R, A3100R, T10, A950RG, A3000RU**

Application introduction: Multiple APs function allows users to create network name for clients or friends accordingly. It is good for access control and your data privacy.

STEP-1:

Connect your computer to the router by cable or wireless, then login the router by entering `http://192.168.0.1` into the address bar of your browser.



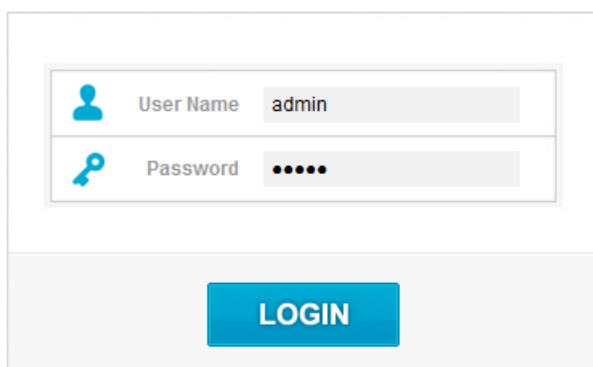
Note: The default access address varies depending on the actual situation. Please find it on the bottom label of the product.

STEP-2:

User Name and Password are required, by default both are **admin** in lowercase letter. Click **LOGIN**.

USER LOGIN

[Forget Password?](#)

A user login form with a light gray background. At the top right is a link 'Forget Password?'. The form contains two input fields: 'User Name' with a person icon and 'Password' with a key icon. The 'User Name' field contains the text 'admin'. The 'Password' field contains six dots. Below the fields is a blue button with the text 'LOGIN' in white.

STEP-3:

Click **Wireless->Multiple APs** on the navigation bar on the left. In this interface, you can add other SSIDs with different encryption type. If you want to hide the SSID, choose “Disable” in the SSID broadcast bar. Then click Apply.

System Status

Operation Mode

Network

Wireless

Wireless Status

Basic Setting

Multiple APs

MAC Authentication

WDS

WPS

Advanced Setting

QoS

Firewall

Management

Multiple APs

This page shows the wireless setting for multiple APs.

1

4

5

6

7

Network Name(SSID)

Broadcast SSID

Encryption

Encryp Type

Key Format

Password

TOTOLINK_1

Enable

WPA2-PSK

AES

ASCII

88888888

Add

Multiple APs List (The maximum AP count is 2)

ID	Network Name(SSID)	Encryption	Select
----	--------------------	------------	--------

Delete

Clear

Note:

You can no longer see the hidden SSID. If you want to connect to the SSID, you must manually enter the correct SSID search.

DOWNLOAD

How to setup Multiple SSIDs – [[Download PDF](#)]