

How to Setup Open VPN on A2004NS

Contents

- [1 How to Setup Open VPN on A2004NS?](#)
- [2 Diagram](#)
- [3 Set up steps](#)
- [4 DOWNLOAD](#)
- [5 Related Posts](#)


How to Setup Open VPN on A2004NS?

It is suitable for: **A2004NS** / **A5004NS** / **A6004NS**

Note: IOS 10 systems or higher systems can't use PPTP VPNs

Application introduction: PPTP VPN's PC-to-site mode provides a secure tunnel for the terminal to access the headquarters network. If you are on a business trip and have access to the Internet. Use the VPN client dial-up connection that comes with the terminal to establish a secure tunnel for data transmission.


Diagram

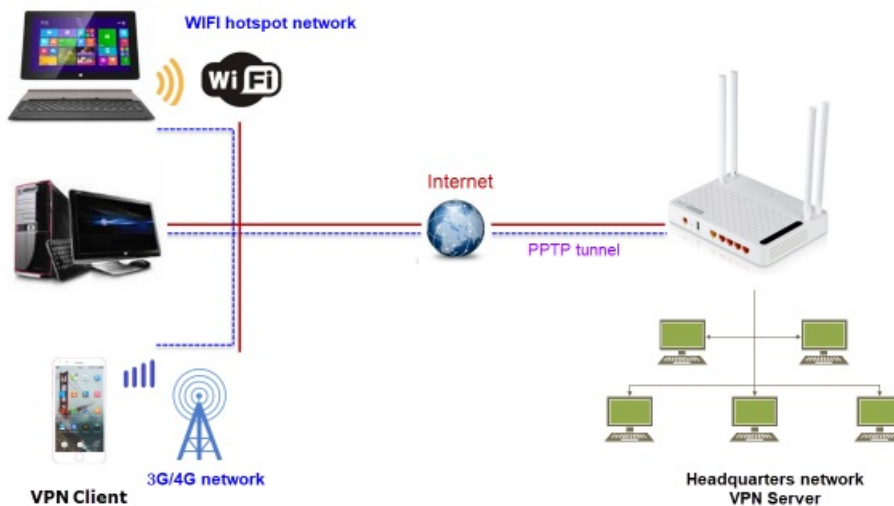


Set up steps

STEP-1: Set up the PPTP VPN server


1.1. Click into **Utility** → **VPN Setup**

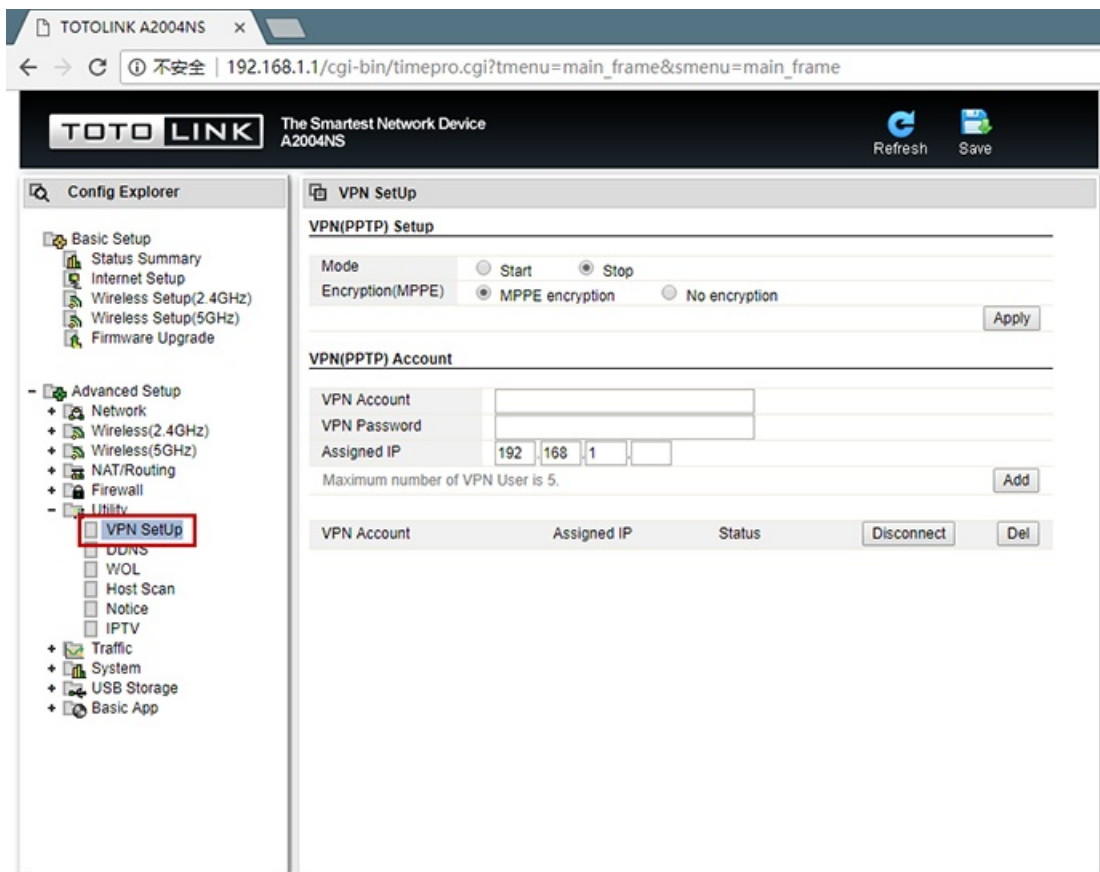


1.2. Turn on PPTP, Select the default **Encryption(MPPE)**

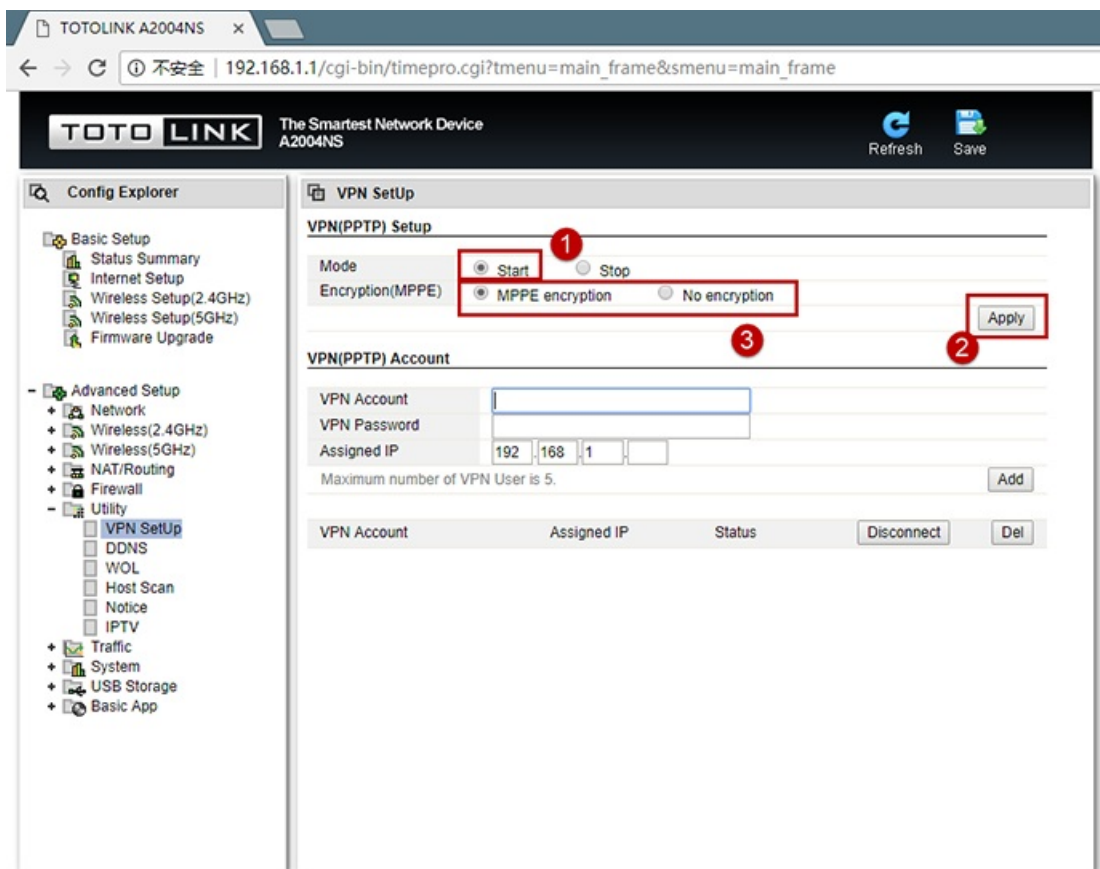

1.3. Enter **VPN Account**, **VPN Password**, **Assigned IP**. (Maximum number of VPN User is 5.)


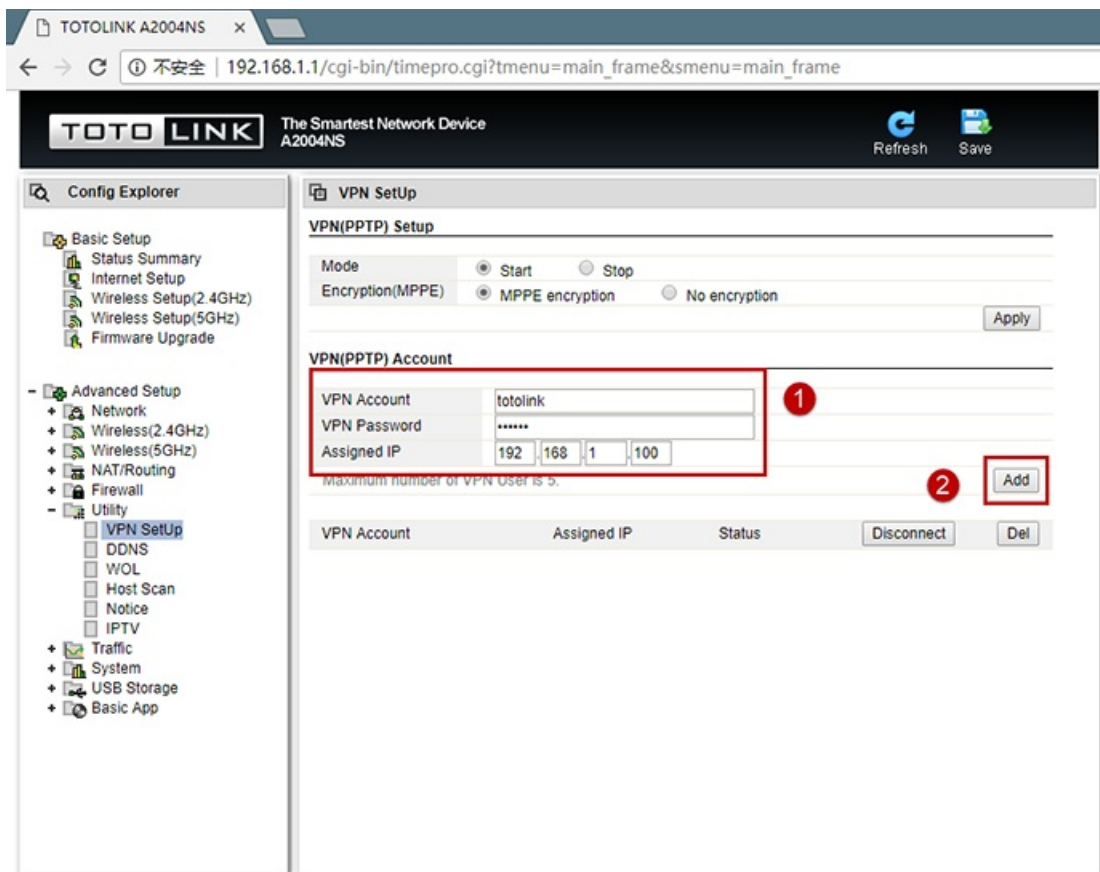



1.4. Remember WAN IP.

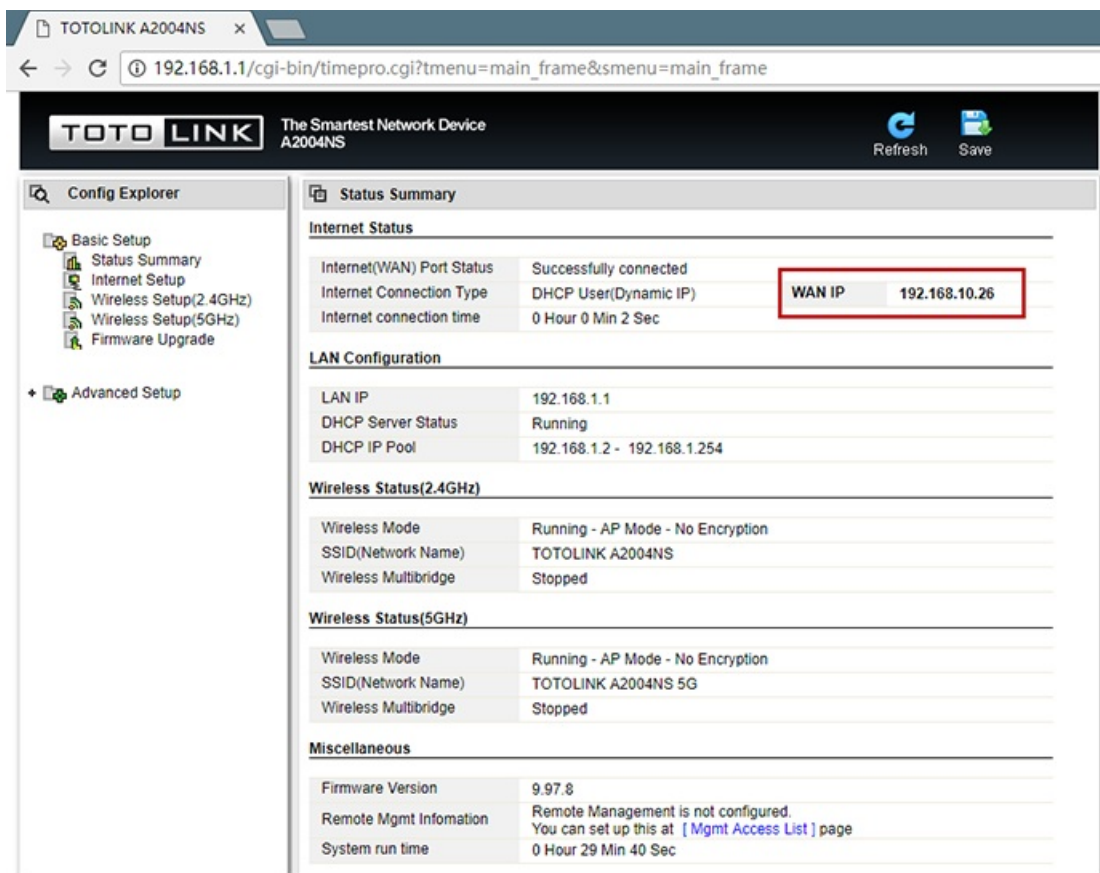


STEP-2: VPN client setting



2.1. Enter the VPN client and set it up.

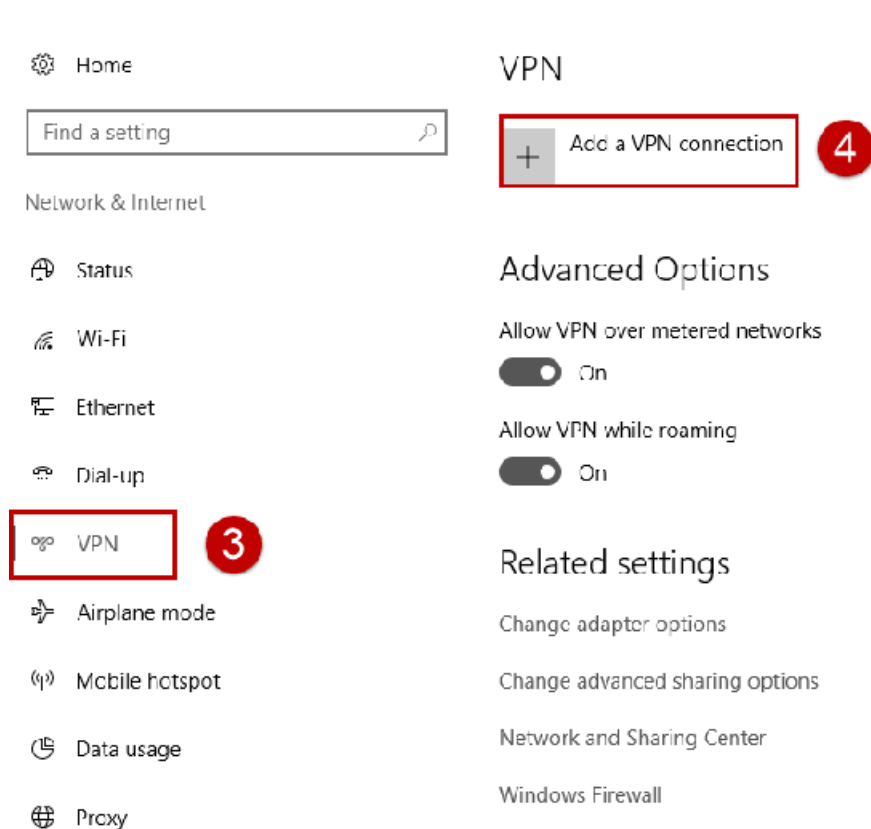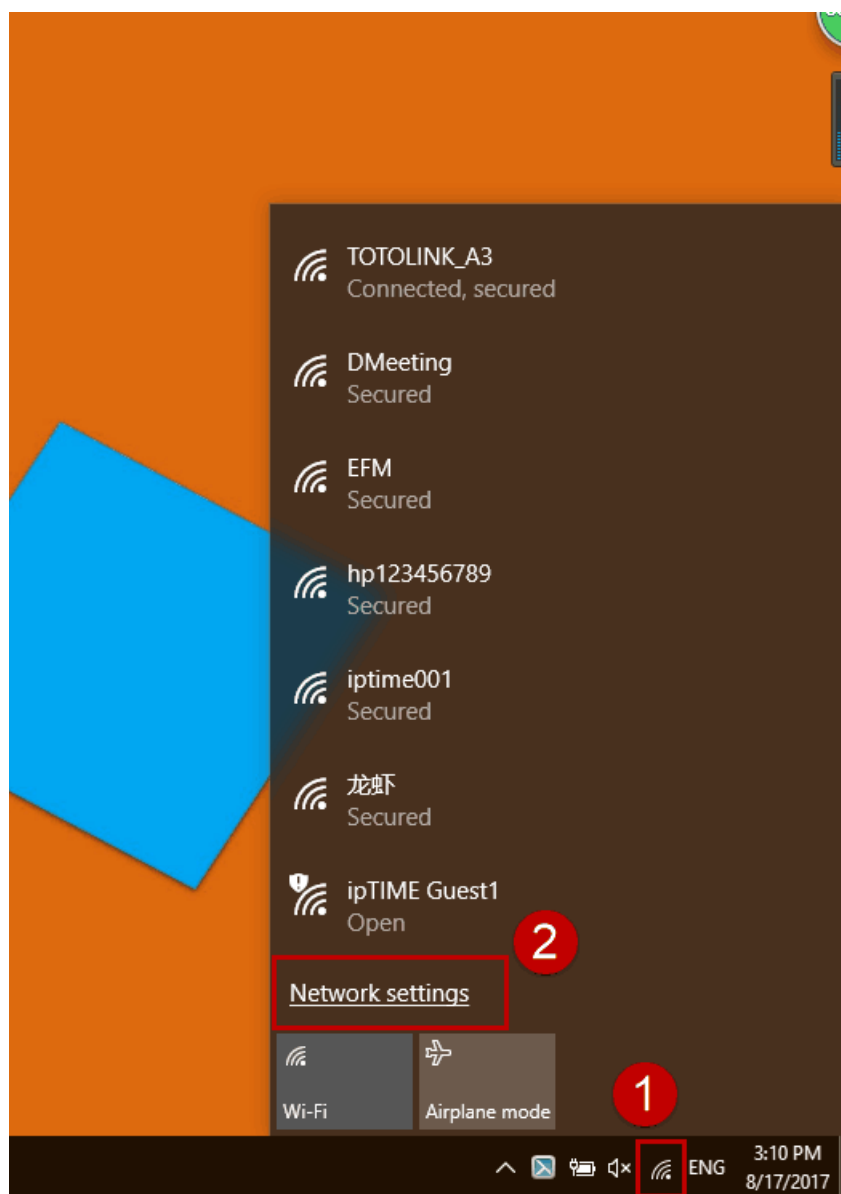

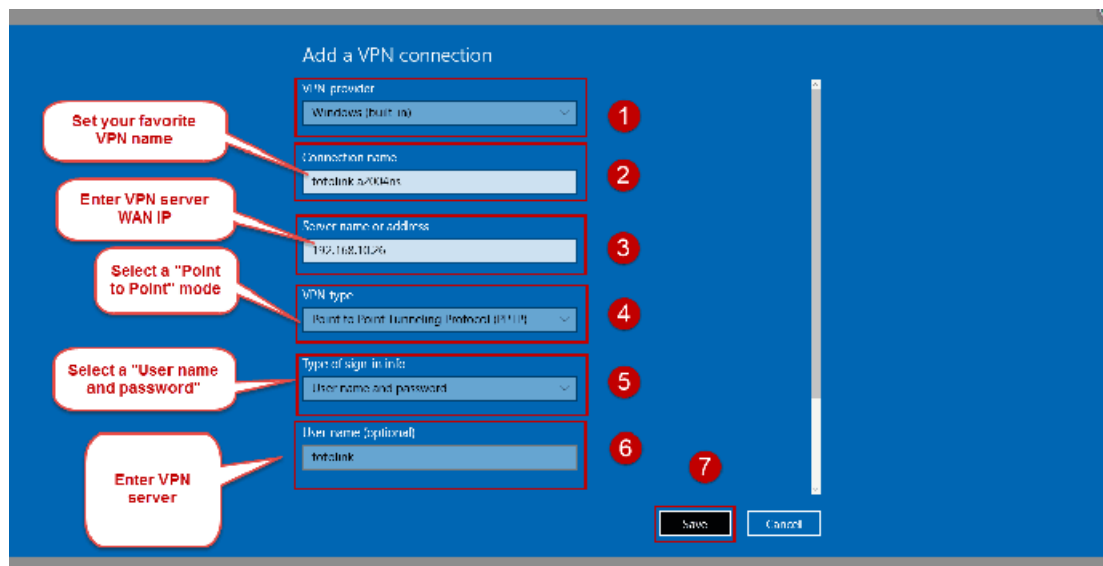


2.2. Set the encryption attribute for the VPN account

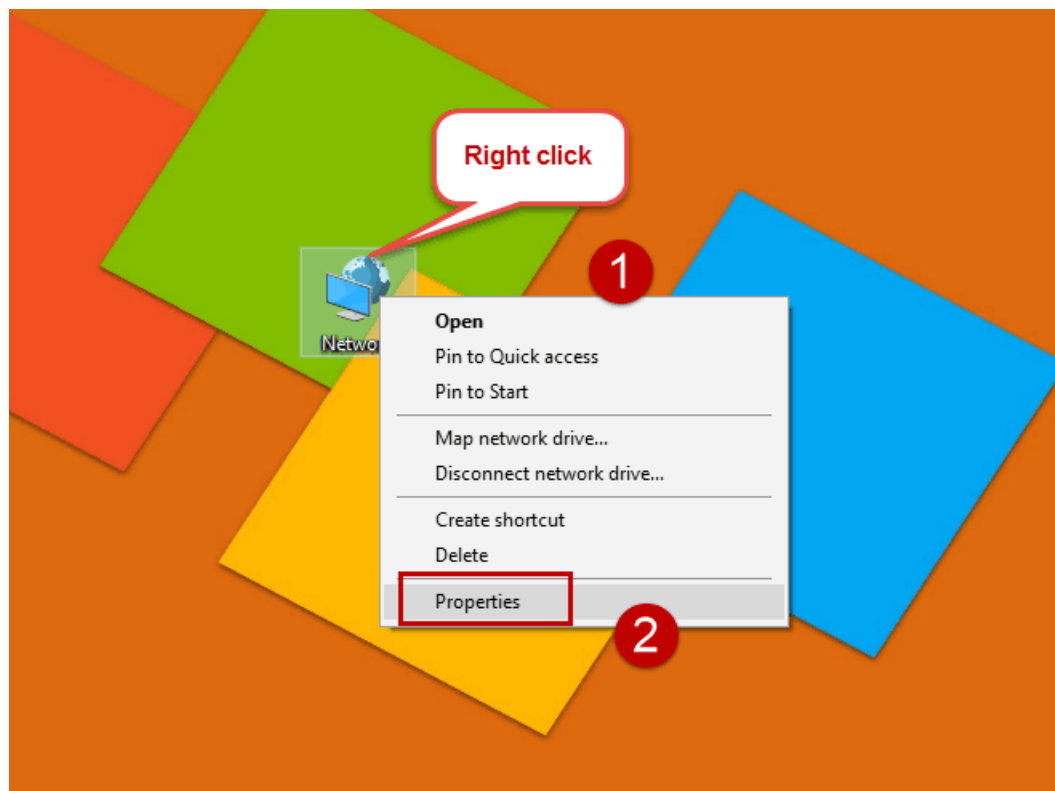


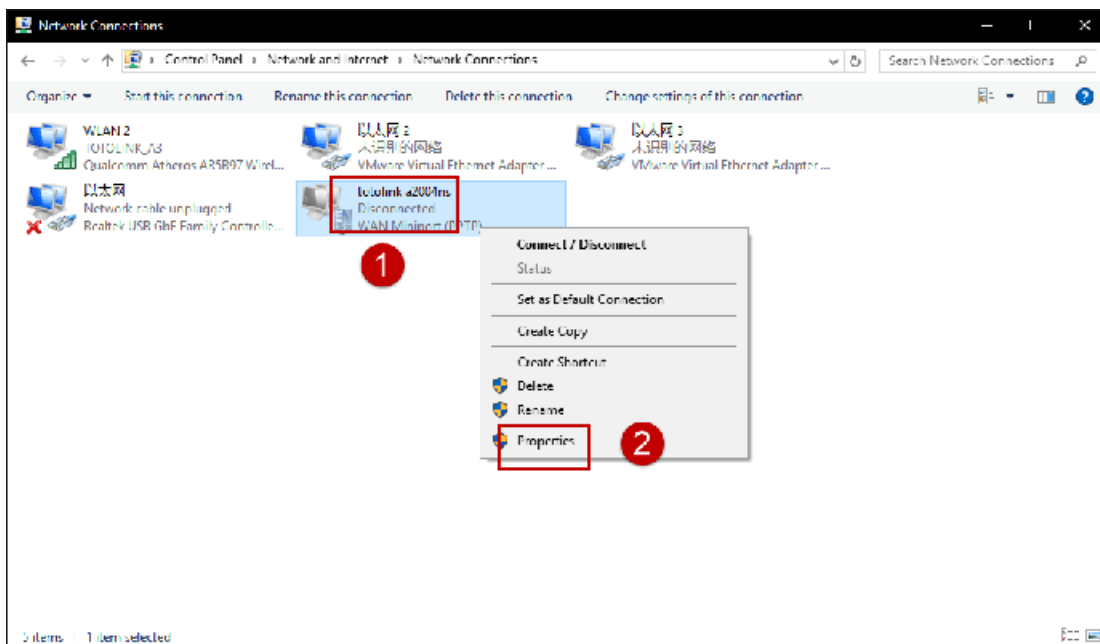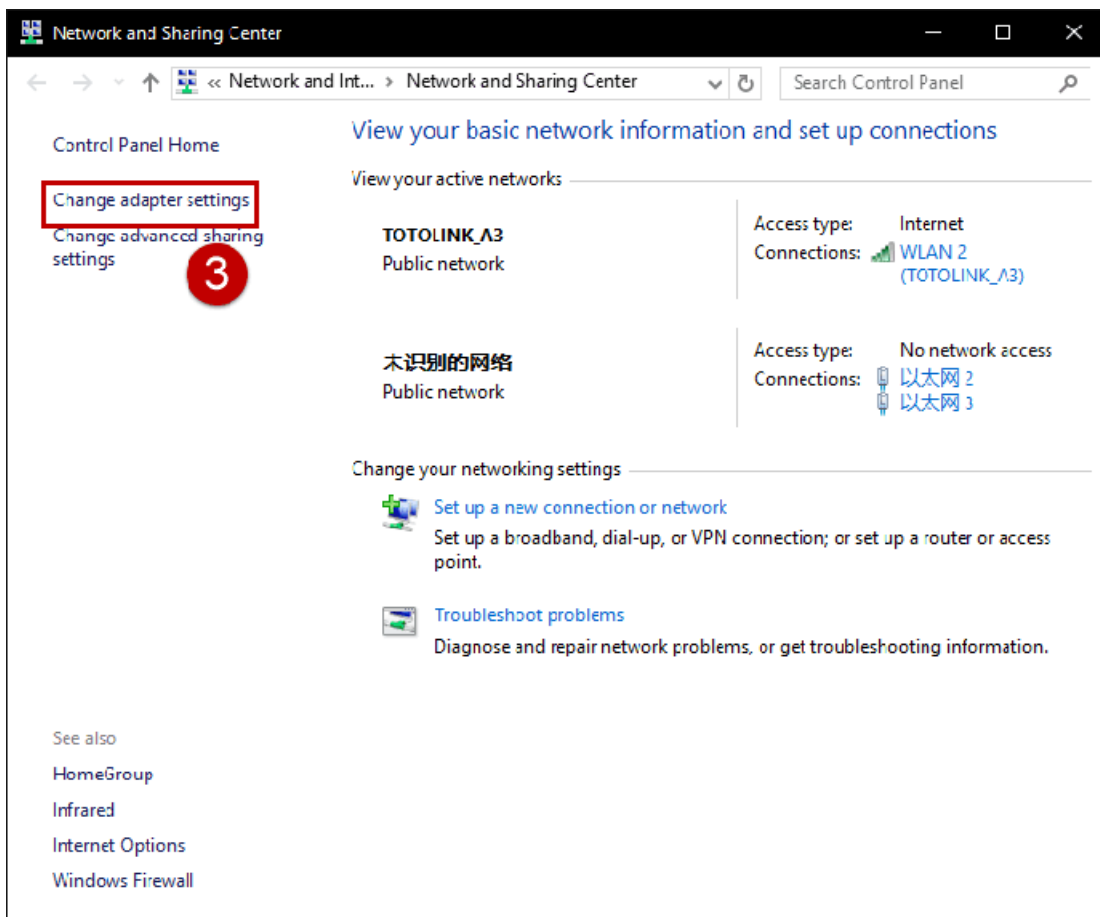

2.3. Set the above parameters, return to the VPN interface, and connect.

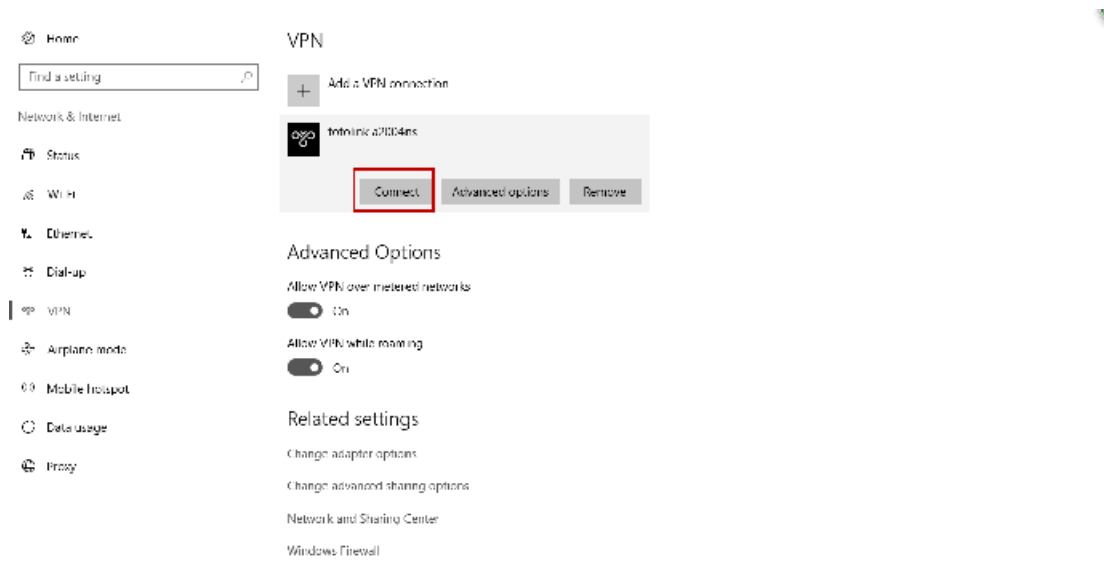

2.4. The following picture is the identity of the successful connection. At this point the VPN has dialed successfully.

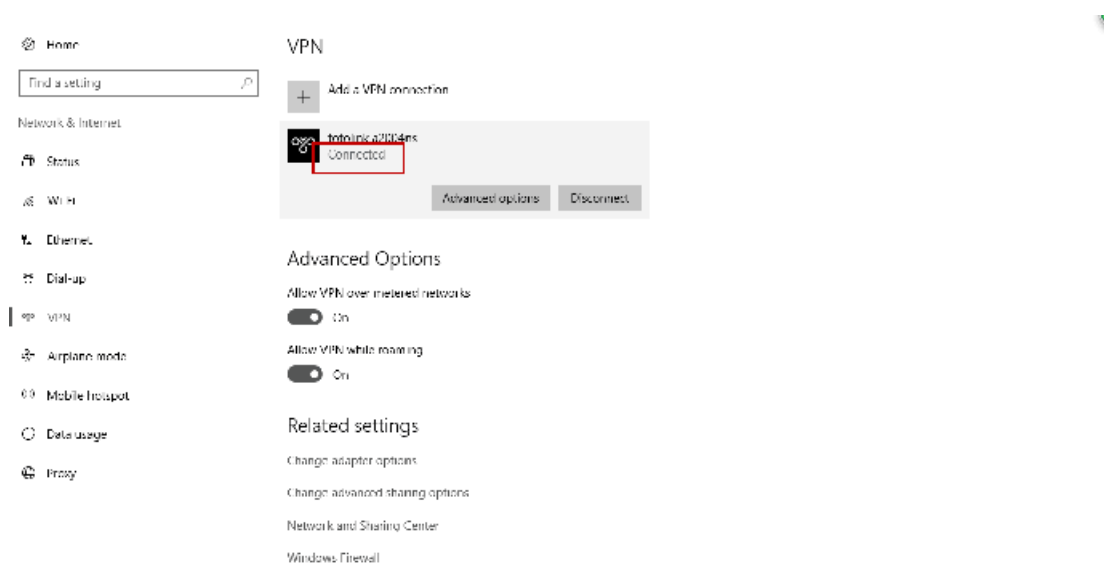

DOWNLOAD

How to Setup Open VPN on A2004NS – [[Download PDF](#)]
