

How to setup remote management

Contents

- [1 How to setup remote management](#)
- [2 DOWNLOAD](#)
- [3 Related Posts](#)

How to setup remote management

It is suitable for: **N150RA, N300R Plus, N300RA, N300RB, N300RG, N301RA, N302R Plus, N303RB, N303RBU, N303RT Plus, N500RD, N500RDG, N505RDU, N600RD, A1004, A2004NS, A5004NS, A6004NS**

 
Application introduction: The Remote Management feature allows you to manage the gateway from a remote location, via the Internet. You can use the gateway's Internet IP Address to enter the router's setting interface.

STEP-1: Connect your computer to the router


1-1. Connect your computer to the router by cable or wireless, then login the router by entering `http://192.168.1.1` into the address bar of your browser.

Note: The default IP address of TOTOLINK router is 192.168.1.1, the default Subnet Mask is 255.255.255.0. If you can't log in, Please restore factory settings.

1-2. Please click **Setup Tool** icon  to enter the router's setting interface.




1-3. Please login to the Web Setup interface (the default user name and password is **admin**).

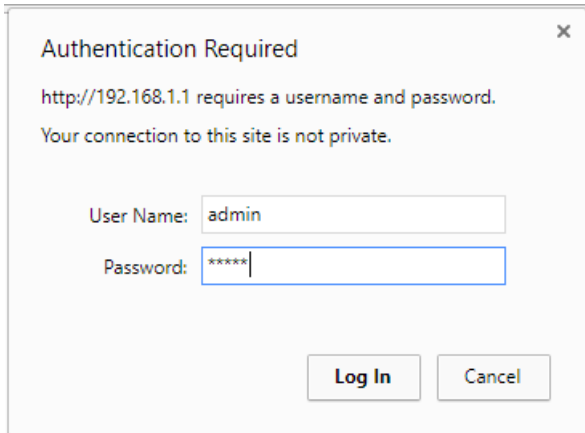

The image shows a web browser dialog box titled "Authentication Required". It contains the following text: "http://192.168.1.1 requires a username and password." and "Your connection to this site is not private." Below this text are two input fields: "User Name:" with the value "admin" and "Password:" with the value "*****". At the bottom of the dialog are two buttons: "Log In" and "Cancel".

STEP-2:

Click **Advanced Setup->Firewall->Mgmt Access Control** on the navigation bar on the left.

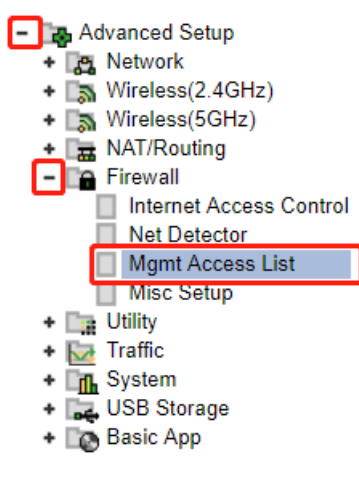

STEP-3:

Check the box to enable Remote Mgmt port and enter the desired port in the box (default port is 8080), and then click Apply button.

5bcedead622a.png


STEP-4:

Next to click Use Remote Accesslist and type in the IP allowed if you want to remotely manage by a specify IP address.

5bcedeb2902bd.png

STEP-5:

After that you can enter the setup interface by **WAN IP+Remote Mgmt port**.

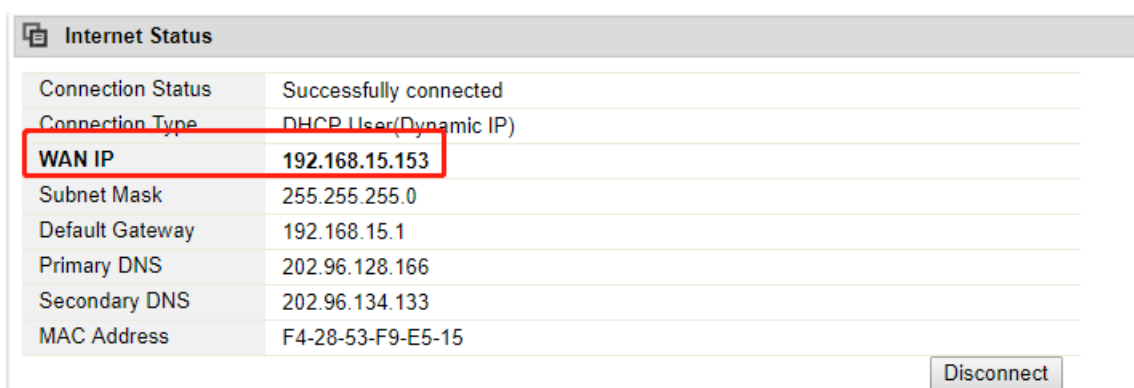

5bcedec20aa41.png

DOWNLOAD

How to setup remote management – [[Download PDF](#)]

