Home » Support » How to setup WDS by two TOTOLINK routers



How to setup WDS by two TOTOLINK routers

C	_	n	+	_	n	٠	_
	L)		ш	н:			9

- 1 How to setup WDS by two TOTOLINK
- 2 The first router
- 3 The second router
- **4 DOWNLOAD**
- **5 Related Posts**

How to setup WDS by two TOTOLINK routers

It is suitable for: N150RA, N300R Plus, N300RA, N300RB, N300RG, N301RA, N302R Plus, N303RB, N303RBU, N303RT Plus, N500RD, N500RDG, N505RDU, N600RD, A1004, A2004NS, A5004NS, A6004NS

Application introduction: WDS (Wireless Distribution System) provides bridge traffic between two LANs though the air and extends the coverage range of a WLAN.

Notice:

Both routers must have the same channel set.

Both routers must be set to the same band 2.4G or 5G.This article takes 2.4G as an example.

The first router

STEP-1: Connect your computer to the router

1-1. Connect your computer to the router by c	cable or wireless, ther	n login the router by enter	ing http://192.168.1.1
into the address bar of your browser.			

5bcee0a20a840.png	
-------------------	--

Note: The default IP address of TOTOLINK router is 192.168.1.1, the default Subnet Mask is 255.255.255.0. If you can't log in, Please restore factory settings.

5bcee0b013bd2.png 1-2. Please click **Setup Tool** icon to enter the router's setting interface.

5bcee0c6718aa.png

1-3. Please login to the Web Setup interface (the default user name and password is admin).

5bcee0cf03fa7.png

STEP-2:
Click Advanced Setup->Wireless->Wireless Setup on the navigation bar on the left.
5bcee0d5a472d.png
STEP-3:
Enter the information show below and then click Apply button for saving modification.
-SSID: Network name (avoid setting the same name with each other)
-Channel: Select by your environment (e.g. 11)
-Encryption: WPA-PSK/WPA2-PSK+AES
-Encryption key: Type in eight to sixty-three letters(a~z) or numbers (0~9)
5bcee0e5e8012.png
STEP-4:
Click Advanced setup->Wireless->WDS Setup, then click [AP Scan] to choose SSID of Secondary Router.
5bcee0ebef5c5.png
The second router
STEP-1:
Connect your computer to the second router, the first step is the same as the first router.
STEP-2:
Click Advanced setup->Wireless->WDS Setup on the left.
5bcee14945f66.png
STEP-3:
Click [AP Scan] and find the SSID of the first router, and then click Add button. The AP's information will be displayed next as the picture show.
5bcee1905a0d4.png

Enter Wireless Setup interface. Enter the SSID different from the first router, and the same channel encryption type and password with the first router.
5bcee19823203.png
STEP-5:
Click Advanced Setup->Network->LAN/DHCP Server on the navigation bar on the left.
5bcee19f6fc5d.png
STEP-6:
Skip to STEP-6 if the router is in the same LAN with Primary Router but different IP Address.
6-1. Change the LAN IP to 192.168.1.X(X must be different from the first one), and then click Apply& Restart button.
5bcee1ac1353b.png
6-2. Login the router's setting interface again.
STEP-7:
Stop DHCP Service in the LAN/DHCP setup interface by selecting stop as the image show.
5bcee1b73f6f0.png 5bcee1baed0c1.png
DOWNLOAD
How to setup WDS by two TOTOLINK routers – [Download PDF]

STEP-4: