



How to unbind the slave device if the master device of the MESH suit is lost

[Home](#) » [Support](#) » How to unbind the slave device if the master device of the MESH suit is lost 

Contents

- [1 How to unbind the slave device if the master device of the MESH suit is lost](#)
- [2 Background Introduction:](#)
- [3 Set up steps](#)
- [4 DOWNLOAD](#)
- [5 Related Posts](#)

How to unbind the slave device if the master device of the MESH suit is lost

It is suitable for T6,T8,X18,X30,X60

Background Introduction:

I bought a factory bound T8 (2 units), but the main device is damaged or lost. How to unbind and use the secondary device

Set up steps

STEP 1:

Power up the router and connect any LAN port of the router to the PC using a network cable




STEP 2:


Configure the computer IP as the IP address of the static 0 network segment

If unclear, please refer to: **How to Configure a Static IP Address for a PC.**

STEP 3:

Open the browser and enter 192.168.0.212 in the address bar to enter the management page

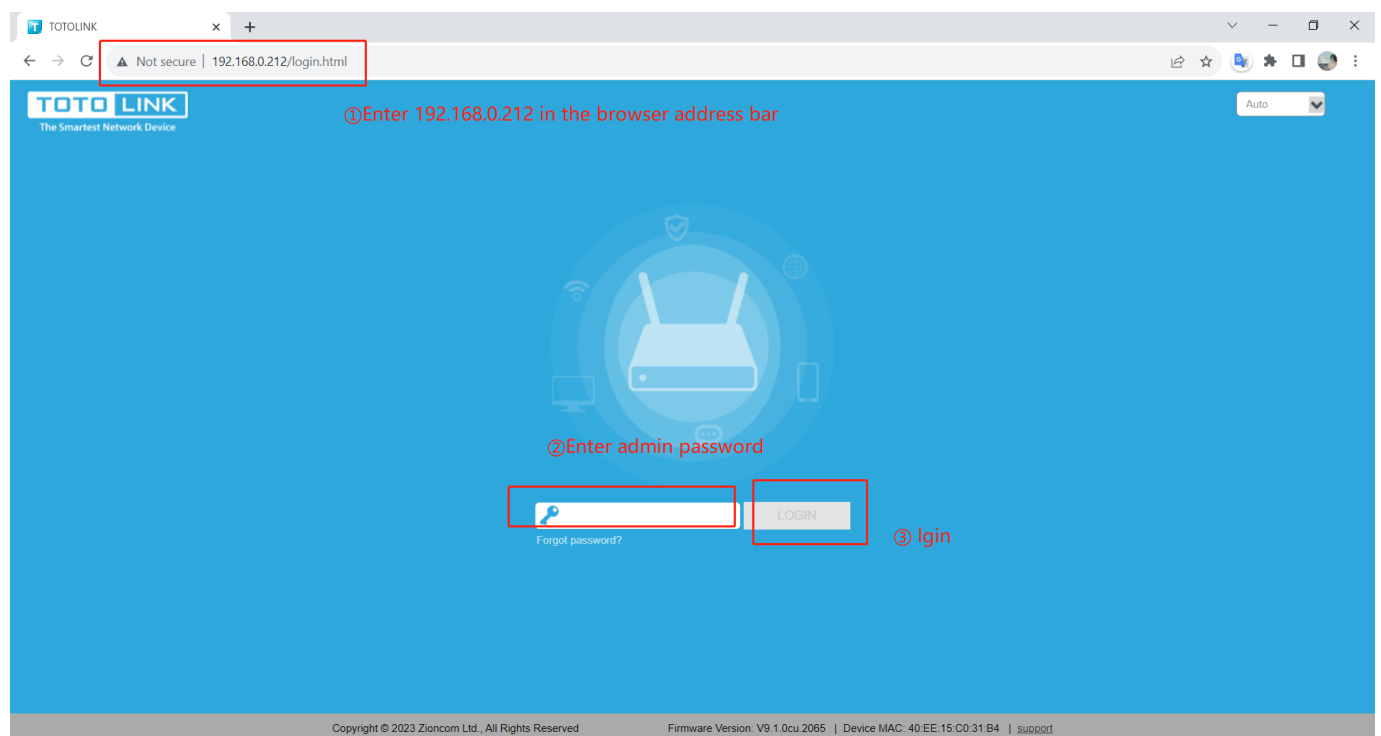

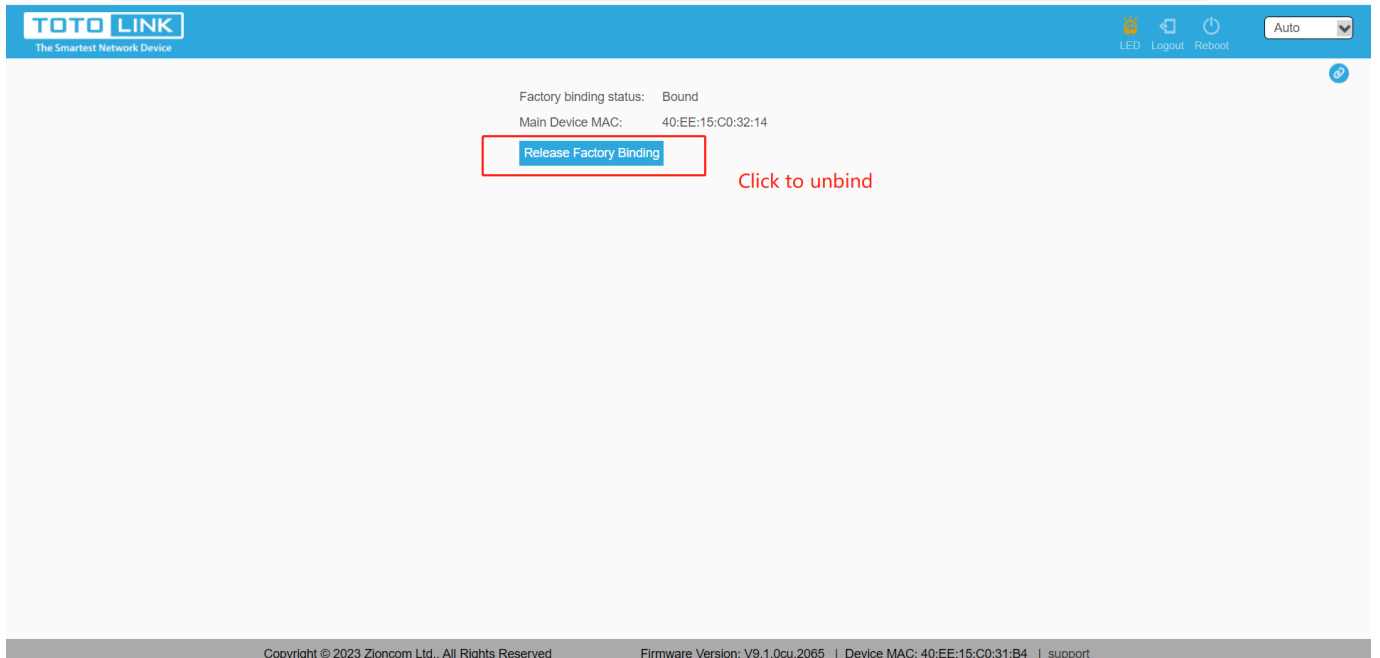

STEP 4:

After unbinding, the router will restore its factory settings. After completion, you can re-enter the management page through 192.168.0.1 or itoolink.net

DOWNLOAD

How to unbind the slave device if the master device of the MESH suit is lost – [[Download PDF](#)]