

How to upgrade the firmware of the extender

 
Contents

- [1 How to upgrade the firmware of the extender?](#)
- [2 DOWNLOAD](#)
- [3 Related Posts](#)


How to upgrade the firmware of the extender?

It is suitable for **EX150, EX300**

1-1. Please login the extender's web-setting interface.(Default IP address: 192.168.1.254, User name: admin, Password: admin)



 1-2. Click Firmware Upgrade on the config explorer.



1-3. Click Choose File button to select the firmware version and then click Upgrade button.



DOWNLOAD

How to upgrade the firmware of the extender – [[Download PDF](#)]
