

How to upgrade the firmware

Contents

- [1 How to upgrade the firmware?](#)
- [2 DOWNLOAD](#)
- [3 Related Posts](#)

 
How to upgrade the firmware?

It is suitable for: **N100RE, N150RH, N150RT, N151RT, N200RE, N210RE, N300RT, N300RH, N300RH, N300RU, N301RT, N302R Plus, N600R, A702R, A850R, A800R, A810R, A3002RU, A3100R, T10, A950RG, A3000RU**

Application introduction: New version of firmware will be released to improve the various efficiency or to fix some bugs. Following the steps show below so as to realize upgrading.

STEP-1:

Connect your computer to the router by cable or wireless, then login the router by entering http://192.168.0.1 into the address bar of your browser.

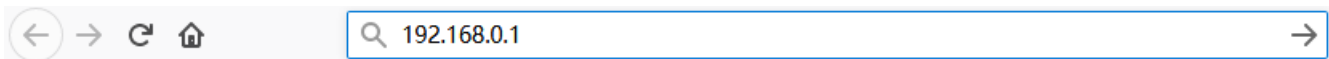


Note: The default access address varies depending on the actual situation. Please find it on the bottom label of the product.


STEP-2:

User Name and Password are required, by default both are **admin** in lowercase letter. Click **LOGIN**.

USER LOGIN


[Forget Password?](#)

 User Name

 Password

STEP-3:

Click **Management/System->upgrade firmware**. Choose the firmware file for upgrading. Then click the **Upgrade** button. Then wait for few minutes, the router restart automatically.

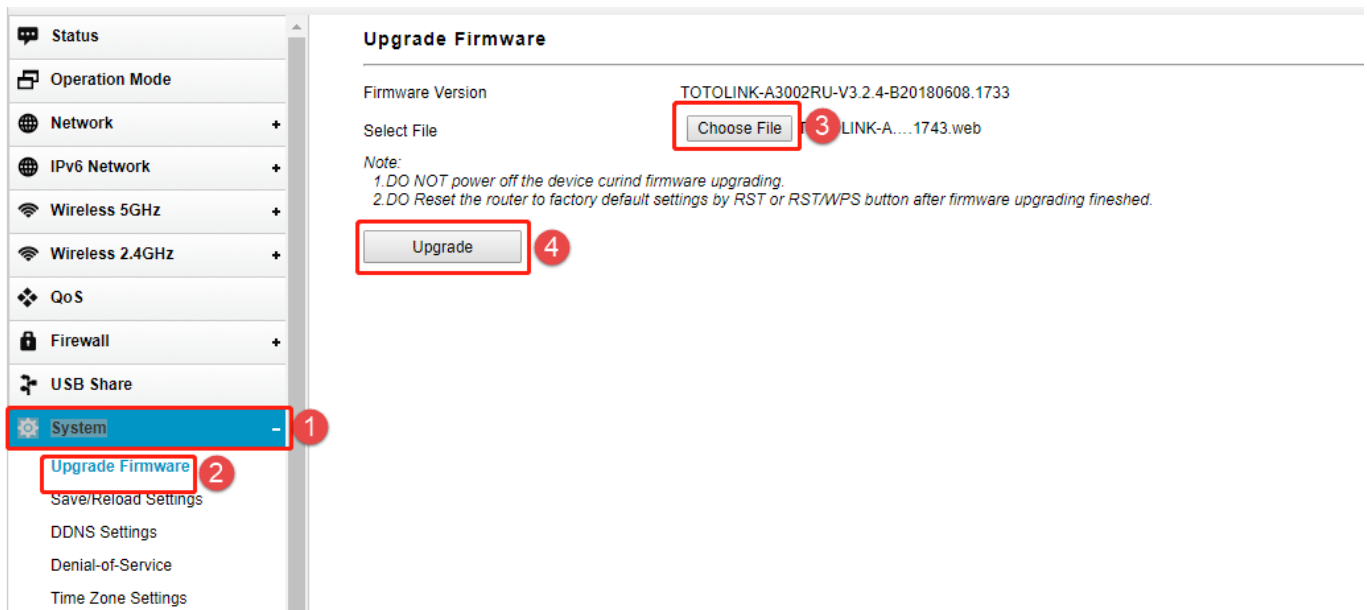

Notice:

- 1.DO NOT power off the device or close the browser window during the upload because it may crash the system.
- 2.The correct upgrade firmware is a file suffixed with the Web.

DOWNLOAD

How to upgrade the firmware – [[Download PDF](#)]
