**Home** » **Support** » How to use Soft AP function

# How to use Soft AP function

#### **Contents**

- 1 How to use Soft AP function?
- 2 DOWNLOAD
- **3 Related Posts**

### How to use Soft AP function?

It is suitable for: N150UA, N150UH, N150UM, N150USM, N300UM, N500UD

**Application introduction:** TOTOLINK WiFi adapter can realize the wireless signal's receiving and enlarging and also work as an AP. It can be a WiFi hot spot by using wired network or existing WiFi signal to realize Internet sharing for multiple devices.

5bd822993aa45.png	
-------------------	--

To realize the Soft AP function, you just need to follow the steps below.

#### STEP-1: Install the driver

Double click on the install application, just select "Next" step by step according to the tips. As there is the applying icon on your desktop, it means you have installed the application successfully.

## STEP-2:

Right click on the TOTOLINK Ultility	icon, and select	"Switch to AP	Mode".
--------------------------------------	------------------	---------------	--------

5bd822b0550d3.png

The icon will change after changing to the AP mode.

5bd822b687600.png

#### STEP-3:

### Make sure that your wired network is shared

3-1. Right click on "Online neighbors", select "Property", then double click on "Local connection Status". Click "Properties" afterwards.

5bd822c76a753.png	
-------------------	--

3-2. In the Local Area Connection Properties interface, click "Sharing", tick the option, and click "OK".
5bd822ce385db.png
STEP-4:
Click the setup icon, and enter the SSID (Ex. SoftAP), click the arrow icon afterwards.
5bd822e446481.png
STEP-5:
Select the correct Channel according to you situation.
5bd822ea93f75.png
STEP-6:
Choose the encryption mode and type for security. WPA-PSK and WPA2-PSK is recommended.
5bd822f9293b7.png
STEP-7:
Enter the password and click the arrow icon to finish AP setup.
5bd8231bb7ae5.png
STEP-8:
Soft AP setup successfully and you can see the detailed information in the interface.
5bd82322da9a0.png
DOWNLOAD
How to use Soft AP function – [Download PDF]

<u>Manuals+,</u>