

N300RT Repeater Settings

Contents

- [1 N300RT Repeater Settings](#)
- [2 Application introduction:](#)
- [3 Settings](#)
- [4 DOWNLOAD](#)
- [5 Related Posts](#)

N300RT Repeater Settings

It is suitable for: **N100RE, N150RH, N150RT, N151RT, N200RE, N210RE, N300RT, N301RT , N300RH, N302R Plus**

Application introduction:

Solution about how to set repeater mode on TOTOLINK products.

Settings

STEP-1:

Connect your computer to the router by cable or wireless, then login the router by entering `http://192.168.0.1` into the address bar of your browser.




Note: The default access address varies depending on the actual situation. Please find it on the bottom label of the product.


STEP-2:

User Name and Password are required, by default both are **admin** in lowercase letter. Click **LOGIN**.

USER LOGIN

[Forget Password?](#)

 User Name

 Password

LOGIN

STEP-3:

Please go to **Operation Mode** -> **Repeater (Extender)**, then Click **Apply/Next**.

TOTO LINK

The Smartest Network Device

The Smartest Network Device

RebootHelp

Status

Operation Mode 1

Network +

IPv6 Network +

Wireless +

System +

Operation Mode

Operation Mode Help

Router Mode

In this mode, the device is supposed to connect to the internet via ADSL/Cable modem. The WAN type can be setup on WAN page, including PPPOE, DHCP Client, PPTP Client, L2TP Client and Static IP.

2 Repeater(Extender)

This mode extends your existing wireless network to wider coverage. You can access the Internet by wireless or wired connection to the device

AP Mode

Combine two local networks via wireless connection. You can only connect to the device by cable.

WISP Mode

In this mode, the device connect to WISP Station wirelessly through PPPOE/DHCP Client/PPTP Client/L2TP Client/Static IP WAN types. You are able to share Internet via local wireless and wired network

3 Apply/Next>>

STEP-4:

Firstly select **Scan**, then select **host router's SSID** and input **Password** of the **host router's SSID**, then select **Change SSID and Password** to input **SSID** and **Password** you want to fill in, then Click **Connect**.

Status

Operation Mode

Network

IPv6 Network

Wireless

System

Wireless Repeater

Repeater SSID

TOTOLINK_Test_TP

Password

88888888

Change SSID and Password

☒

Network Name(SSID)

TOTOLINK

Password

12345678

length range is 8-63)

<<Back

Connect

1 Scan

SSID	BSSID	Channel	Type	Encrypt	Signal	Select
龙8下	88:36:6c:82:a6:d8	11 (B+G+N)	AP	WPA-PSK/WPA2-PSK	100	<input type="radio"/>
qwer	64:e5:99:51:3f:20	6 (B+G+N)	AP	WPA-PSK/WPA2-PSK	100	<input type="radio"/>
TOTOLINK_Test_TP	64:09:80:44:1f:95	2 (B+G+N)	AP	WPA-PSK/WPA2-PSK	90	<input checked="" type="radio"/>
iptime001	90:9f:33:d3:76:9e	11 (B+G+N)	AP	WPA2-PSK	90	<input type="radio"/>
Beautiful	88:36:6c:88:ff:80	1 (B+G+N)	AP	WPA-PSK/WPA2-PSK	86	<input type="radio"/>
hp123456789	88:36:6c:ff:ff:fc	3 (B+G+N)	AP	WPA2-PSK	82	<input type="radio"/>
MERCURY_1B1F	bc:5f:f6:1d:1b:1f	7 (B+G+N)	AP	no	82	<input type="radio"/>
Aomg-2.4	64:e5:99:22:4f:f4	9 (B+G+N)	AP	WPA-PSK/WPA2-PSK	82	<input type="radio"/>

PS: After completing the above operation, please re-connect your SSID after 1 minute or so. If the Internet is available it means that the settings are successful. Otherwise, please re-set the settings again

DOWNLOAD

N300RT Repeater Settings – [[Download PDF](#)]