Home » Support » N600R PPPoE DHCP static IP settings 1

# **N600R PPPoE DHCP static IP settings**

# Contents

- 1 N600R PPPoE DHCP static IP settings
- 2 DOWNLOAD
- **3 Related Posts**

 
### N600R PPPoE DHCP static IP settings

It is suitable for: N600R, A800R, A810R, A3100R, T10, A950RG, A3000RU

**Application introduction:** Solution about how to configure Internet mode with PPPoE ,Static IP and DHCP for TOTOLINK products

#### STEP-1:

Connect your computer to the router by cable or wireless, then login the router by entering http://192.168.0.1 into the address bar of your browser.




Note:The default access address varies depending on the actual situation. Please find it on the bottom label of the product.

#### STEP-2:

User Name and Password are required, by default both are admin in lowercase letter. Click LOGIN.


#### **USER LOGIN**

The server 192.168.0.1 requires a username and password.

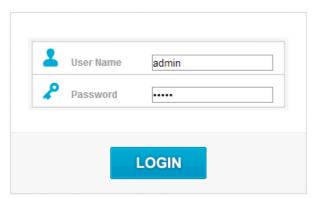


#### STEP-3.1.1: Easy Setup DHCP setting

The Easy Setup page will turn up for basic and quick setting Select **DHCP** as **WAN Connection Type**, then Click **Apply**.

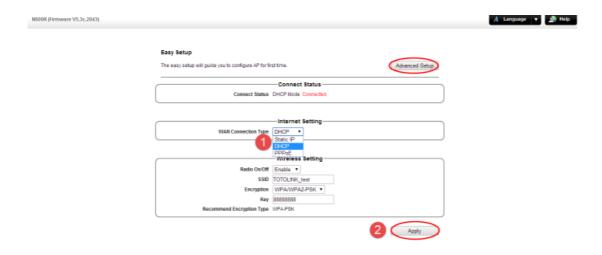


## STEP-3.1.2: Advanced Setup DHCP setting

Please go to **Network ->WAN Setting** page, and check which you have selected. Select **DHCP Client** as **WAN Type**, then Click **Apply**.

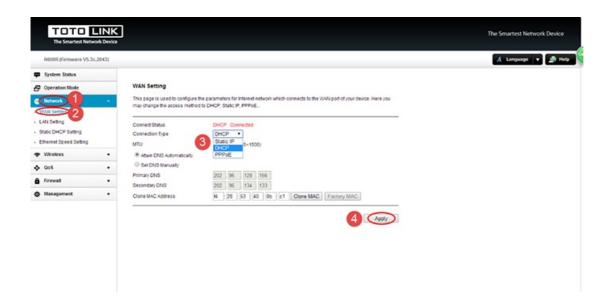

STEP-3.2.1: Easy Setup Static IP setting


The **Easy Setup** page will turn up for basic and quick setting Selecting **Static IP** as **WAN Connection Type** and input your information about **Static IP** which you want to fill in .Then Click **Apply** 

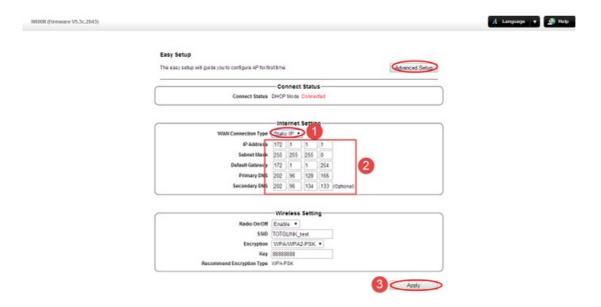

STEP-3.2.2: Advanced Setup Static IP setting


Please go to **Network ->WAN Setting** page, and check which you have selected.

Select **Static IP** as **WAN Type** and input your information about **Static IP** which you want to fill in .Then Click **Apply** 

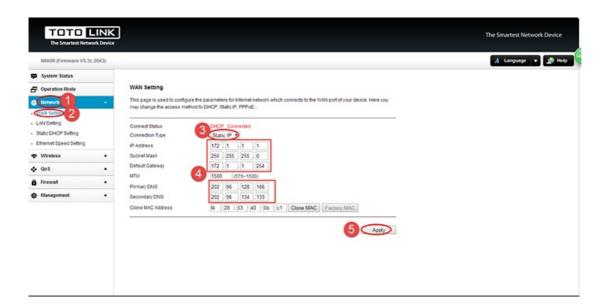

STEP-3.3.1: Easy Setup PPPOE setting


The **Easy Setup** page will turn up for basic and quick setting ,Select **PPPoE** as **WAN Type** and input your PPPoE username and password which are provided by your ISP. Then Click **Apply** 

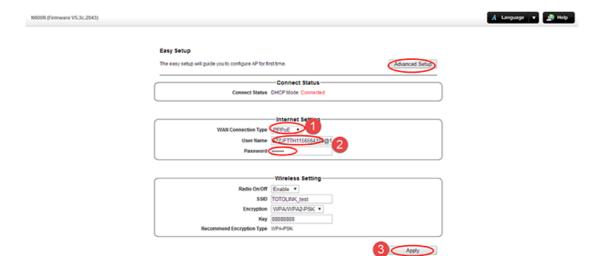

# STEP-3.3.2: Advanced Setup PPPOE setting

Please go to Network -> WAN Setting page, and check which you have selected.

Select **PPPoE** as **WAN Type** and input your PPPoE username and password which are provided by your ISP. Then Click **Apply** 

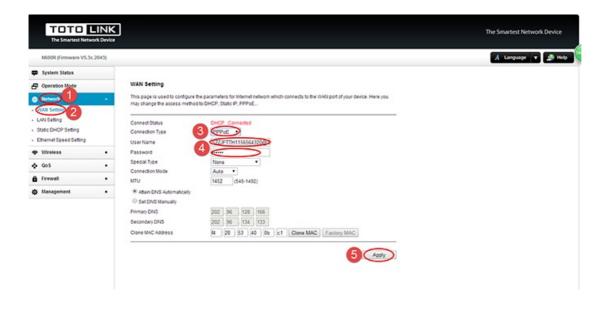

#### **DOWNLOAD**

N600R PPPoE DHCP static IP settings – [Download PDF]

Manuals+,