

N600R QOS settings

Contents

- [1 N600R QOS settings](#)
- [2 Application introduction:](#)
- [3 DOWNLOAD](#)
- [4 Related Posts](#)

N600R QOS settings

It is suitable for: **N600R, A800R, A810R, A3100R, T10, A950RG, A3000RU**

Application introduction:

Solution about how to configure QoS on TOTOLINK products.

STEP-1:

Connect your computer to the router by cable or wireless, then login the router by entering http://192.168.0.1 into the address bar of your browser.

5bdb7c48b53a.png


Note: The default access address varies depending on the actual situation. Please find it on the bottom label of the product.


STEP-2:

User Name and Password are required, by default both are **admin** in lowercase letter. Click **LOGIN**.

USER LOGIN

The server 192.168.0.1 requires a username and password.

 User Name

 Password

LOGIN

STEP-3:

Please go to **Qos** ->**Qos** page, and check which you have selected. Select **Enable**, then Input **Total Uplink Bandwidth** and **Total Downlink Bandwidth**, then Click **Apply**.

You can fill in **IP Address** and **Total Uplink Bandwidth** and **Total Downlink Bandwidth** you want to restrain, then Click **Apply**.

N600R (Firmware V5.3c.6817)

System Status

Operation Mode

Network

Wireless

QoS

Firewall

Management

QoS

This page is used to set Quality of Service.

On/Off

2 Enable

Total Uplink Bandwidth

3 100000

(100-100000Kbps)

Total Downlink Bandwidth

100000

(100-100000Kbps)

4

Apply

Add a rule

IP Address

192 168 0

5

Scan

Uplink Bandwidth

6

(100-100000Kbps)

Downlink Bandwidth

(100-100000Kbps)

Comment

7

Add

Current Qos List (The maximum entry count is 10)

ID	IP Address	Uplink Bandwidth	Downlink Bandwidth	Comment	Select
----	------------	------------------	--------------------	---------	--------

Delete

Clear

DOWNLOAD

